# List of paired mobile phones

All mobile phones that are paired are displayed in a list. The mobile phone, which is at the top of the list, has the highest priority and the vehicle will try to connect to this device first. If the device is not available, the vehicle will proceed with the next device at the list.

You can alter the order in which the mobile phones are displayed at the list. You cannot operate your mobile phone via the vehicle while this list is being displayed.

1. Press the button to call up the start menu

#### MENU

- 2. Call up i menu by pressing the controller
- Select "Communication settings" and press the controller
- 4. Select "Bluetooth" and press the controller
- 5. Select "Phone" and press the controller



 Select the desired mobile phone and press the controller



Select "Move device up" and press the controller.
 The mobile phone selected is moved one place up the list.


## Deleting mobile phone in the vehicle

If you no longer wish to operate a mobile phone via the vehicle, you can delete it from the list.


1. Press the button to call up the start menu

#### MENU

- 2. Call up i menu by pressing the con-troller
- 3. Select "Communication settings" and press the controller
- 4. Select "Bluetooth" and press the controller
- 5. Select "Phone" and press the controller
- Select the desired mobile phone and press the controller

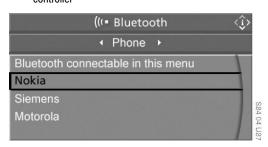

Select "Delete device" and press the controller.
 The mobile phone is deleted from the list.
 The phone book entries that you have transferred from the mobile phone to your vehicle are now also deleted.

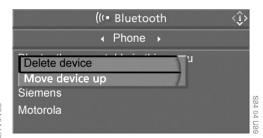

# **De-activating Bluetooth connection**


If the Bluetooth connection is de-activated, you can no longer operate the mobile phone via the vehicle.

To de-activate the Bluetooth connection between your vehicle and your mobile phone temporarily:

- Take the mobile phone out of the cradle and switch it off
- 2. Press the button to call up the start menu

### MENU

- 3. Select the i menu and press the controller
- 4. Select "Communication settings" and press the controller
- 5. Select "Bluetooth" and press the controller
- 6. Select "Settings" and press the controller.
- Select "Bluetooth communication active" and press the controller to activate or deactivate the connection.

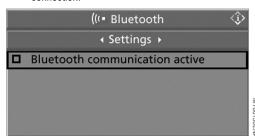

## Telephoning via the hands-free unit

A conversation that you started outside the car can be continued inside the car, via the hands-free unit.

Your mobile phone may switch automatically to the hands-free mode, depending on model and settings. To switch

Your mobile phone may switch automatically to the handsfree mode, depending on model and settings. To switch manually to hands free mode, you can use the portable phone (Please refer to your portable phone owners manual for more information) or the cradle button (dependent on the portable phone model).



Note: During the switching, the audio is muted. the switching can take several seconds.

To switch from hands free mode to privacy mode you can reroute the audio via your portable phone menu. Please refer to your portable phone owners for more information. You can continue the conversation that is being conducted via the hands-free unit after ignition is off. Bear in mind the car battery is no longer being charged.