

Last Modified: 04-28-2016	6.6 A	Doc ID: RM1000000006D19
Model Year Start: 2014	Model: IS200T	Prod Date Range: [04/2013 -]
Title: REAR SUSPENSION: REAR STABILIZER BAR: REMOVAL; 2014 - 2016 MY IS200T IS250 IS300 IS350 [04/2013 -]		

REMOVAL

PROCEDURE


1. REMOVE REAR WHEEL

2. REMOVE REAR STABILIZER LINK ASSEMBLY LH

- (a) Remove the 2 nuts and rear stabilizer link assembly LH.

HINT:

If the ball joint turns together with the nut, use a 6 mm hexagon socket wrench to hold the stud bolt.

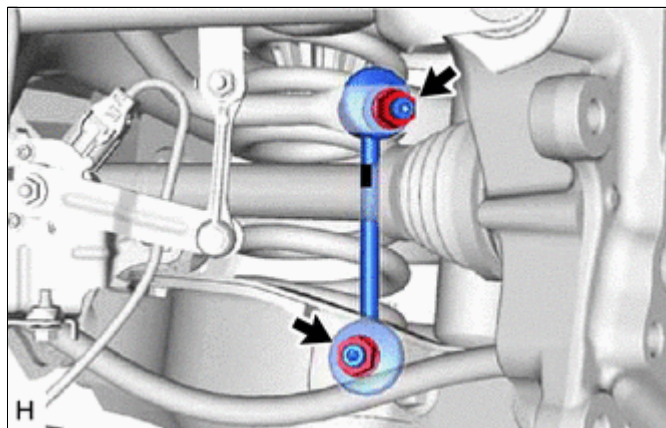

3. REMOVE REAR STABILIZER LINK ASSEMBLY RH

HINT:


Perform the same procedure as for the LH side.

4. REMOVE REAR SUSPENSION MEMBER SUB-ASSEMBLY

Click here [INFO](#)

5. REMOVE REAR STABILIZER BAR

- (a) Remove the 4 bolts, rear stabilizer bar, 2 rear No. 1 stabilizer bar brackets and 2 rear stabilizer bushings from the rear suspension member sub-assembly.

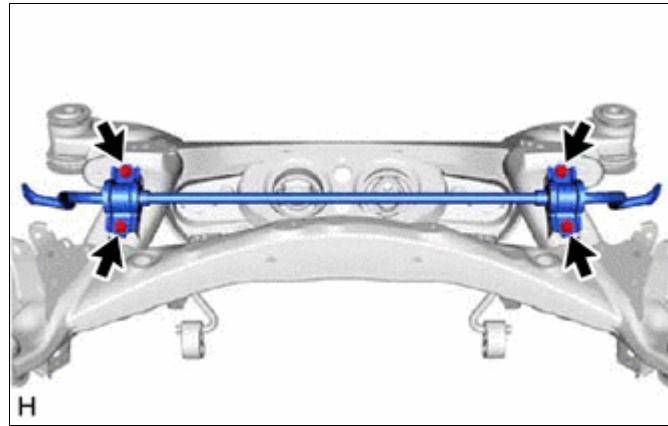

6. REMOVE REAR NO. 1 STABILIZER BAR BRACKET

(a) Remove the 2 rear No. 1 stabilizer bar brackets from the 2 rear stabilizer bushings.

7. REMOVE REAR STABILIZER BUSHING

(a) Remove the 2 rear stabilizer bushings from the rear stabilizer bar.

