

LEXUS													
R-01	99-05	IS-200/IS300	GXE10/JEC10	RS	RA	RH			ER	NA	NA	62-200-12	62-200-10
R-01	99-05	IS-200/IS300	GXE10/JEC10	RS	RA	RH			ER	NA	NA	62-200-14	62-200-12
R-02	06-12	IS-250	XE20	RS	RA	RH				NA	NA	62-220-10	62-220-8
R-03	98-05	GS-300	JZS160/161	RS	RA	RH				NA	NA	62-200-10	62-220-8
R-03	98-05	GS-300	JZS160/161	RS	RA	RH				NA	NA	62-200-10	62-220-8
R-04	95-00	LS400	UCF20	RS	RA	RH				NA	NA	62-200-12	62-220-8
R-04	95-00	LS400	UCF20	RS	RA	RH				NA	NA	62-180-12	62-220-8
R-05	93-97	GS-300	JZS147	RS	RA	RH				NA	NA	62-200-10	62-220-8
R-07	01-06	LS430	UCF30	RS	RA	RH				NA	NA	62-220-10	62-260-8