

## 2008 Lexus IS F

Submodel: | Engine Type: V8 | Liters: 5.0

Fuel Delivery: FI | Fuel: GAS

Last Modified: 2010-4-28 00:00:00

Model Year: 2008

Engine Family: 2UR-GSE

Title: 2UR-GSE COOLING: WATER PUMP: REMOVAL (2008 IS F)

A

Model: IS F

Body Type: 4Dr. Sedan


From:200712

Doc ID: RM000002S4T00GX

VDS: BP262


### REMOVAL

1. REMOVE ENGINE UNDER COVER
2. DRAIN ENGINE COOLANT [Click here for more information.](#)
3. REMOVE V-BANK COVER SUB-ASSEMBLY [Click here for more information.](#)
4. REMOVE COOL AIR INTAKE DUCT SEAL [Click here for more information.](#)
5. REMOVE NO. 1 AIR CLEANER INLET [Click here for more information.](#)
6. REMOVE ENGINE ROOM SIDE COVER RH [Click here for more information.](#)
7. REMOVE AIR CLEANER CAP SUB-ASSEMBLY [Click here for more information.](#)
8. REMOVE RADIATOR RESERVE TANK ASSEMBLY [Click here for more information.](#)
9. REMOVE V-RIBBED BELT [Click here for more information.](#)
10. DISCONNECT NO. 2 RADIATOR HOSE

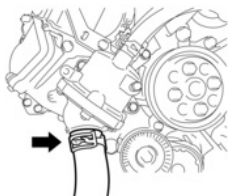


(a) Disconnect the No. 2 radiator hose from the water inlet housing.

11. DISCONNECT NO. 5 WATER BY-PASS HOSE

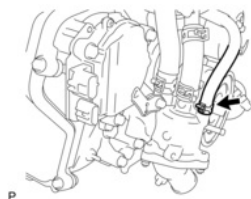


(a) Disconnect the No. 5 water by-pass hose from the water inlet housing.

12. DISCONNECT WATER INLET HOSE

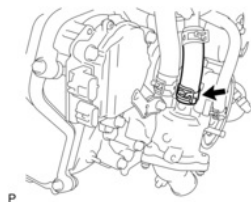


(a) Disconnect the water inlet hose from the water inlet housing.

13. DISCONNECT NO. 3 WATER BY-PASS HOSE

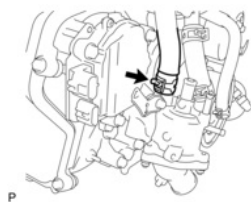

(a) Disconnect the No. 3 water by-pass hose from the water inlet housing.


14. REMOVE WATER INLET HOUSING

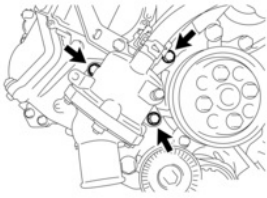

P

(a) Remove the 3 bolts, water inlet housing and gasket.

#### 15. REMOVE WATER PUMP PULLEY

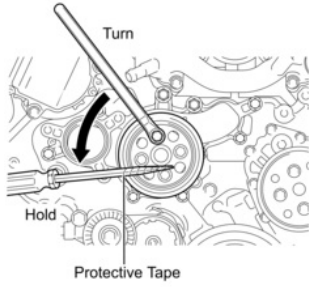

c


(a) Using a screwdriver or an equivalent, hold the water pump pulley.

HINT:

Tape the screwdriver tip before use to avoid damage.

(b) Remove the 4 bolts and water pump pulley.

#### 16. REMOVE WATER PUMP

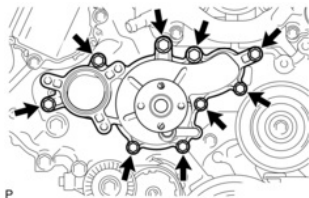

P

(a) Remove the 9 bolts, water pump and gasket.