

## 3-2. Using the audio system

### Audio system type

▶ With navigation system

Owners of models equipped with a navigation system should refer to the "Navigation System Owner's Manual".

▶ Without navigation system (type A)

CD player with changer and AM/FM radio



▶ Without navigation system (type B)

CD player with changer and AM/FM radio



## 3-2. Using the audio system

Title	Page
Using the radio	P. 210
Using the CD player	P. 218
Playing back MP3 and WMA discs	P. 225
Operating an iPod <sup>®</sup>	P. 233
Operating a USB memory	P. 241
Optimal use of the audio system	P. 250
Using the AUX adapter	P. 252
Using the steering wheel audio switches	P. 254

**n Using cellular phones**

Interference may be heard through the audio system's speakers if a cellular phone is being used inside or close to the vehicle while the audio system is operating.

**⚠ CAUTION****n For vehicles sold in U.S.A. and Canada****I Part 15 of the FCC Rules**

FCC Warning:

Any unauthorized changes or modifications to this equipment will void the user's authority to operate this device.

**I Laser products**

- Do not take this unit apart or attempt to make any changes yourself.

This is an intricate unit that uses a laser pickup to retrieve information from the surface of compact discs. The laser is carefully shielded so that its rays remain inside the cabinet. Therefore, never try to disassemble the player or alter any of its parts since you may be exposed to laser rays and dangerous voltages.

- This product utilizes a laser.

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

**⚠ NOTICE****n To prevent battery discharge**

Do not leave the audio system on longer than necessary with the engine off.


**n To avoid damaging the audio system**

Take care not to spill drinks or other fluids over the audio system.


## 3-2. Using the audio system

### Using the radio


#### ▶ Type A

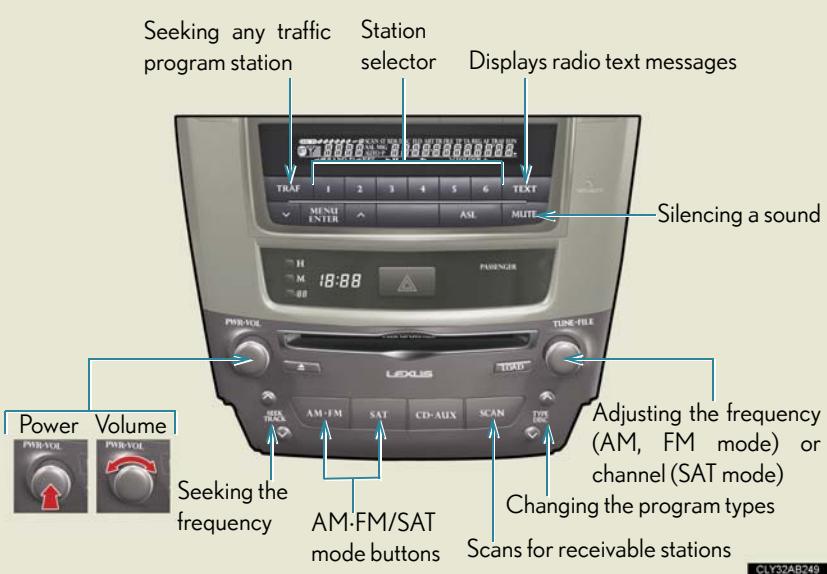

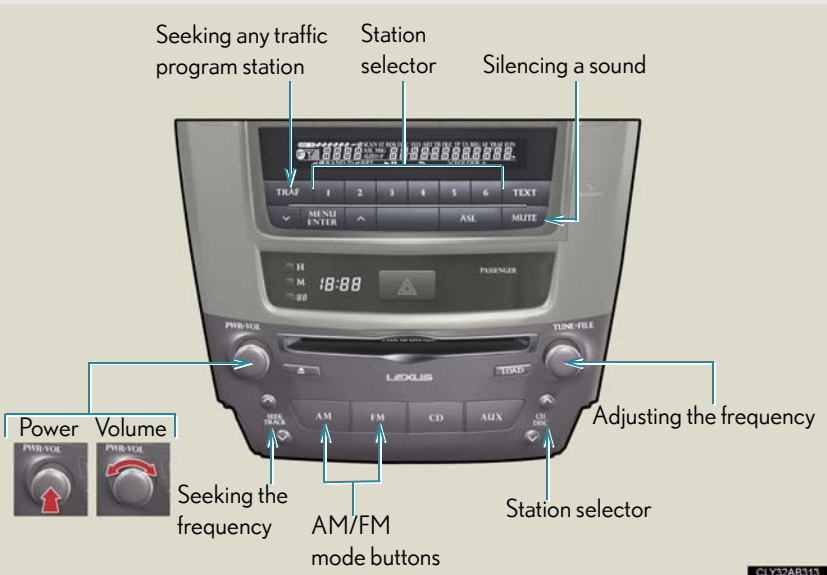

#### ▶ Type B



### Setting station presets (excluding XM<sup>®</sup> Satellite Radio)

**STEP 1** Search for desired stations by turning  or pressing “^” or




**STEP 2** Press and hold the button (from  to ) the station is to be set to until you hear a beep.

### Scanning radio stations (excluding XM<sup>®</sup> Satellite Radio) (type A)

#### n Scanning the preset radio stations

**STEP 1** Press and hold  until you hear a beep.


Preset stations will be played for 5 seconds each.

**STEP 2** When the desired station is reached, press  once again.

#### n Scanning all radio stations within range

**STEP 1** Press .


All stations with reception will be played for 5 seconds each.


**STEP 2** When the desired station is reached, press  once again.

## RDS (Radio Data System) (type A)

This feature allows your radio to receive station identification information and program information (classical, jazz, etc.) from radio stations which broadcast this information.



### n Receiving RDS broadcasts

**STEP 1** Press “^” or “v” on  during FM reception.

The type of program changes each time  is pressed.

- 1 “ROCK”
- 1 “EASYLIS” (Easy listening)
- 1 “CLS/JAZZ” (Classical music and Jazz)
- 1 “R & B” (Rhythm and Blues)
- 1 “INFORM” (Information)
- 1 “RELIGION”
- 1 “MISC” (Miscellaneous)
- 1 “ALERT” (Emergency messages)

If the system receives no RDS stations, “NO PTY” appears on the display.

**STEP 2** Press , or “^” or “v” on .

The radio seeks or scans the stations by the relevant program type.



### n Displaying radio station names

Press .

### n Displaying radio text messages

Press  twice.

If “MSG” shows in the display, a text message will be displayed.

If the text continues past the end of the display,  is displayed. Press and hold  until you hear a beep.

## XM<sup>®</sup> Satellite Radio (type A)


### n Receiving XM<sup>®</sup> Satellite Radio

**STEP 1** Press .



The display changes as follows each time  is pressed.

“SAT1” → “SAT2” → “SAT3”


**STEP 2** Turn  to select the desired channel in all categories or press

“^” or “v” on  to select the desired channel in the current category.

### n Setting XM<sup>®</sup> Satellite Radio channel presets

Select the desired channel. Press the button the channel is to be set to (from  to ) until you hear a beep.

### n Changing the channel category

Press “^” or “v” on .

### n Scanning XM<sup>®</sup> Satellite Radio channels

- 1 Scanning channels in the current category

**STEP 1** Press .

**STEP 2** When the desired channel is reached, press  again.

- 1 Scanning preset channels

**STEP 1** Press and hold  until you hear a beep.

**STEP 2** When the desired channel is reached, press  again.

### n Displaying text information

Press .

The display will show up to 10 characters.

The display changes as follows each time  is pressed.

- 1 CH NAME
- 1 TITLE (SONG/PROGRAM TITLE)
- 1 NAME (ARTIST NAME/FEATURE)
- 1 CH NUMBER



### n **When the battery is disconnected**

Station presets are erased.

### n **Reception sensitivity**

1 Maintaining perfect radio reception at all times is difficult due to the continually changing position of the antenna, differences in signal strength and surrounding objects, such as trains, transmitters, etc.

1 The radio antenna is mounted inside the rear window. To maintain clear radio reception, do not attach metallic window tinting or other metallic objects to the antenna wire mounted inside the rear window.

### n **XM<sup>®</sup> Satellite Radio**

An XM<sup>®</sup> Satellite Radio is a tuner designed exclusively to receive broadcasts provided under a separate subscription. Availability is limited to the 48 contiguous states and 10 Canadian provinces.

#### 1 XM<sup>®</sup> subscriptions


For detailed information about XM<sup>®</sup> Satellite Radio or to subscribe:  
U.S.A. —

Visit on the web at [www.xmradio.com](http://www.xmradio.com) or call 1-877-515-3987.

Canada —

Visit on the web at [www.xmradio.ca](http://www.xmradio.ca) or call 1-877-515-3987.

#### 1 Radio ID

You will need the radio ID when activating XM<sup>®</sup> service or reporting a problem. Select "CH000" using , and the receiver's 8-character ID number will appear.

#### 1 Satellite tuner

The tuner supports only Audio Services (Music and Talk) and the accompanying Text Information of XM<sup>®</sup> Satellite Radio.

### ■ If the satellite radio does not operate normally

If a problem occurs with the XM<sup>®</sup> tuner, a message will appear on the display. Refer to the table below to identify the problem, and take the suggested corrective action.

"ANTENNA"	The XM <sup>®</sup> antenna is not connected. Check whether the XM <sup>®</sup> antenna cable is attached securely.
	There is a short-circuit in the antenna or the surrounding antenna cable. See a Lexus certified dealer.
"UNAUTH"	You have not subscribed to the XM <sup>®</sup> Satellite Radio. The radio is being updated with the latest encryption code. Contact the XM <sup>®</sup> Satellite Radio for subscription information. When a contract is canceled, you can choose the "CH000" and all free-to-air channels.
	The premium channel you selected is not authorized. Wait for about 2 seconds until the radio returns to the previous channel or "CH001". If it does not change automatically, select another channel. If you want to listen to the premium channel, contact XM <sup>®</sup> Satellite Radio.
"NO SIGNAL"	The XM <sup>®</sup> signal is too weak at the current location. Wait until your vehicle reaches a location with a stronger signal.
"LOADING"	The unit is acquiring audio or program information. Wait until the unit has received the information.
"OFF AIR"	The channel you selected is not broadcasting any programming. Select another channel.
"----"	There is no song/program title or artist name/feature associated with the channel at that time. No action needed.

“CH UNAVL”

The channel you selected is no longer available. Wait for about 2 seconds until the radio returns to the previous channel or “CH001”. If it does not change automatically, select another channel.

Contact the XM<sup>®</sup> Listener Care Center at 1-877-515-3987.

#### n **Certifications for the radio tuner**


This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by trying one or more of the following:


- 1 Reorienting or relocate the receiving antenna.
- 1 Increasing the separation between the equipment and receiver.
- 1 Connecting the equipment into an outlet on a circuit different from that to which the receiver is connected.
- 1 Consulting the dealer or an experienced radio/TV technician for help.

## 3-2. Using the audio system Using the CD player

### ▶ Type A

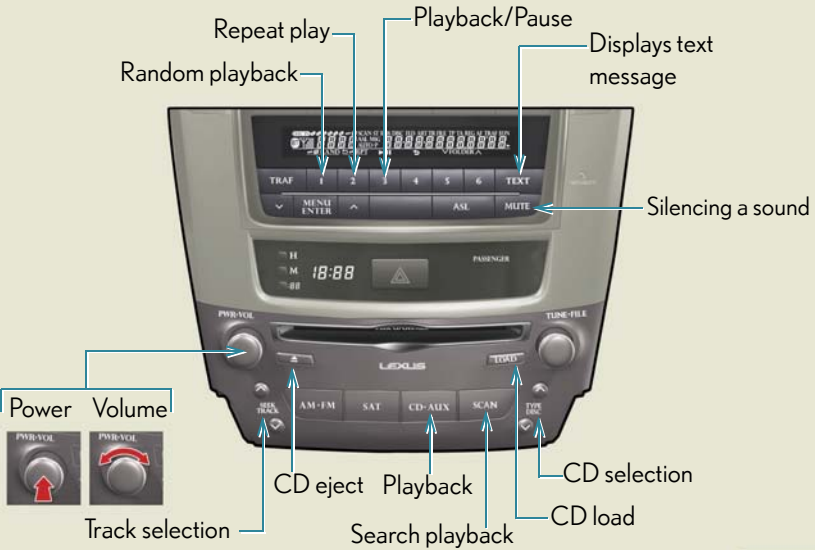

### ▶ Type B

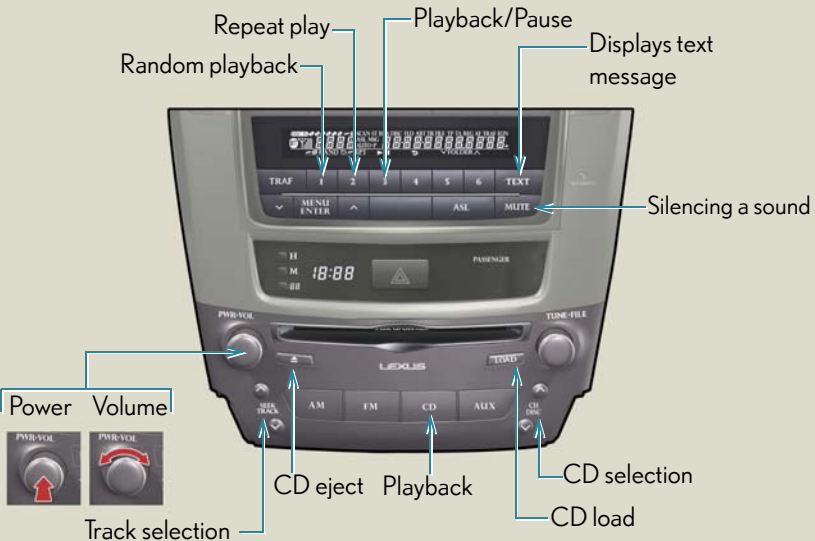

## Loading CDs

### n Loading a CD

**STEP 1** Push .

“WAIT” is shown on the display.

**STEP 2** Insert a CD when the indicator on the slot turns from amber to green.

The display changes from “WAIT” to “LOAD”.

### n Loading multiple CDs

**STEP 1** Press and hold  until you hear a beep.

“WAIT” is shown on the display.


 
**STEP 2** Insert a CD when the indicator on the slot turns from amber to green.

The display changes from “WAIT” to “LOAD”.

The indicator on the slot turns to amber when the CD is inserted.


**STEP 3** Insert the next CD when the indicator on the slot turns from amber to green again.


Repeat the procedure for the remaining CDs.

To stop the operation, press  or .

## Ejecting CDs

### n Ejecting a CD

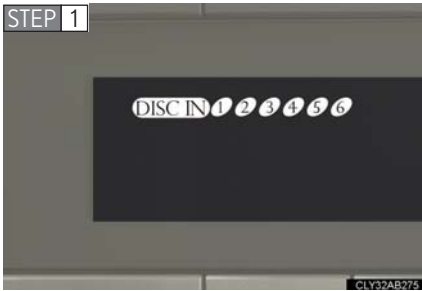


To select the CD to be ejected, press “^” or “v” on  or



The number of the CD selected is shown on the display.


**STEP 2** Press  and remove the CD.


### n Ejecting all the CDs

 Press and hold  until you hear a beep, and then remove the CDs.

## Selecting, fast-forwarding, reversing and scanning tracks

### n Selecting a track

Press “^” to move up and “v” to move down using  until the desired track number is displayed.

To fast forward or reverse, press and hold “^” or “v” on  until you hear a beep.

### n Scanning a CD (type A)

**STEP 1** Press .

The first ten seconds of each track will be played.

**STEP 2** Press  again when the desired track is reached.

## Selecting a CD

### n To select a CD to play

To select the desired CD, press “^” or “v” on




or

### n To scan loaded CDs (type A)

**STEP 1** Press and hold  until you hear a beep.

The first ten seconds of the first track on each CD will be played.

**STEP 2** Press  again when the desired CD is reached.

## Random playback

### n Current CD

Press  (RAND).

### n All CDs

Press and hold  (RAND) until you hear a beep.

## Repeat play


### n To repeat a track

Press  (RPT).

### n To repeat all of the tracks on a CD


Press and hold  (RPT) until you hear a beep.

## Playing and pausing tracks

To play or pause a track, press  (▶||).

## Switching the display

Press .

Each time  is pressed, the display changes in the order of Track no./ Elapsed time → CD title → Track title.

### Display

Up to 12 characters can be displayed at a time.

If there are 13 characters or more, pressing and holding **TEXT** until you hear a beep will display the remaining characters.

A maximum of 24 characters can be displayed.

If **TEXT** is pressed until you hear a beep again or has not been pressed for 6 seconds or more, the display will return to the first 12 characters.

Depending on the contents recorded, the characters may not be displayed properly or may not be displayed at all.

### Canceling random, repeat and scan playback

Press **1** (RAND), **2** (RPT), **SCAN** again.

### When “LOAD”, “ERROR” or “WAIT” is shown on the display

“LOAD”: This indicates that the CD player has completed loading the CD.

“ERROR”: This indicates a trouble either in the CD or inside the player. The CD may be dirty, damaged, or inserted up-side down.

“WAIT”: Operation is stopped due to a high temperature inside the player. Wait for a while and then press **CD-ADD** or **CD**. Contact your Lexus dealer if the CD still cannot be played back.

### Discs that can be used

Discs with the marks shown below can be used.

Playback may not be possible depending on recording format or disc features, or due to scratches, dirt or deterioration.



CDs with copy-protection features may not play correctly.



n **CD player protection feature**

To protect the internal components, playback is automatically stopped when a problem is detected.

n **If CDs are left inside the CD player or in the ejected position for extended periods**

CDs may be damaged and may not play properly.

n **Lens cleaners**

Do not use lens cleaners. Doing so may damage the CD player.


 **NOTICE**

n **CDs and adapters that cannot be used**

Do not use the following types of CDs, 3 in. (8 cm) CD adapters or Dual Disc. Doing so may damage the CD player and/or the CD insert/eject function.



- 1 CDs that have a diameter that is not 4.7 in. (12 cm).

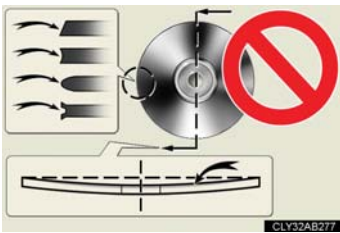

- 1 Low-quality and deformed CDs.

 NOTICE



! CDs with a transparent or translucent recording area.



! CDs that have had tape, stickers or CD-R labels attached to them, or that have had the label peeled off.

**n CD player precautions**

Failure to follow the precautions below may result in serious damage to the CDs or the player itself.

- ! Do not insert anything other than CDs into the CD slot.
- ! Do not apply oil to the CD player.
- ! Store CDs away from direct sunlight.
- ! Never try to disassemble any part of the CD player.




! Do not insert more than one CD at a time.


## 3-2. Using the audio system

# Playing back MP3 and WMA discs

### ▶ Type A

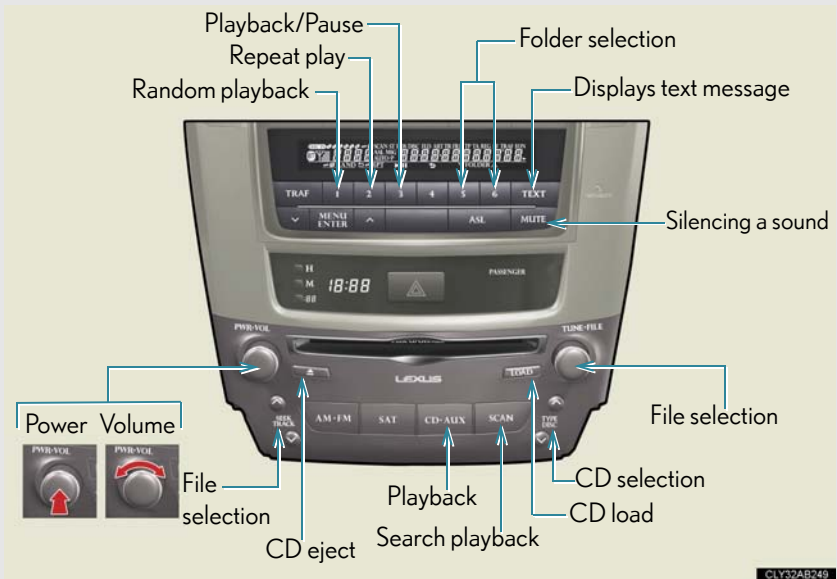

### ▶ Type B

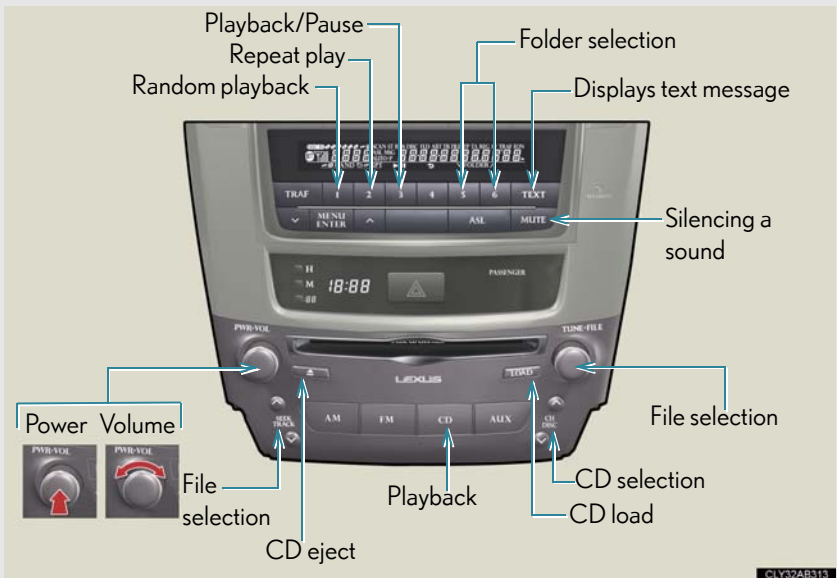

### Loading and ejecting MP3 and WMA discs



→P. 219, 220

### Selecting MP3 and WMA discs



→P. 221

### Selecting a folder


#### n Selecting folders one at a time

Press  (^) or  (v) to select the desired folder.


#### n Selecting the desired folder by cueing the first file of each folder (type A)

Press and hold  until you hear a beep. When the desired folder is reached, press  once again.

#### n Returning to the first folder



Press and hold  (v) until you hear a beep.

### Fast-forwarding and reversing files

To fast-forward or reverse, press and hold “^” or “v” on  until you hear a beep.


## Selecting and scanning files

### n Selecting one file at a time

Turn  or press “^” or “v” on  to select the desired file.

### n Selecting the desired file by cueing the files in the folder (type A)

Press .

When the desired file is reached, press  once again.

## Repeat play

### n Repeating a file

Press  (RPT).

### n Repeating all of the files in a folder

Press and hold  (RPT) until you hear a beep.

## Random playback


### n To play files from a particular folder in random order

Press  (RAND).

### n To play all of the files on a disc in random order

Press and hold  (RAND) until you hear a beep.

## Playing and pausing files

To play or pause a file, press  (▶||).

## Switching the display

Press **TEXT**.

Each time **TEXT** is pressed, the display changes in the order of Folder no./ File no./Elapsed time → Folder name → File name → Album title (MP3 only) → Track title → Artist name.

---

### Display

Up to 12 characters can be displayed at a time.

If there are 13 characters or more, pressing and holding **TEXT** until you hear a beep will display the remaining characters.

A maximum of 24 characters can be displayed.

If **TEXT** is pressed until you hear a beep again or has not been pressed for 6 seconds or more, the display will return to the first 12 characters.

Depending on the contents recorded, the characters may not be displayed properly or may not be displayed at all.

### Canceling random, repeat and scan playback

Press **1** (RAND), **2** (RPT), **SCAN** again.

### When "LOAD", "ERROR", "WAIT" or "NO MUSIC" is shown on the display

"LOAD": This indicates that the CD player has completed loading the CD.

"ERROR": This indicates a trouble either in the CD or inside the player. The CD may be dirty, damaged, or inserted up-side down.

"WAIT": Operation is stopped due to a high temperature inside the player. Wait for a while and then press **TEXT** or **STOP**. Contact your Lexus dealer if the CD still cannot be played back.

"NO MUSIC": This indicates that the MP3/WMA file is not included in the CD.

### n Discs that can be used

Discs with the marks shown below can be used.

Playback may not be possible depending on recording format or disc features, or due to scratches, dirt or deterioration.



### n CD player protection feature

To protect the internal components, playback is automatically stopped when a problem is detected while the CD player is being used.

### n If CDs are left inside the CD player or in the ejected position for extended periods

CDs may be damaged and may not play properly.

### n Lens cleaners

Do not use lens cleaners. Doing so may damage the CD player.

### n MP3 and WMA files

MP3 (MPEG Audio LAYER 3) is a standard audio compression format.

Files can be compressed to approximately 1/10 of their original size by using MP3 compression.

WMA (Windows Media™ Audio) is a Microsoft audio compression format.

This format compresses audio data to a size smaller than that of the MP3 format.

There is a limit to the MP3 and WMA file standards and to the media/formats recorded by them that can be used.

#### 1 MP3 file compatibility

- Compatible standards  
MP3 (MPEG1 LAYER3, MPEG2 LSF LAYER3)
- Compatible sampling frequencies  
MPEG1 LAYER3: 32, 44.1, 48 (kHz)  
MPEG2 LSF LAYER3: 16, 22.05, 24 (kHz)
- Compatible bit rates (compatible with VBR)  
MPEG1 LAYER3: 64, 80, 96, 112, 128, 160, 192, 224, 256, 320 (kbps)  
MPEG2 LSF LAYER3: 64, 80, 96, 112, 128, 144, 160 (kbps)
- Compatible channel modes: stereo, joint stereo, dual channel and monaural

### I WMA file compatibility

- Compatible standards  
WMA Ver. 7, 8, 9
- Compatible sampling frequencies  
32, 44.1, 48 (kHz)
- Compatible bit rates (only compatible with 2-channel playback)  
Ver. 7, 8: CBR 48, 64, 80, 96, 128, 160, 192 (kbps)  
Ver. 9: CBR 48, 64, 80, 96, 128, 160, 192, 256, 320 (kbps)

### I Compatible media

Media that can be used for MP3 and WMA playback are CD-Rs and CD-RWs.

Playback in some instances may not be possible, depending on the status of the CD-R or CD-RW. Playback may not be possible or the audio may jump if the disc is scratched or marked with fingerprints.

### I Compatible disc formats

The following disc formats can be used.

- Disc formats: CD-ROM Mode 1 and Mode 2  
CD-ROM XA Mode 2, Form 1 and Form 2
- File formats: ISO9660 Level 1, Level 2, (Romeo, Joliet)  
MP3 and WMA files written in any format other than those listed above may not play correctly, and their file names and folder names may not be displayed correctly.

Items related to standards and limitations are as follows.

- Maximum directory hierarchy: 8 levels
- Maximum length of folder names/file names: 32 characters
- Maximum number of folders: 192 (including the root)
- Maximum number of files per disc: 255

### I File names

The only files that can be recognized as MP3/WMA and played are those with the extension .mp3 or .wma.

### I Multi-sessions

As the audio system is compatible with multi-sessions, it is possible to play discs that contain MP3 and WMA files. However, only the first session can be played.



### 1 ID3 and WMA tags

ID3 tags can be added to MP3 files, making it possible to record the track title, artist name, etc.

The system is compatible with ID3 Ver. 1.0, 1.1, and Ver. 2.2, 2.3 ID3 tags. (The number of characters is based on ID3 Ver. 1.0 and 1.1.)

WMA tags can be added to WMA files, making it possible to record the track title and artist name in the same way as with ID3 tags.

### 1 MP3 and WMA playback

When a disc containing MP3 or WMA files is inserted, all files on the disc are first checked. Once the file check is finished, the first MP3 or WMA file is played. To make the file check finish more quickly, we recommend you do not write in any files other than MP3 or WMA files or create any unnecessary folders.

Discs that contain a mixture of music data and MP3 or WMA format data cannot be played.

### 1 Extensions

If the file extensions .mp3 and .wma are used for files other than MP3 and WMA files, they will be mistakenly recognized and played as MP3 and WMA files. This may result in large amounts of interference and damage to the speakers.

### 1 Playback

- To play MP3 file with steady sound quality, we recommend a fixed bit rate of 128 kbps and a sampling frequency of 44.1 kHz.
- CD-R or CD-RW playback may not be possible in some instances, depending on the characteristics of the disc.
- There is a wide variety of freeware and other encoding software for MP3 and WMA files on the market, and depending on the status of the encoding and the file format, poor sound quality or noise at the start of playback may result. In some cases, playback may not be possible at all.
- When files other than MP3 or WMA files are recorded on a disc, it may take more time to recognize the disc and in some cases, playback may not be possible at all.
- Microsoft, Windows, and Windows Media are registered trademarks of Microsoft Corporation in the U.S.A. and other countries.

### NOTICE

#### n **CDs and adapters that cannot be used**

→P. 223

#### n **CD player precautions**

→P. 224


## 3-2. Using the audio system

### Operating an iPod®

Connecting an iPod® enables you to enjoy music from the vehicle speakers.

#### n Connecting an iPod®

STEP 1

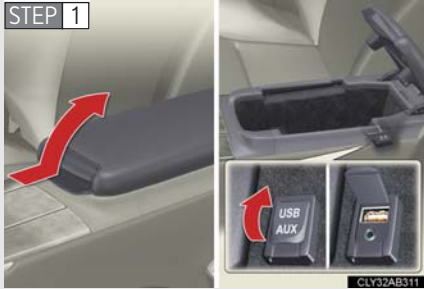

Open the cover and connect the portable audio device.

#### ► Type A


STEP 2



Press  .

#### ► Type B


STEP 2

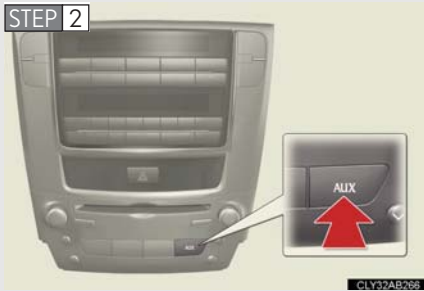

Press  .


n **Control panel**

► **Type A**

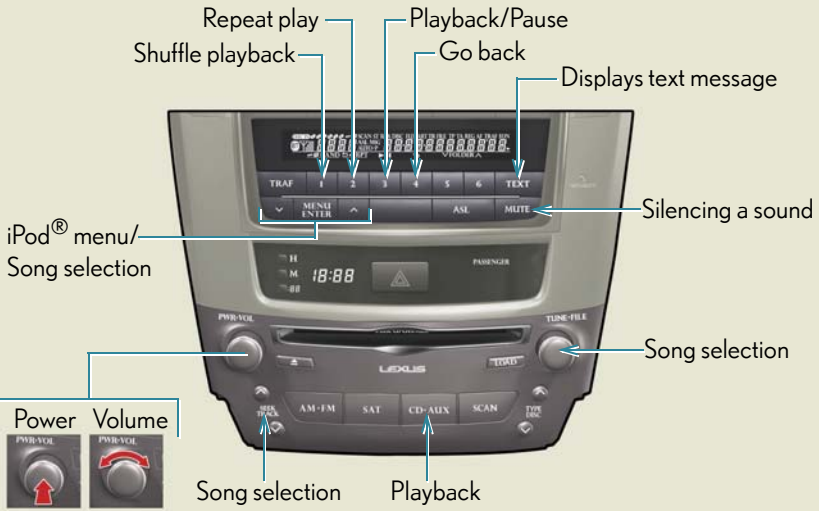

CLY32AB249

## ▶ Type B

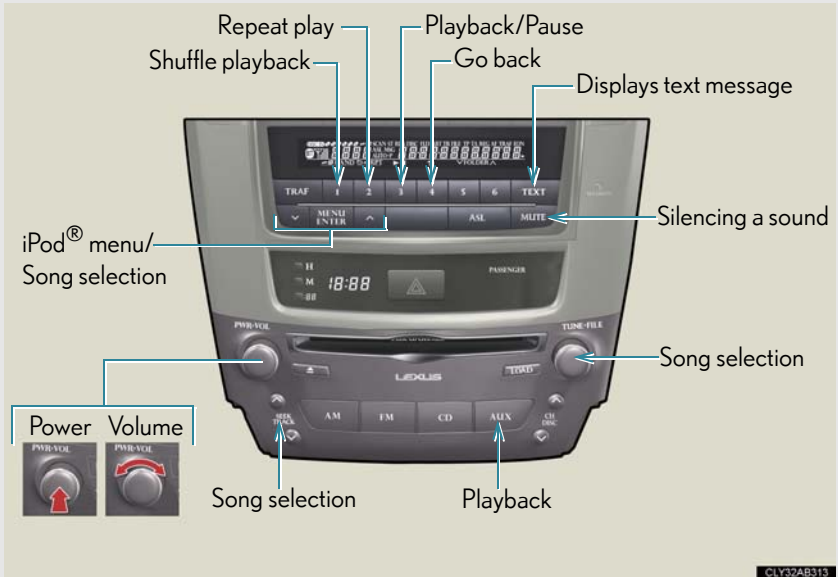

### Selecting a play mode

**STEP 1** Press **MENU ENTER** to select iPod® menu mode.

**STEP 2** Pressing **▼** or **▲** changes the play mode in the following order:



“PLAYLISTS”→“ARTISTS”→“ALBUMS”→“SONGS”→  
 “PODCASTS”→“GENRES”→“COMPOSERS”→  
 “AUDIOBOOKS”


**STEP 3** Press **MENU ENTER** to select the desired play mode.


## n Play mode list

Play mode	First selection	Second selection	Third selection	Fourth selection
"PLAYLISTS"	Playlists select	Songs select	-	-
"ARTISTS"	Artists select	Albums select	Songs select	-
"ALBUMS"	Albums select	Songs select	-	-
"SONGS"	Songs select	-	-	-
"PODCASTS"	Albums select	Songs select	-	-
"GENRES"	Genre select	Artists select	Albums select	Songs select
"COMPOSERS"	Composers select	Albums select	Songs select	-
"AUDIOBOOKS"	Songs select	-	-	-

## n Selecting a list



**STEP 1** Press  or  to display the first selection list.

**STEP 2** Press  to select the desired item.

Pressing  changes to the second selection list.

**STEP 3** Repeat the same procedure to select the desired item.



To return to the previous selection list, select "GO BACK" or press

 (  ).


## Selecting songs

Turn  or press “^” or “v” on  to select the desired song.



## Playing and pausing songs

To play or pause a song, press  (  ).

## Fast-forwarding and rewinding songs

To fast-forward or rewind, press and hold “^” or “v” on  until you hear a beep.

## Shuffle playback


- n **Playing songs from one playlist or album in random order**  
Press  (RAND).
- n **Playing songs from all the playlists or albums in random order**  
Press and hold  (RAND) until you hear a beep.

## Repeat play


Press  (RPT).


## Switching the display

Press .

Each time  is pressed, the display changes in the order of Elapsed time → Album title → Track title → Artist name.

## Adjusting sound quality and volume balance

**STEP 1** Press  to enter iPod® menu mode.

**STEP 2** Pressing  changes sound modes. (→P. 251)

### n About iPod®

iPod is a registered trademark of Apple Inc.

### n iPod® functions

- 1 When an iPod® is connected and the audio source is changed to iPod® mode, the iPod® will resume play from the same point in which it was last used.
- 1 Depending on the iPod® that is connected to the system, certain functions may not be available. If a function is unavailable due to a malfunction (as opposed to a system specification), disconnecting the device and reconnecting it once again may resolve the problem.
- 1 While connected to the system, the iPod® cannot be operated with its own controls. It is necessary to use the controls of the vehicle's audio system instead.

### n iPod® problems

To resolve most problems encountered when using your iPod®, disconnect your iPod® from the vehicle iPod® connection and reset it.

For instructions on how to reset your iPod®, refer to your iPod® Owner's Manual.



## n Display

Up to 12 characters can be displayed at a time.

If there are 13 characters or more, pressing and holding **TEXT** until you hear a beep will display the remaining characters.

A maximum of 24 characters can be displayed.

If **TEXT** is pressed until you hear a beep again or has not been pressed for 6 seconds or more, the display will return to the first 12 characters.

Depending on the contents recorded, the characters may not be displayed properly or may not be displayed at all.

## n Canceling shuffle and repeat playback

Press **1** (RAND) or **2** (RPT) again.

## n Error messages

“ERROR”: This indicates a problem in the iPod® or its connection.

“NO MUSIC”: This indicates that there is no music data in the iPod®.

“EMPTY”: This indicates that some available songs are not found in a selected playlist.

“UPDATE”: This indicates that the version of the iPod® is not compatible. Upgrade your iPod® software to the latest version.

## n Compatible models

1 iPod® 5th generation Ver. 1.2 or later

1 iPod® nano 3rd generation Ver. 1.0 or later

1 iPod® nano 2nd generation Ver. 1.1.2 or later

1 iPod® nano Ver. 1.3 or later

1 iPod® touch Ver. 1.1 or later

1 iPod® classic Ver. 1.0 or later


iPhone®, iPod® mini, iPod® shuffle, iPod® photo and 4th generation and earlier models of iPod® are not compatible with this system.

Items related to standards and limitations are as follows:

1 Maximum number of lists in device: 9999

1 Maximum number of songs in device: 65535

1 Maximum number of songs per list: 65535

 CAUTION

**n Caution while driving**

Do not connect iPod® or operate the controls.

 NOTICE

**n To prevent damage to iPod®**

- I** Do not leave iPod® in the vehicle. The temperature inside the vehicle may become high, resulting in damage to the player.
- I** Do not push down on or apply unnecessary pressure to the iPod® while it is connected as this may damage the iPod® or its terminal.
- I** Do not insert foreign objects into the port as this may damage the iPod® or its terminal.

## 3-2. Using the audio system

### Operating a USB memory

Connecting a USB memory enables you to enjoy music from the vehicle speakers.

#### n Connecting a USB memory

STEP 1



Open the cover and connect the portable audio device.

#### ► Type A


STEP 2



Press .

#### ► Type B


STEP 2

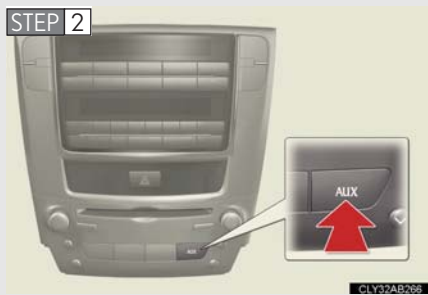

Press .


n **Control panel**

► **Type A**

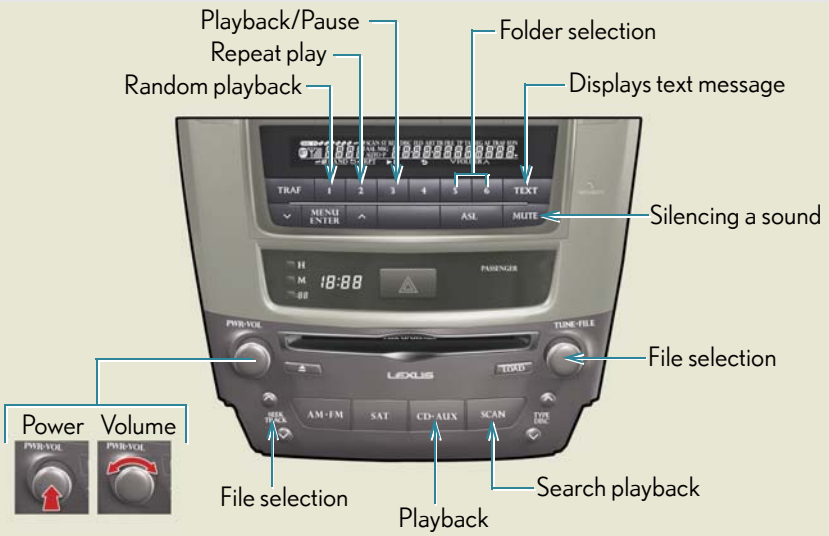

CLY32AB249

## ► Type B

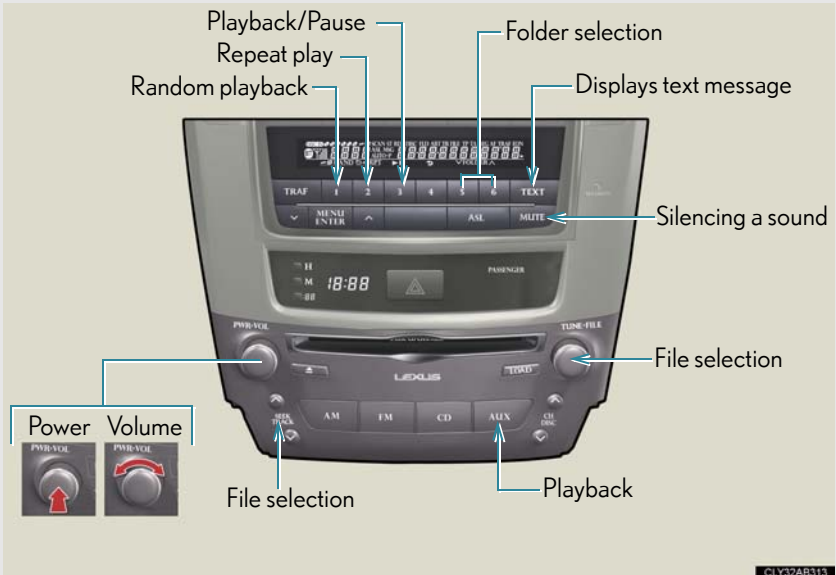

## Selecting a folder

### n Selecting folders one at a time

Press **6** (^) or **5** (v) to select the desired folder.

### n Selecting the desired folder by cueing the first file of each folder (type A)

Press and hold **SCAN** until you hear a beep. When the desired folder is reached, press **SCAN** once again.

### n Returning to the first folder

Press and hold **5** (v) until you hear a beep.


## Selecting files

### n Selecting one file at a time



Turn  or press “^” or “v” on  to select the desired file.

### n Selecting the desired file by cueing the files in the folder (type A)


Press .

When the desired file is reached, press  once again.

## Playing and pausing files

To play or pause a file, press  (  ).

## Fast-forwarding and rewinding files

To fast-forward or rewind, press and hold “^” or “v” on  until you hear a beep.

## Random playback

### n Playing files from a folder in random order

Press  (RAND).

### n Playing all the files from a USB memory in random order

Press and hold  (RAND) until you hear a beep.

## Repeat play

### n Repeating a file

Press **2** (RPT).

### n Repeating all the files in a folder

Press and hold **2** (RPT) until you hear a beep.

## Switching the display

Press **TEXT**.

Each time **TEXT** is pressed, the display changes in the order of Elapsed time → Folder name → File name → Album title (MP3 only) → Track title → Artist name.

### n USB memory functions

1 Depending on the USB memory that is connected to the system, the device itself may not be operable and certain functions may not be available. If the device is inoperable or a function is unavailable due to a malfunction (as opposed to a system specification), disconnecting the device and reconnecting it once again may resolve the problem.

1 If the USB memory still does not begin operation after being disconnected and reconnected, format the memory.

### n Display

Up to 12 characters can be displayed at a time.

If there are 13 characters or more, pressing and holding **TEXT** until you hear a beep will display the remaining characters.

A maximum of 24 characters can be displayed.

If **TEXT** is pressed until you hear a beep again or has not been pressed for 6 seconds or more, the display will return to the first 12 characters.

Depending on the contents recorded, the characters may not be displayed properly or may not be displayed at all.

### n Canceling random, repeat and scan playback

Press **1** (RAND), **2** (RPT), **SCAN** again.

### n Error messages

“ERROR”: This indicates a problem in the USB memory or its connection.

“NO MUSIC”: This indicates that no MP3/WMA files are included in the USB memory.

### n USB memory

#### l Compatible devices

USB memory that can be used for MP3 and WMA playback

#### l Compatible device formats

The following device formats can be used:

- USB communication formats: USB2.0 FS (12 mbps)
- File formats: FAT16/32 (Windows)
- Correspondence class: Mass storage class

MP3 and WMA files written in any format other than those listed above may not play correctly, and their file names and folder names may not be displayed correctly.

Items related to standards and limitations are as follows:

- Maximum directory hierarchy: 8 levels
- Maximum number of folders in a device: 999 (including the root)
- Maximum number of files in a device: 65025
- Maximum number of files per folder: 255

#### l MP3 and WMA files

MP3 (MPEG Audio LAYER 3) is a standard audio compression format.

Files can be compressed to approximately 1/10 of their original size using MP3 compression.

WMA (Windows Media™ Audio) is a Microsoft audio compression format.

This format compresses audio data to a size smaller than that of the MP3 format.

There is a limit to the MP3 and WMA file standards that can be used and to the media/formats on which the files are recorded.



### I MP3 file compatibility

- Compatible standards  
MP3 (MPEG1 AUDIO LAYERII, III, MPEG2 AUDIO LAYERII, III, MPEG2.5)
- Compatible sampling frequencies  
MPEG1 AUDIO LAYERII, III: 32, 44.1, 48 (kHz)  
MPEG2 AUDIO LAYERII, III: 16, 22.05, 24 (kHz)  
MPEG2.5: 8, 11.025, 12 (kHz)
- Compatible bit rates (compatible with VBR)  
MPEG1 AUDIO LAYERII, III: 32-320 (kbps)  
MPEG2 AUDIO LAYERII, III: 32-160 (kbps)  
MPEG2.5: 32-160 (kbps)
- Compatible channel modes: stereo, joint stereo, dual channel and monaural

### I WMA file compatibility

- Compatible standards  
WMA Ver. 9
- Compatible sampling frequencies  
HIGH PROFILE 32, 44.1, 48 (kHz)
- Compatible bit rates  
HIGH PROFILE 32-320 (kbps, VBR)

### I File names

The only files that can be recognized as MP3/WMA and played are those with the extension .mp3 or .wma.

### I ID3 and WMA tags

ID3 tags can be added to MP3 files, making it possible to record the track title, artist name, etc.

The system is compatible with ID3 Ver. 1.0, 1.1, and Ver. 2.2, 2.3, 2.4 ID3 tags. (The number of characters is based on ID3 Ver. 1.0 and 1.1.)

WMA tags can be added to WMA files, making it possible to record the track title and artist name in the same way as with ID3 tags.

### 1 MP3 and WMA playback

- When a device containing MP3 or WMA files is connected, all files in the USB memory are checked. Once the file check is finished, the first MP3 or WMA file is played. To make the file check finish more quickly, we recommend that you do not include any files other than MP3 or WMA files or create any unnecessary folders.
- When the USB memory is connected and the audio source is changed to USB memory mode, the USB memory will start playing the first file in the first folder. If the same device is removed and reinserted (and the contents have not been changed), the USB memory will resume play from the same point in which it was last used.

### 1 Extensions

If the file extensions .mp3 and .wma are used for files other than MP3 and WMA files, they will be skipped (not played).

### 1 Playback

- To play MP3 files with steady sound quality, we recommend a fixed bit rate of at least 128 kbps and a sampling frequency of 44.1 kHz.
- There is a wide variety of freeware and other encoding software for MP3 and WMA files on the market, and depending on the status of the encoding and the file format, poor sound quality or noise at the start of playback may result. In some cases, playback may not be possible at all.
- Microsoft, Windows, and Windows Media are registered trademarks of Microsoft Corporation in the U.S.A. and other countries.

### CAUTION

#### Caution while driving


Do not connect USB memory or operate the controls.

 NOTICE**n To prevent damage to USB memory**

- 1** Do not leave USB memory in the vehicle. The temperature inside the vehicle may become high, resulting in damage to the player.
- 1** Do not push down on or apply unnecessary pressure to the USB memory while it is connected as this may damage the USB memory or its terminal.
- 1** Do not insert foreign objects into the port as this may damage the USB memory or its terminal.


### 3-2. Using the audio system

## Optimal use of the audio system

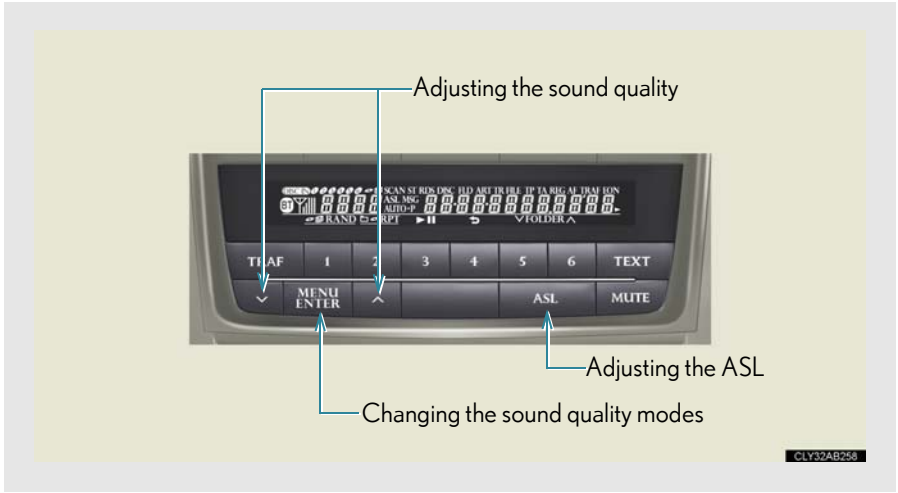

## Adjusting the Automatic Sound Levelizer (ASL)

Press .


The ASL switches between on and off modes each time  is pressed.

ASL automatically adjusts the volume and tone quality according to the noise level as you drive your vehicle.

## Adjusting sound quality and volume balance

### n Changing sound quality modes



Press .

Pressing  changes the sound mode in the following order:

“BAS”→“MID”→“TRE”→“FAD”→“BAL”

### n Adjusting sound quality

Press  or  to adjust the level.

Mode displayed	Sound quality mode	Level	Press 	Press 
“BAS”*	Bass	-5 to 5	Low	High
“MID”*	Mid-range	-5 to 5		
“TRE”*	Treble	-5 to 5		
“FAD”	Front/rear volume balance	F7 to R7	Shifts to rear	Shifts to front
“BAL”	Left/right volume balance	L7 to R7	Shifts to left	Shifts to right

\*: The sound quality level is adjusted individually in each audio mode.

## 3-2. Using the audio system

# Using the AUX adapter

This adapter can be used to connect a portable audio device and listen to it through the vehicle's speakers.

STEP 1



Open the cover and connect the portable audio device.

▶ Type A


STEP 2



Press  .

▶ Type B

STEP 2

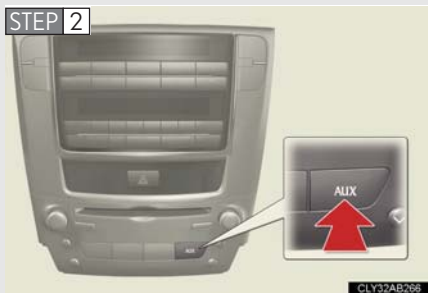

Press  .

---

n **Operating portable audio devices connected to the audio system**

The volume can be adjusted using the vehicle's audio controls. All other adjustments must be made on the portable audio device itself.

n **When using a portable audio device connected to the power outlet**

Noise may occur during playback. Use the power source of the portable audio device.

## 3-2. Using the audio system

### Using the steering wheel audio switches

Some audio features can be controlled using the switches on the steering wheel.



**1** Turns the power on, selects an audio source

**2** Increases/decreases volume

**3** Radio mode: Selects a radio station

CD mode: Selects a track, file (MP3 and WMA) and disc

Bluetooth<sup>®</sup> audio mode (type A):

Selects a track and album

iPod<sup>®</sup> mode:

Selects a song

USB memory mode:

Selects a file and folder

#### Turning on the power

Press **MODE** when the audio system is turned off.

The audio system can be turned off by holding **MODE** down until you hear a beep.



## Changing the audio source

Press **MODE** when the audio system is turned on. The audio source changes as follows each time **MODE** is pressed. If no discs are inserted in the player, or if the external device is not connected, that mode will be skipped.


Type A:


FM1→FM2→SAT1→SAT2→SAT3→CD player→  
Bluetooth® audio→AUX→iPod® or USB memory→AM

Type B:

FM1→FM2→CD player→AUX→iPod® or USB memory→AM

## Adjusting the volume


Press “+” on  to increase the volume and “-” to decrease the volume.

Hold down  to continue increasing or decreasing the volume.

## Selecting a radio station


**STEP 1** Press **MODE** to select radio mode.

**STEP 2** Press “^” or “v” on  to select a radio station.

To scan for receivable stations, press and hold  until you hear a beep.

## Selecting a track/file or song

**STEP 1** Press **MODE** to select CD, Bluetooth® audio, iPod® or USB memory mode.

**STEP 2** Press “^” or “v” on  to select the desired track/file or song.

### Selecting an album

**STEP 1** Press **MODE** to select Bluetooth<sup>®</sup> audio mode.

**STEP 2** Press and hold “^” or “v” on  until you hear a beep.


### Selecting a folder

**STEP 1** Press **MODE** to select USB memory mode.

**STEP 2** Press and hold “^” or “v” on  until you hear a beep.

### Selecting a disc in the CD player

**STEP 1** Press **MODE** to select CD mode.

**STEP 2** Press and hold “^” or “v” on  until you hear a beep.

### CAUTION

**n To reduce the risk of an accident**

Exercise care when operating the audio switches on the steering wheel.