

ADJUSTMENT CHART


HOW TO READ ADJUSTMENT CHART

- (a) Mark on the graph the measurements taken from the vehicle.

Example (2J2-GE):

Camber +0°10'

Caster +4°20'

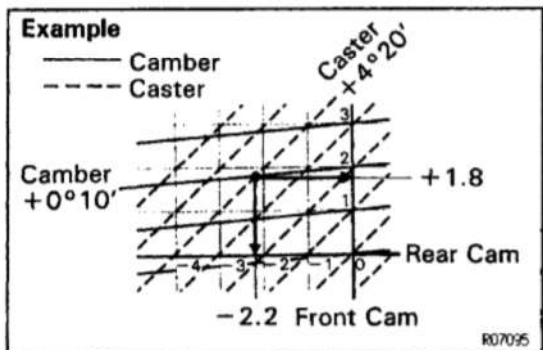


- (b) As shown in the illustration, read from the graph the amounts by which the front and/or rear cams are to be adjusted.

Amount to turn adjusting cam (by graduation):


Front cam +(Longer) 1.8

Rear cam -(Shorter) 2.2

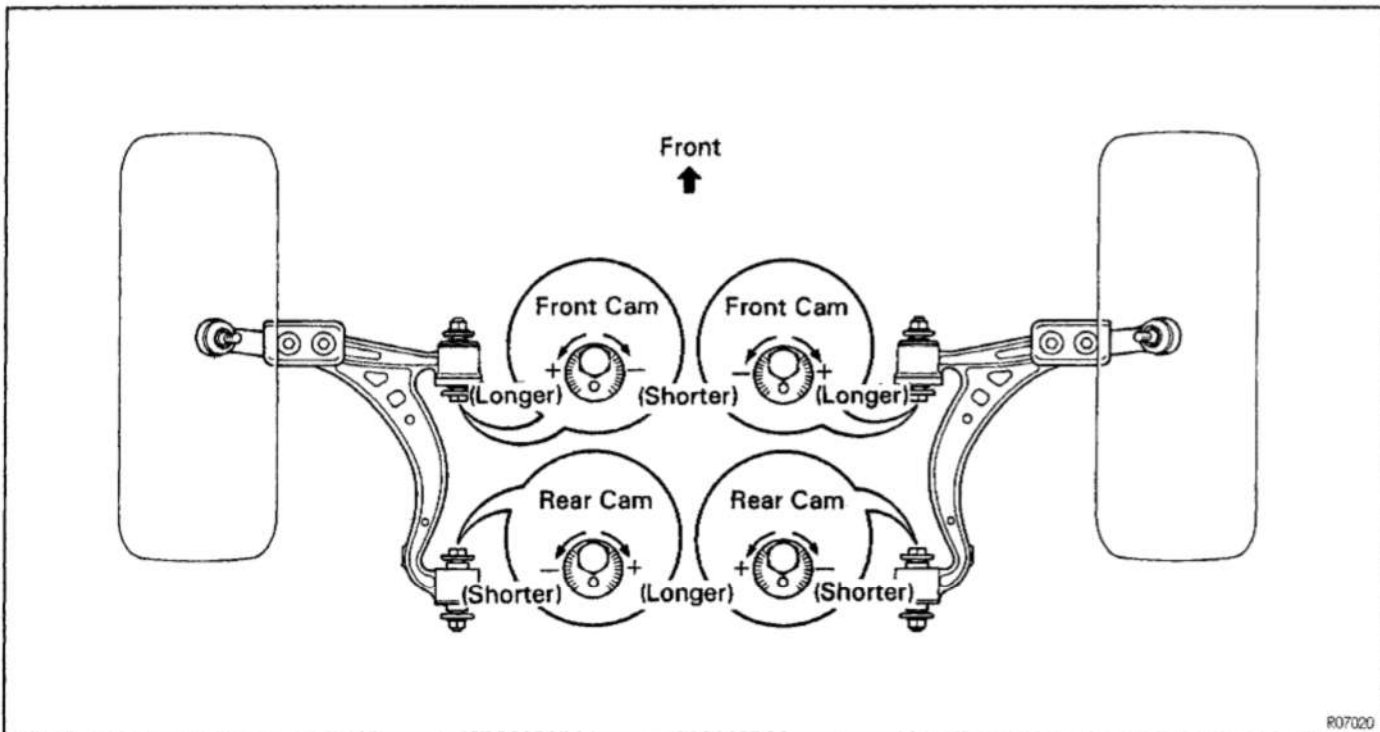


————— Camber
 - - - - - Caster

For 2JZ-GE

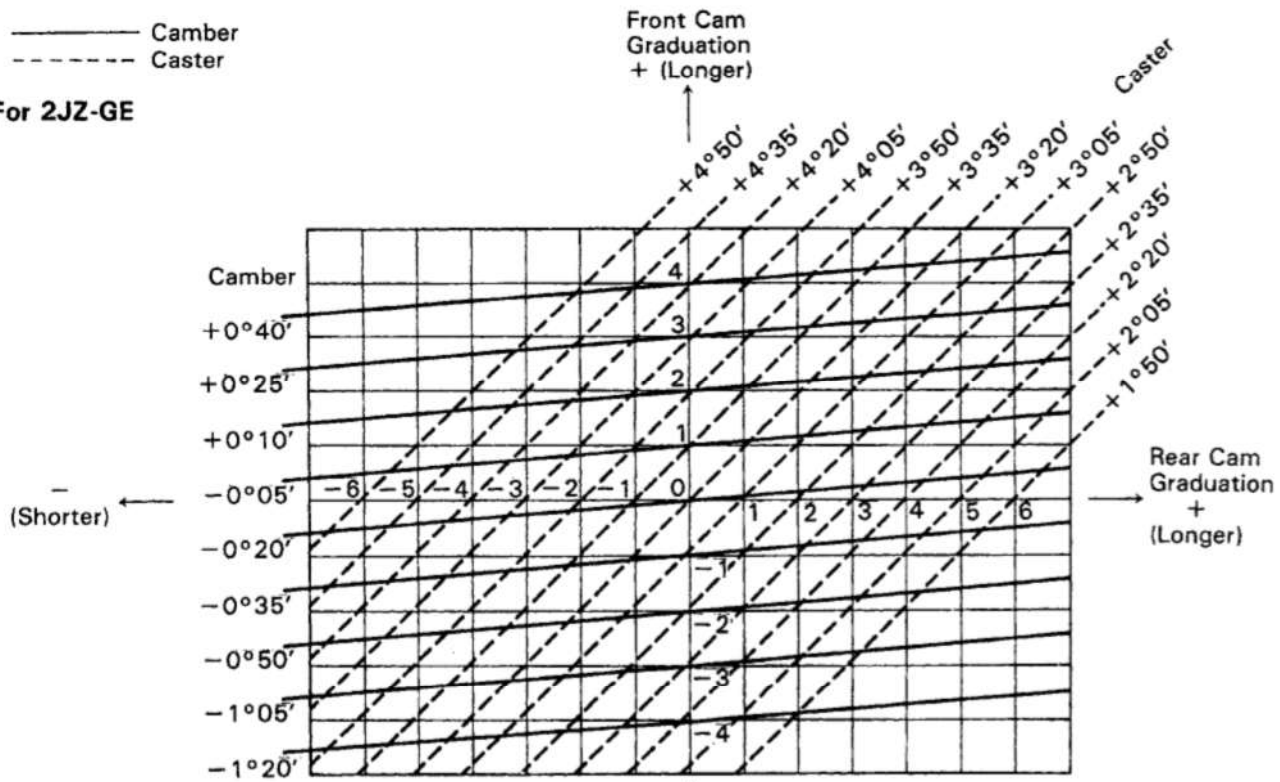

For 2JZ-GTE

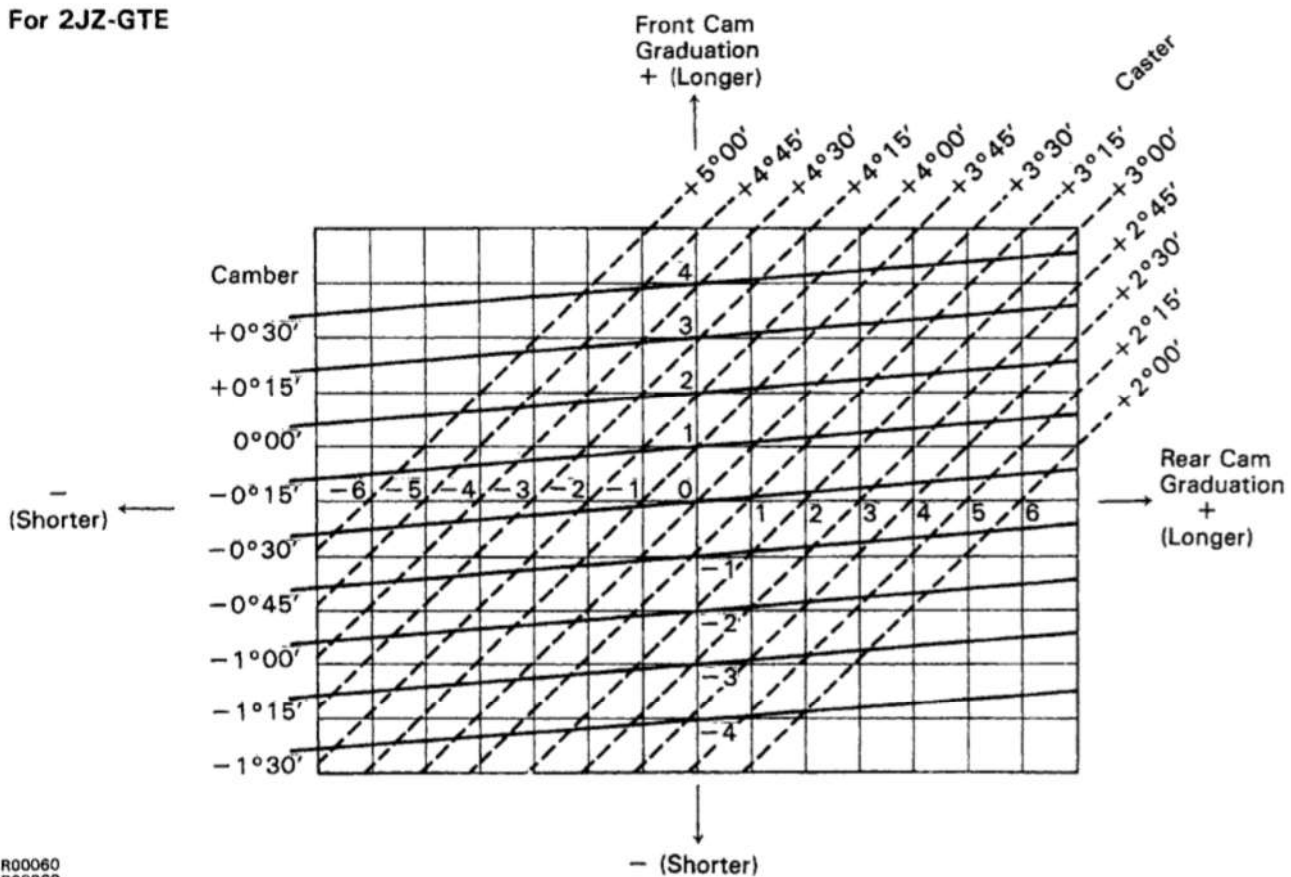

R00060
 R00060