



POWER SEAT (w/o MEMORY)

FROM POWER SOURCE SYSTEM (SEE PAGE 58)

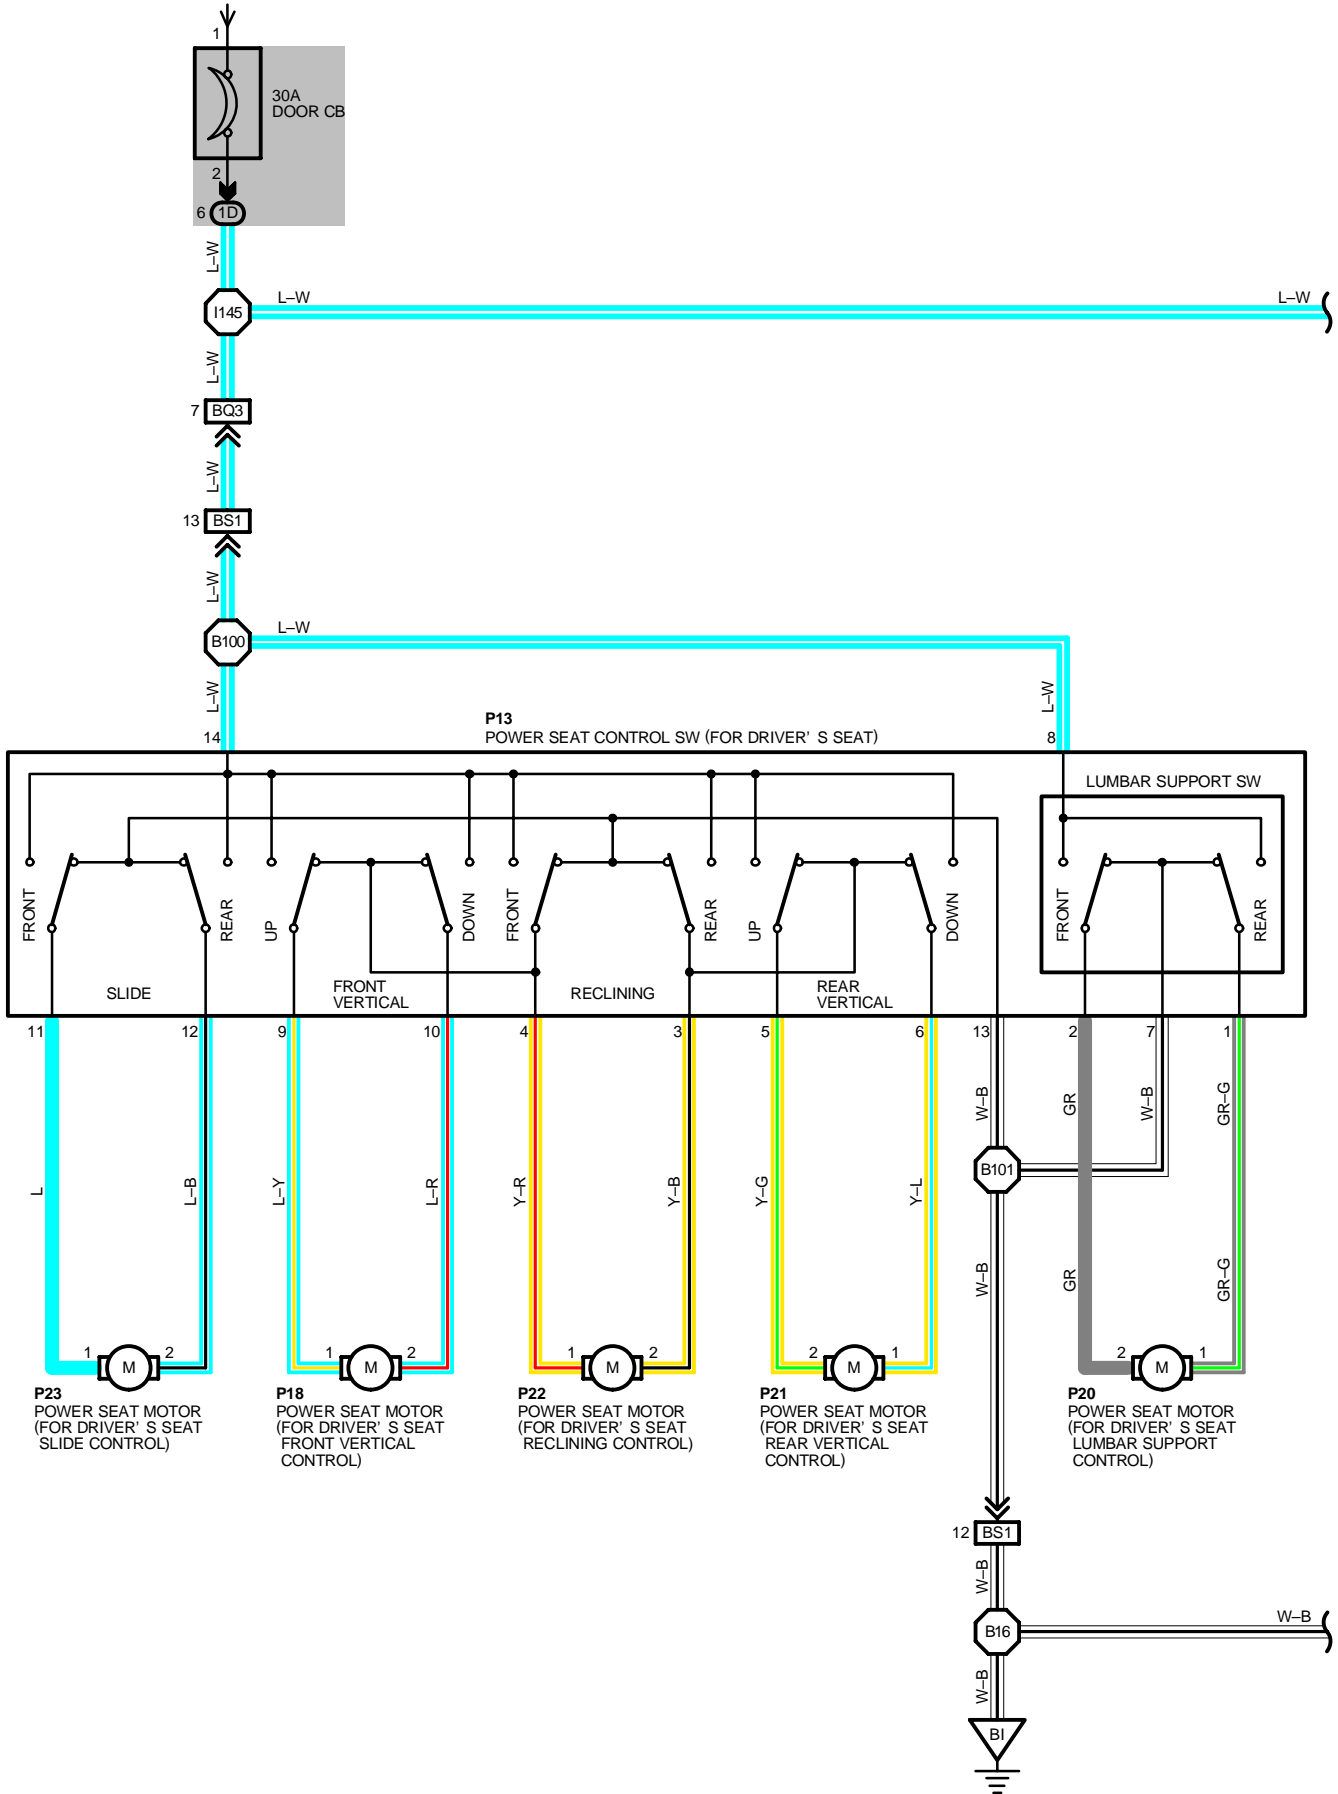

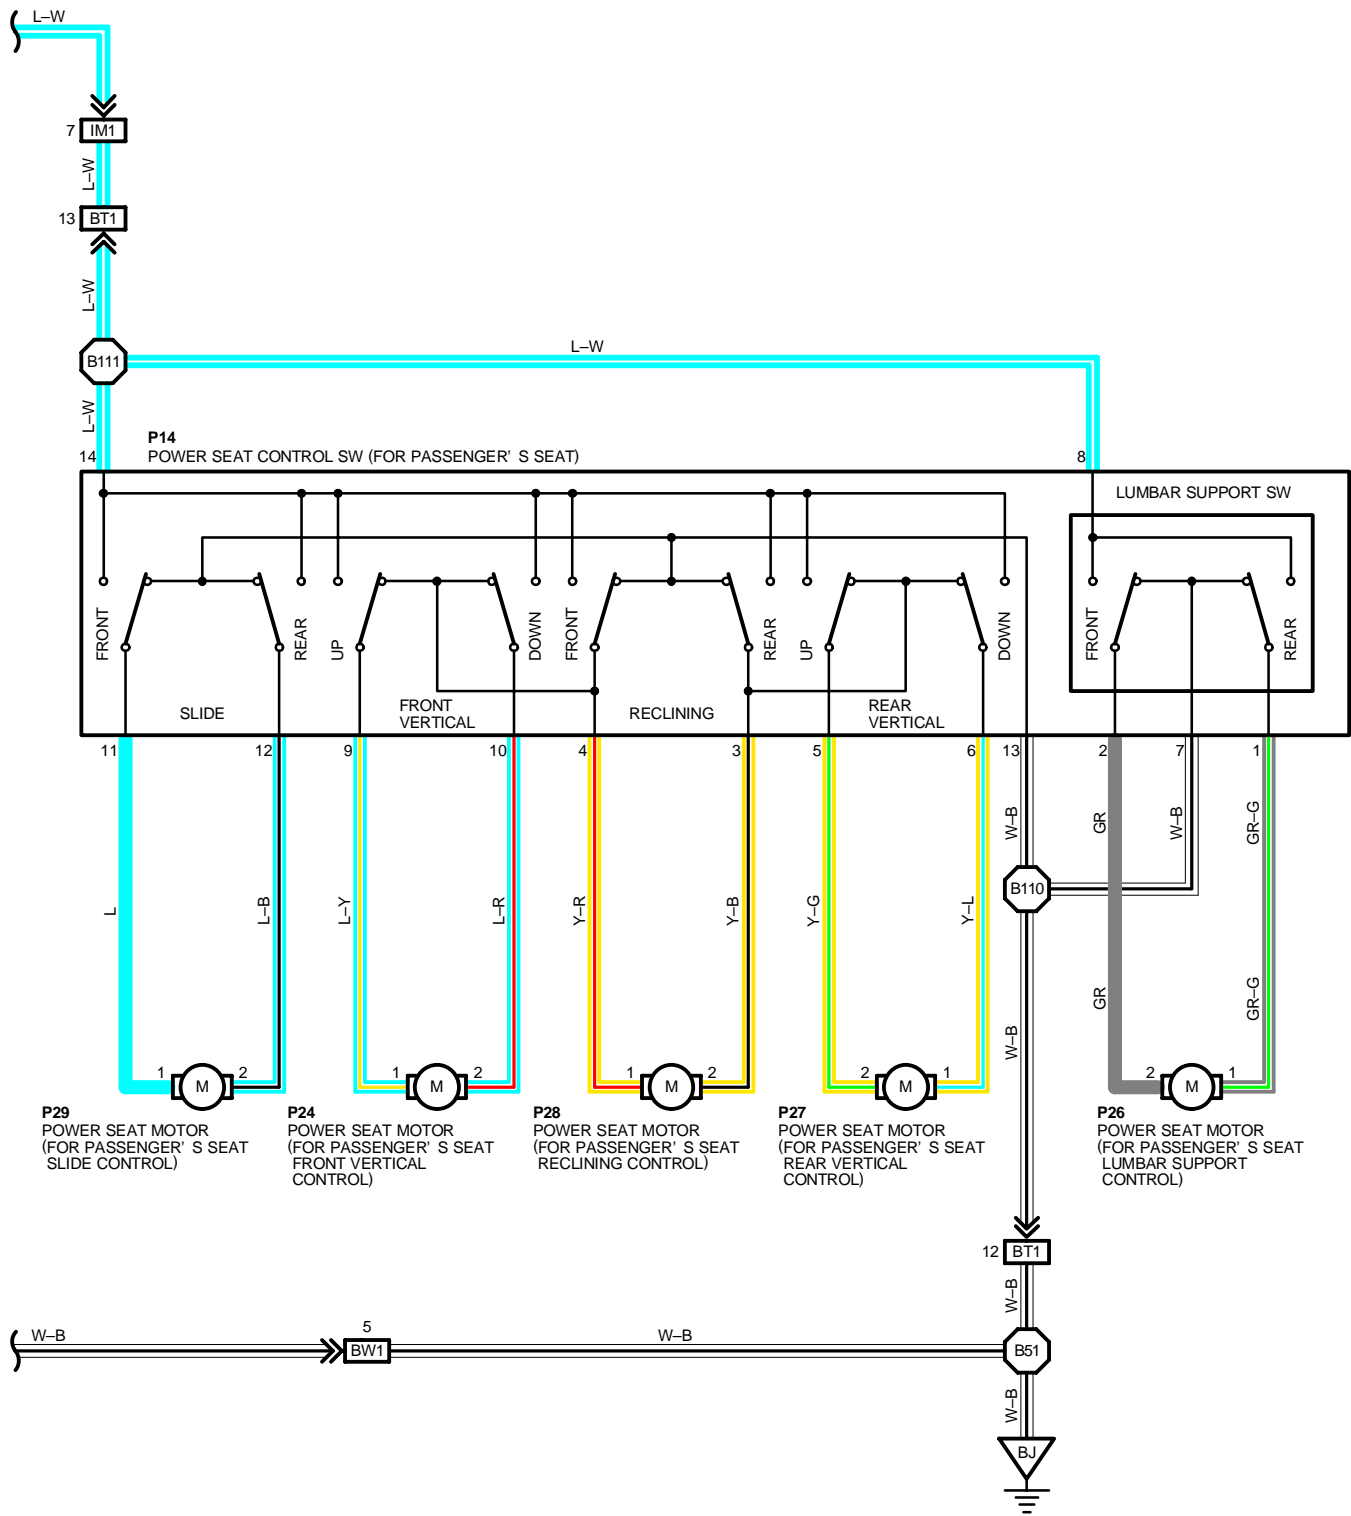

POWER SEAT (w/o MEMORY)

P13 POWER SEAT CONTROL SW (FOR DRIVER'S SEAT)

8, 14-GROUND : ALWAYS APPROX. 12 VOLTS
7, 13-GROUND : ALWAYS CONTINUITY

P14 POWER SEAT CONTROL SW (FOR PASSENGER'S SEAT)

14-GROUND : ALWAYS APPROX. 12 VOLTS
13-GROUND : ALWAYS CONTINUITY

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
P13	32	P21	32	P26	32
P14	32	P22	32	P27	32
P18	32	P23	32	P28	32
P20	32	P24	32	P29	32

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1D	20	COWL WIRE AND J/B NO. 1 (LEFT SIDE OF STEERING COLUMN TUBE)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IM1	38	FLOOR NO. 1 WIRE AND COWL WIRE (UNDER THE GLOVE BOX)
BQ3	40	COWL WIRE AND FLOOR NO. 2 WIRE (LEFT KICK PANEL)
BS1	42	FLOOR NO. 2 WIRE AND FRONT SEAT LH WIRE (UNDER THE FRONT LH SEAT)
BT1	42	FLOOR NO. 1 WIRE AND FRONT SEAT RH WIRE (UNDER THE FRONT RH SEAT)
BW1	40	FLOOR NO. 1 WIRE AND FLOOR NO. 2 WIRE (UNDER THE LEFT SIDE OF REAR SEAT CUSHION)

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
BI	40	UNDER THE LEFT REAR PILLAR
BJ	40	UNDER THE RIGHT REAR PILLAR

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I145	38	COWL WIRE	B101	42	FRONT SEAT LH WIRE
B16	40	FLOOR NO. 2 WIRE	B110	42	FRONT SEAT RH WIRE
B51	40	FLOOR NO. 1 WIRE	B111		
B100	42	FRONT SEAT LH WIRE			

