


INSPECT FOR AIR LEAKAGE

CHECK CONNECTIONS OF TUBES AND HOSES FOR AIR LEAKAGE

- (a) Set the height control switch in the HIGH position and raise the vehicle height.
- (b) Stop the engine.

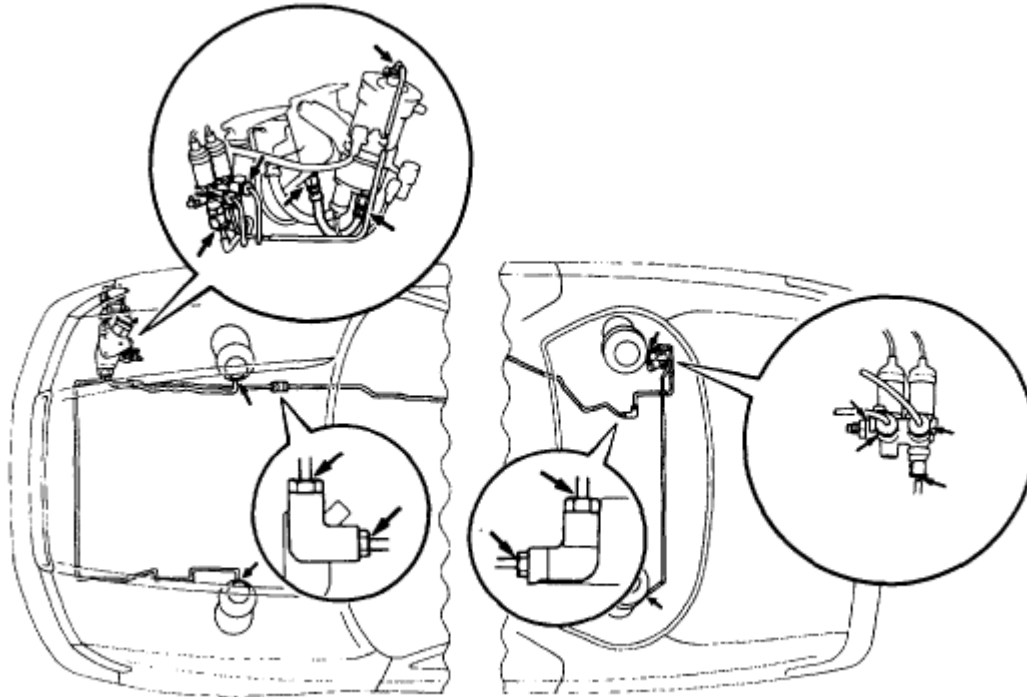

SA1.325

- (c) Apply soapy water to the connections of the tubes and hoses and check if there is any air leakage.