



NOTICE: Do not drop the adjusting shim into portions A and B. If dropped into portion A, the adjusting shim will pass through the cylinder head and cylinder block into the oil pan. If dropped into portion B, the adjusting shim cannot be recovered without removing the exhaust camshaft.