



## PROCEDURE

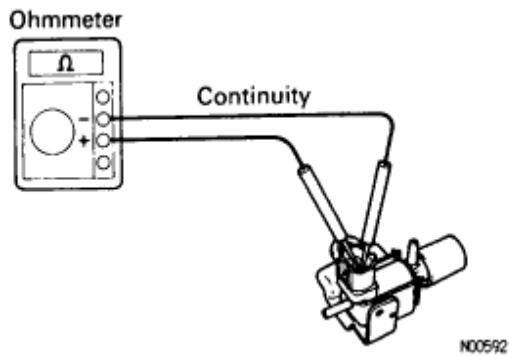


1. Inspect vacuum switching valve for open circuit.
  - Using an ohmmeter, check that there is continuity between the terminals.

### Resistance (Cold): 37 - 44 ohms

- If there is no continuity, replace the vacuum switching valve.

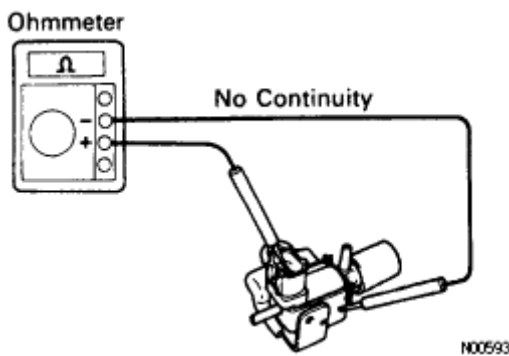


2. Inspect vacuum switching valve for ground.
  - Using an ohmmeter, check that there is no continuity between each terminal and the body.
  - If there is continuity, replace the vacuum switching valve.

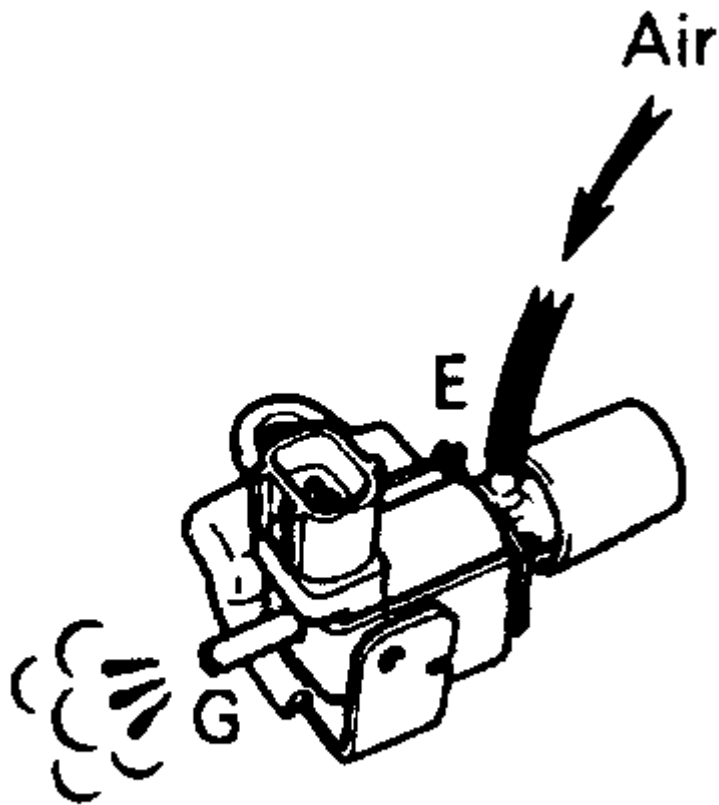

N00594

3. Inspect vacuum switching valve operation.

- Check that air flows from ports E to G.

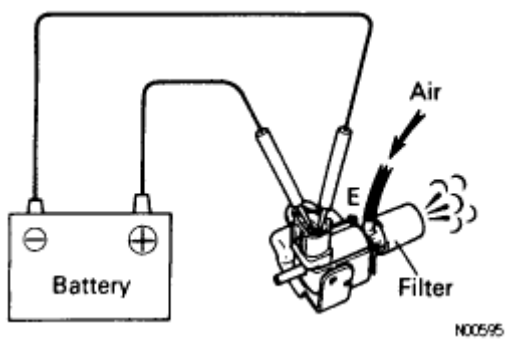

- Apply battery voltage across the terminals.
- Check that air flows from port E to the filter.
- If operation is not as specified, replace the vacuum switching valve.