


SECTION 1-5

INSTRUMENTS AND CONTROLS


Exterior equipment

Hood	36
Trunk lid	36
Fuel tank cap	37
Moon roof	39

 HOOD

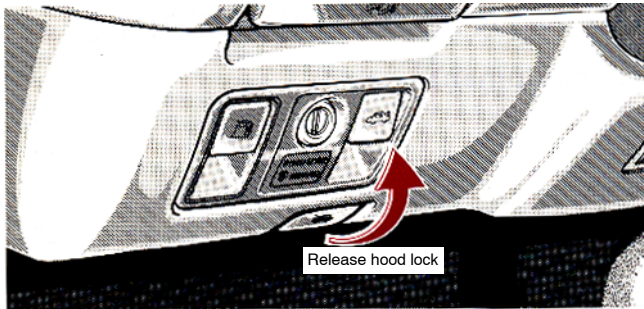

 
To open the hood, pull the hood lock release lever under the dash. The hood will spring up slightly.

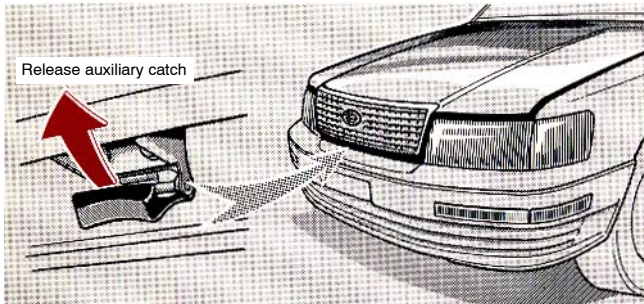

In front of the vehicle, pull the auxiliary catch lever and lift the hood.

Before closing the hood, check to see that you have not forgotten any tools, rags, etc. Then lower the hood and make sure it locks.

 TRUNK LID

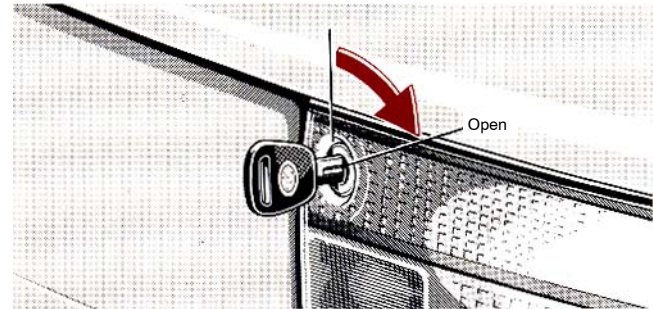


To open the trunk lid, insert the master key and turn it clockwise.

To close the trunk lid, lower it and press down on it. After closing the trunk lid, try pulling it up to make sure it is securely closed.


CAUTION:

Keep the trunk lid closed while driving. This not only keeps the luggage from being thrown out, but also prevents exhaust gases from entering the vehicle.

 Trunk lid opener

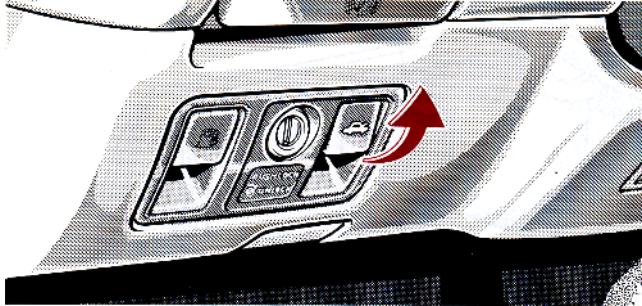

 
To open the trunk lid while sitting in the driver's seat, pull the lever with the main switch on.

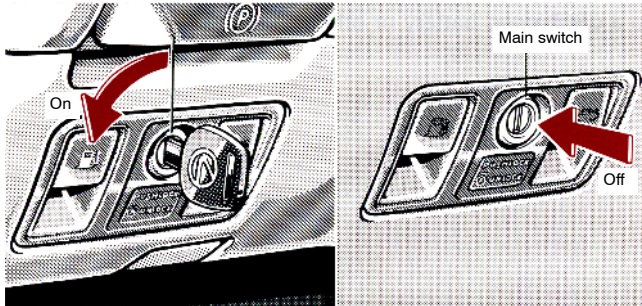


The trunk lid opener can be used when the master key is inserted into the main switch under the dash panel and turned counterclockwise. When the main switch is pushed in, the trunk lid opener cannot be used. The opener is turned off by pushing the main switch in.

The trunk lid opener system is inoperative when the main switch is pushed in. To protect things locked in the trunk, when you have your vehicle parked, turn off the trunk opener system.

 FUEL TANK CAP

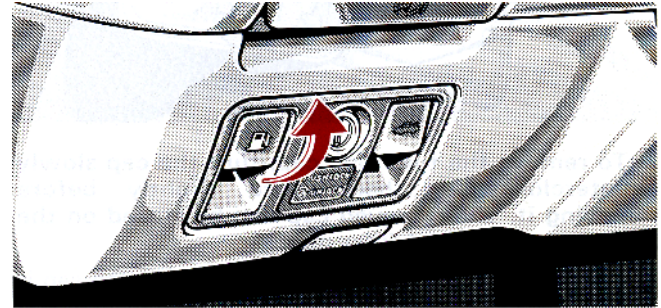

 1. To open the fuel filler door, pull the lever under the dash.

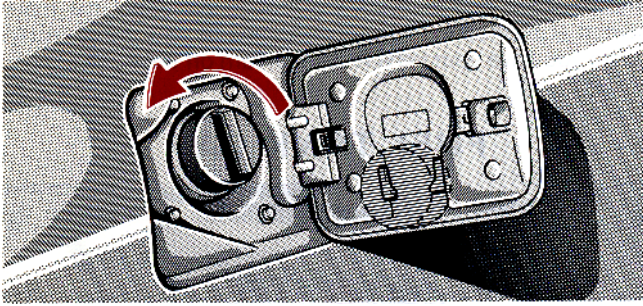


2. To remove the fuel tank cap, turn the cap slowly counterclockwise, then pause slightly before removing it. The removed cap can be stored on the back side of the fuel filler door.

It is not unusual to hear a slight swoosh when the cap is opened. When installing, turn the cap clockwise until you hear a click.

CAUTION:

- When opening the cap, do not remove the cap quickly. Fuel may be under pressure and spray out of the fuel filler neck under hot weather conditions, etc., which may cause injury.
- Make sure that the cap is tightened securely to prevent fuel spillage in case of an accident.
- Use only a genuine Lexus fuel tank cap for replacement. It has a built-in check valve.

 
In case the opener is not actuated.

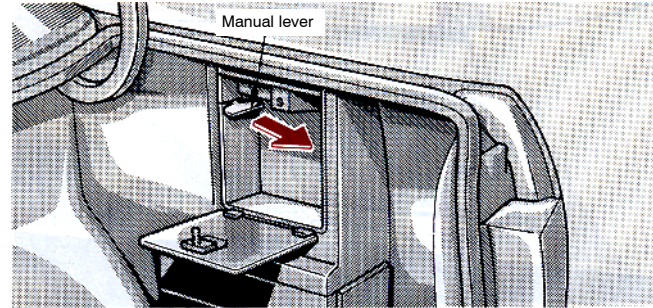

Pull the manual lever at the back right of the trunk.

This is used in case the fuel filler door cannot be opened due to a discharged battery or other trouble.

 MOON ROOF

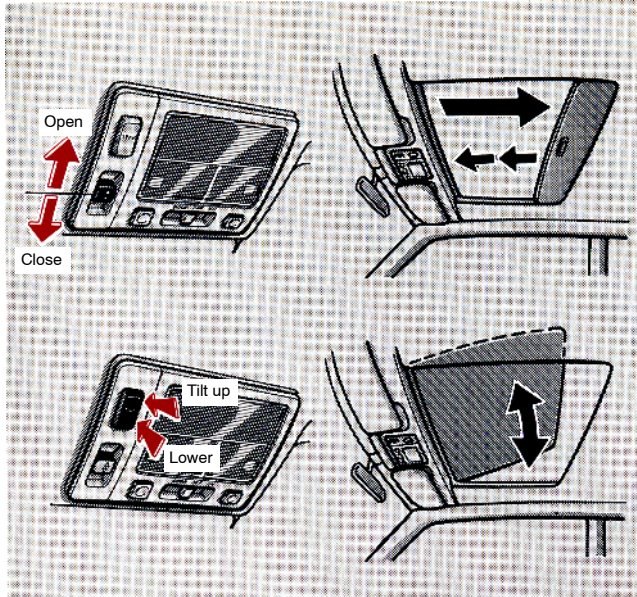

To slide open or to close the moon roof, push the switch to the **OPEN** or **CLOSE** side. To tilt up or lower the rear end of the moon roof, push the switch on the **TILT UP** or **DOWN** side.

The ignition key must be in the “ON” position.

The moon roof will move while the switch is being pushed and stop when released. However, as a precaution, it stops partway before sliding fully closed, except when already more than three-quarters closed. Therefore, release the switch and then push it again to close it completely.

The sun shade can be opened or closed manually. However, if you open the moon roof, the sun shade will be opened with the moon roof.

A buzzer will sound as a reminder if you turn off the ignition with the moon roof tilted up.

CAUTION:

- Do not stick your head, arms, etc. out of the opening while the vehicle is moving.
- Do not sit on top of the vehicle around the opening.

If the moon roof does not close or lower, see page 137 for emergency information.