

Troubleshooting Taillight System

You will find the cause of troubles more easily using the table well shown below. In this table, the numbers indicate the order priority of the causes in troubles. Check each part in the order shown. If necessary, replace the parts.

		See page																									
		TAIL Fuse	Taillight Control Relay		Light Control Switch		Integration Relay	Light Failure Switch		Door Courtesy Switch		GAUGE Fuse		Daytime Running Light Relay (CANADA)		PARKING Brake Switch (CANADA)		Wire Harness		Bulb		Other Parts					
		Part name		Trouble		BE-4, 19		BE-19, 58		BE-42		BE-46		BE-63		BE-147		BE-4, 19		BE-48		BE-145		-		BE-7	
USA	Taillight does not light. (Headlight does not light)			1	2															3							
	Taillight does not light. (Headlight is normal)	1	2	3	4																5						
	Only one light does not light. (Taillight)																				2	1					
	Rear combination light does not light.									2											1	3					
	"Light Auto Turn-Off System" does not operate.					1		4	3												2						
CANADA	Taillight does not light. (Headlight does not light)			1	3									2							4						
	Taillight does not light. (Headlight is normal)	1	2	4	5										3						6						
	Only one light does not light. (Taillight)																				2	1					
	Rear combination light does not light.									2											1	3					
	"Light Auto Turn-Off System" does not operate.					1		5	2	3											4						
	Taillight does not light with light control SW in TAIL.		1	2				1	4	3																	
	Taillight does not go out with light control SW in OFF.		1	3											2						4						
Headlight and Taillight do not light with engine running and light control SW in OFF.													1	2	5				3							*14	

*1: Alternator L terminal