

1998 MY U.S.A. Maintenance Schedule

Chassis & Body

No.	Service Intervals		1	7.5	15	22.5	30	37.5	45	52.5	60	Months	GS400	GS300	SC400	SC300	ES300	LS400	LX470		
	Items	x 1000 miles																			
1	Brake linings/drums & pads/disks				I		I		I		I	I: Every 12 Months	X	X	X	X	X	X	X	X	
2	Brake fluid						R				R	R: Every 24 Months	X	X	X	X	X	X	X	X	
3	Brake lines and hoses				I		I		I		I	I: Every 12 Months	X	X	X	X	X	X	X	X	
4	Steering linkage & Boots				I		I		I		I	I: Every 12 Months	X	X	X	X	X	X	X	X	
5	Rack & Pinon Assembly/Steering gear box				I		I		I		I	I: Every 12 Months	X	X	X	X	X	X	X	X	
6	Ball joints & dust cover				I		I		I		I	I: Every 12 Months	X	X	X	X	X	X	X	X	
7	Drive shaft boots				I		I		I		I	I: Every 12 Months	X	X	X	X	X	X	X	X	
		Retorque flange			T		T		T		T	I: Every 12 Months	X	X	X	X	X	X	X	X	
8	Transmission Fluid				I		I		I		I	I: Every 12 Months					X	X			
		Other than T-IV			I		I		I		I	I: Every 12 Months	X	X	X				X		
		T-IV																			
9	Transfer case oil						I		I		I	I: 24 Months then Every 12 Months									
10	Front differential with type T-IV				I		I		I		I	I: Every 24 Months								X	
11	Front differential - Others				I		I		I		I	I: Every 12 Months						X		X	
12	Rear differential oil				I		I		I		I	I: Every 12 Months	X	X	X	X			X	X	
		Other			I		I		I		I	I: Every 12 Months									
		Torque Sensing LSD			I		R		I		R	I: Every 12Mo. R: Every 48Mo.									
		LSD			I		R		I		R	I: Every 12Months R: Every 24Months									
13	Body Inspection		I		I		I		I		I	I: Every 12 Months	X	X	X	X	X	X	X	X	
14	Air conditioning filter				I		R		I		R	I: Every 6 Months R: Every 12 Months							X		
					R		R		R		R	R: Every 12 Months	X	X							
							R				R	R: Every 24 Months								X	
					Replace every 10,000 miles or when light is on																
15	Tire Rotation		R	R	R	R	R	R	R	R	R	R: Every 6 Months	X	X	X	X	X	X	X	X	
16	Road Test		I	I	I	I	I	I	I	I	I	I: Every 6 Months	X	X	X	X	X	X	X	X	
17	Driveshaft bushing grease						R				R	R: Every 24 Months								X	
18	Wheel Bearing Grease						R				R	R: Every 24 Months								X	
19	Active height control suspension fluid										R	R: Every 48 Months								X	
20	Active height control gas chamber						I		I		I	I: 24 Mo., then every 12 Mo.								X	
21	Propeller shaft grease				R		R		R		R	R: Every 12 Months								X	
22	Propeller shaft bolt torque		T		T		T		T		T	I: Every 12 Months	X	X	X	X			X	X	
23	Charcoal Canister			Required for vehicles in CA, MA & NY onl								I	I: Every 72 Months		X	X	X	X	X	X	

I: Inspect and correct or replace as necessary **R:** Replace, change, tire rotation or lubricants **T:** Re-Torque

9: If Equipped

1998 MY U.S.A. Maintenance Schedule

Engine

No.	Service Intervals Items	x 1000 miles	Miles									Months	GS400	GS300	SC400	SC300	ES300	LS400	LX470
			1	7.5	15	22.5	30	37.5	45	52.5	60								
1	Timing Belt		Replace 90,000 miles									R: Every 72 Months	X	X	X	X		X	
2	Valve Clearance										I	I: Every 48 Months	+	+	+	+	+	+	+
3	Drive Belts		Inspect 60,000 miles and then every 15,000 miles									I: 48 Months then every 12 Months	X	X	X	X	X	X	X
4	Engine Oil			R	R	R	R	R	R	R	R	R: Every 6 Months	X	X	X	X	X	X	X
5	Engine Oil Filter			R	R	R	R	R	R	R	R	R: Every 6 Months	X	X	X	X	X	X	X
6	Engine Coolant						R				R	R: Every 24 Months	X	X	X	X	X	X	X
7	Exhaust Pipes & Mountings				I			I			I	I: Every 12 Months	X	X	X	X	X	X	X
8	Air Cleaner Filter						R				R	R: Every 24 Months	X	X	X	X	X	X	X
9	Fuel lines/connections, fuel tank vapor vent system hoses & fuel tank band							I			I	I: Every 24 Months	X	X	X	X	X	X	X
10	Fuel tank cap gasket							I			I	I: Every 24 Months	X	X	X	X	X	X	X
11	Spark Plugs		Replace 90,000 miles									R: 90,000 Miles	X	X	X	X	X	X	
11	Spark Plugs										R	R: 60,000 Miles							X

I: Inspect and correct or replace as necessary **R:** Replace, change, tire rotation or lubricants

+ : Audible