


Cylinder Head Side

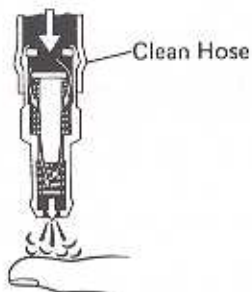

Intake Manifold Side



INSPECTION OF PCV VALVE

1. REMOVE PCV VALVE
2. ATTACH CLEAN HOSE TO PCV VALVE
3. BLOW AIR FROM CYLINDER HEAD SIDE
Check that air passes through easily.
NOTICE: Do not suck air through the valve.
Petroleum substances inside the valve are harmful.
4. BLOW AIR FROM INTAKE MANIFOLD SIDE
Check that air passes through with difficulty.
If the PCV valve fails either check, replace it.
5. REINSTALL PCV VALVE

INSPECTION OF PCV HOSES AND CONNECTIONS

VISUALLY INSPECT HOSES, CONNECTIONS AND GASKETS

Check for cracks, leaks or damage.

