

## 12. INSPECT FUEL SENDER GAUGE VOLTAGE

Measure the voltage between terminals 1 and 2 for each float position.

\*1: Set value 270.7 mm (10.66 in.)

	Float position mm (in.)	Voltage (V)
F	Approx. 310.5 (12.22)	Approx. 4.6
1/2	Approx. 172.0 (6.77)	Approx. 2.43
Е	Approx. 34.3 (1.35)	Approx. 0.35
lf resi	stance value is not as	specified, replace the sender

gauge.