



## INSPECTION

### INSPECTION TRANSPONDER KEY COIL CONTINUITY

Check that there is continuity between terminal 1 and 2.  
If continuity is not as specified, replace the coil.