


91A02872
 Fig. 2: Removing Steering Wheel Pad
 Courtesy of Toyota Motor Sales, U.S.A., Inc.

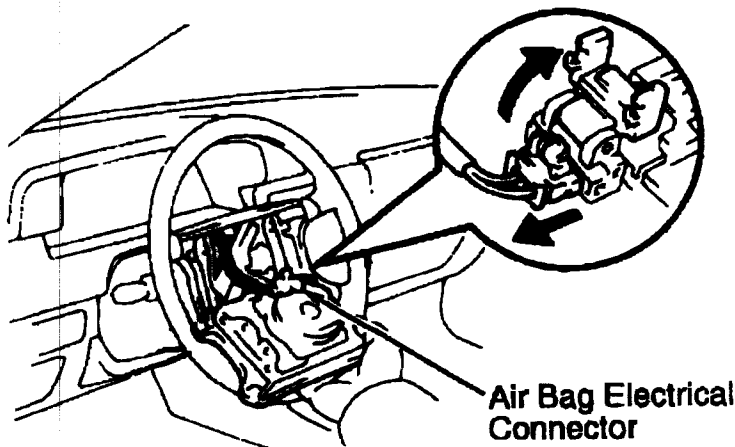

91J03772
 Fig. 3: Disconnecting Air Bag Electrical Connector
 Courtesy of Toyota Motor Sales, U.S.A., Inc.

*YOU ARE PREPARED
 DONE FROM HERE.
 NEXT COUPLE OF
 PAGES ARE FOR
 OTHER MODELS
 THIS IS THE END*

at least 2 minutes after ignition
 tion and negative battery cable

scuff plate, door opening
 d. Rotate steering wheel to
 straight-ahead position. Turn ignition off. Disconnect negative
 battery cable. Remove steering wheel. See STEERING WHEEL & HORN PAD.
 Remove steering column covers. Remove combination switch retaining
 screws. Unplug connectors. Remove combination switch.

Removal (GS300, GS400 & LS400)

Remove undercover, lower pad, key cylinder pad, finish panel