


8. ADJUST CASTER


HINT:

The caster can be adjusted by replacing the No. 2 bushing bracket.

- (a) Jack up the vehicle and make the wheels in full rebound condition.

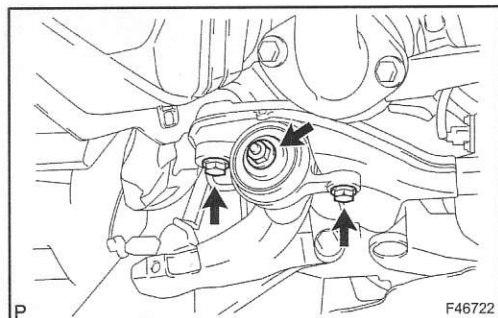

- (b) Remove the nut and washer from the rear of the lower No. 2 bushing.
- (c) Remove the bolts from the right and left sides of the lower No. 2 bushing bracket and take out the bracket from the lower arm.

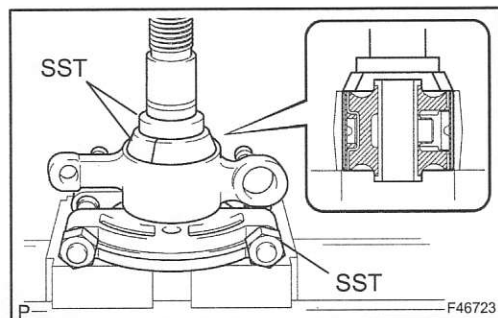


- (d) Using SST and a press, remove the lower No. 2 bushing from the bracket. According to the table below, replace the bracket and press-fit the removed bushing.

SST 09613-26010, 09950-00020,
09950-60010 (09951-00650)

Part No.	Adjustment Amount
48652-50040	+30'
48652-50050	-30'

HINT:

- Push the part shown in the illustration to remove.
- For SST 09613-26010, use 2 thicker half-rings as a pair.

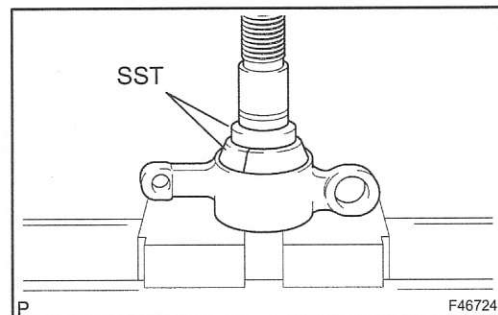

- (e) Using SST and a press, reinstall a bushing as shown in the illustration.

SST 09613-26010, 09950-60010 (09951-00650)

HINT:

- For SST 09613-26010, use 2 thicker half-rings as a pair.