



- Set the protrusion of the bushing to the position shown in the illustration.
- (f) Install the lower bracket into the lower arm shaft. Temporarily install the washer and nut removed in (b) until it goes by hand.

NOTICE:

Do not install them completely in this stage.

- (g) install the 2 bolts that removed in (c).

Torque:

Vehicle inside: 60 N·m (612 kgf·cm, 44 ft·lbf)

Vehicle outside: 137 N·m (1,395 kgf·cm, 101 ft·lbf)

- (h) Put down the vehicle and, with its wheels completely grounded, tighten the nut that is temporarily installed in (e).

Torque: 137 N·m (1,395 kgf·cm, 101 ft·lbf)