


DIFFERENTIAL OIL ADJUSTMENT

2902L-02

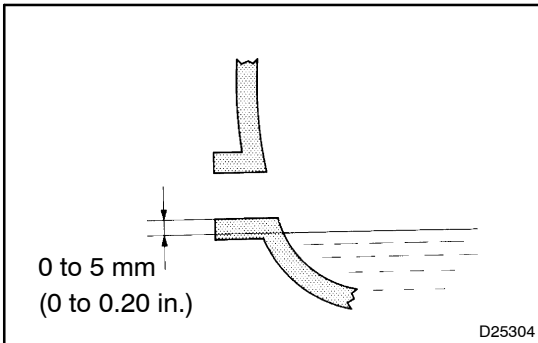

1. INSPECT AND ADJUST DIFFERENTIAL OIL

- (a) Stop the vehicle on a level place.
- (b) Using a hexagon wrench (10 mm), remove the rear differential filler plug and gasket.
- (c) Check that the oil surface is within 5 mm (0.20 in.) of the lowest position of the inner surface of the differential filler plug opening.

NOTICE:

- **Excessively large or small amounts of oil may cause troubles.**
 - **After replacing oil, drive the vehicle and check the oil level.**
- (d) Check for oil leakage when the oil level is low.
 - (e) Using a hexagon wrench (10 mm), install the rear differential filler plug with a new gasket.

Torque: 49 N·m (500 kgf·cm, 36 ft·lbf)

2. ADD DIFFERENTIAL OIL

- (a) Using a hexagon wrench (10 mm), remove the rear differential filler plug and gasket.
- (b) Add oil.
Oil type: Differential synthetic gear oil GL-5 75W-90 or equivalent
Capacity: 1.35 ± 0.05 liters (1.43 ± 0.05 US qts, 1.19 ± 0.04 Imp. qts)
- (c) Check the oil level.
- (d) Using a hexagon wrench (10 mm), install the rear differential filler plug with a new gasket.

Torque: 49 N·m (500 kgf·cm, 36 ft·lbf)

NOTICE:

After replacing the oil, recheck the oil level after initial driving.