

PROBLEM SYMPTOMS TABLE

Symptom	Suspect Area	See page
All function does not operate. (Both left and right)	4. ECU power source circuit 5. Power seat ECU	DI-723 IN-35
"Slide operation" does not operate.	1. Motor circuit 2. Position sensor circuit 3. Power seat ECU	DI-727 DI-729 IN-35
"Front vertical operation" does not operate.	1. Motor circuit 2. Position sensor circuit 3. Power seat ECU	DI-727 DI-729 IN-35
"Lifter operation" does not operate.	1. Motor circuit 2. Position sensor circuit 3. Power seat ECU	DI-727 DI-729 IN-35
"Reclining operation" does not operate.	1. Motor circuit 2. Position sensor circuit 3. Power seat ECU	DI-727 DI-729 IN-35
"Headrest operation" does not operate.	1. Motor circuit 2. Position sensor circuit 3. Power seat ECU	DI-727 DI-729 IN-35
"Seat cushion operation" does not operate.	1. Seat cushion switch circuit 2. Motor circuit 3. Position sensor circuit 4. Power seat ECU	DI-734 DI-727 DI-729 IN-35
Seat position memory return function does not operate.	1. Power seat memory switch circuit 2. Position sensor circuit 3. Power seat ECU	DI-1257 DI-729 IN-35
"Lumbar support operation" does not operate.	1. Lumbar support switch circuit 2. Motor circuit 3. Position sensor circuit 4. Power seat ECU	DI-732 DI-727 DI-729 IN-35