

PROBLEM SYMPTOMS TABLE

Symptoms	Suspected Area	See Page
Power window does not operate at all	<ol style="list-style-type: none"> 1. Driver door power source circuit 2. Power window regulator master switch circuit 3. Driver door ECU 	05-2084 05-2095 05-2051
Driver side power window does not operate	<ol style="list-style-type: none"> 1. Driver door power source circuit 2. Power window motor circuit (driver side) 3. Power window regulator master switch circuit 4. Driver door ECU 	05-2084 05-2109 05-2095 05-2051
Passenger side power window does not operate	<ol style="list-style-type: none"> 1. Passenger door power source circuit 2. Power window motor circuit (passenger side) 3. Power window regulator switch circuit (passenger side) 4. Passenger door ECU 	05-2086 05-2112 05-2100 05-2051
Rear LH power window does not operate	<ol style="list-style-type: none"> 1. Rear door LH power source circuit 2. Power window motor circuit (rear LH) 3. Power window regulator switch circuit (rear LH) 4. Rear door LH ECU 	05-2089 05-2115 05-2103 05-2051
Rear RH power window does not operate	<ol style="list-style-type: none"> 1. Rear door RH power source circuit 2. Power window motor circuit (rear RH) 3. Power window regulator switch circuit (rear RH) 4. Rear door RH ECU 	05-2092 05-2118 05-2106 05-2051
Jam protection function and AUTO UP/DOWN function do not operate on driver side	<ol style="list-style-type: none"> 1. Power window regulator master switch circuit 2. Limit switch circuit 3. Pulse sensor circuit 	05-2095 05-2062 05-2062
Jam protection function and AUTO UP/DOWN function do not operate on passenger side	<ol style="list-style-type: none"> 1. Power window regulator switch circuit (passenger side) 2. Limit switch circuit 3. Pulse sensor circuit 	05-2100 05-2062 05-2062
Jam protection function and AUTO UP/DOWN function do not operate at rear LH	<ol style="list-style-type: none"> 1. Power window regulator switch circuit (rear LH) 2. Limit switch circuit 3. Pulse sensor circuit 	05-2103 05-2062 05-2062
Jam protection function and AUTO UP/DOWN function do not operate at rear RH	<ol style="list-style-type: none"> 1. Power window regulator switch circuit (rear RH) 2. Limit switch circuit 3. Pulse sensor circuit 	05-2106 05-2062 05-2062
Window lock function does not operate	<ol style="list-style-type: none"> 1. Power window regulator master switch circuit 2. Window lock switch circuit 3. Power window regulator switch circuit (passenger side) 4. Power window regulator switch circuit (rear LH) 5. Power window regulator switch circuit (rear RH) 6. Driver door ECU 7. Passenger door ECU 8. Rear door LH ECU 9. Rear door RH ECU 	05-2095 05-2121 05-2100 05-2103 05-2106 05-2051 05-2051 05-2051 05-2051
Window control function does not operate	<ol style="list-style-type: none"> 1. Power window regulator master switch circuit 2. Window lock switch circuit 3. Power window motor circuit (passenger side) 4. Power window motor circuit (rear LH) 5. Power window motor circuit (rear RH) 6. Driver door ECU 7. Passenger door ECU 8. Rear door LH ECU 9. Rear door RH ECU 	05-2095 05-2121 05-2112 05-2115 05-2118 05-2051 05-2051 05-2051 05-2051
Transmitter cannot open power windows	<ol style="list-style-type: none"> 1. Transmitter (w/ Smart key system) (w/o Smart key system) 2. Door control receiver (w/ Smart key system) (w/o Smart key system) 3. Theft warning ECU 	05-2608 05-2664 05-2608 05-2664 -

Door key linked power window operation does not function	<ol style="list-style-type: none"> 1. Door key lock and unlock warning switch 2. Door lock control system 3. Driver door ECU 	<p style="text-align: right;">05-2498</p> <p style="text-align: right;">05-2498</p> <p style="text-align: right;">05-2051</p>
Key-off operation does not function	<ol style="list-style-type: none"> 1. Power window master switch circuit 2. Power window regulator motor circuit (driver side) 3. Power window regulator motor circuit (passenger side) 4. Power window regulator motor circuit (rear LH) 5. Power window regulator motor circuit (rear RH) 6. Door courtesy switch circuit 7. Driver door ECU 8. Passenger door ECU 9. Rear door LH ECU 10. Rear door RH ECU 	<p style="text-align: right;">05-2095</p> <p style="text-align: right;">05-2109</p> <p style="text-align: right;">05-2112</p> <p style="text-align: right;">05-2115</p> <p style="text-align: right;">05-2118</p> <p style="text-align: right;">05-2498</p> <p style="text-align: right;">05-2051</p> <p style="text-align: right;">05-2051</p> <p style="text-align: right;">05-2051</p> <p style="text-align: right;">05-2051</p>