


Position of Parts in Seat

[Rear Seat]

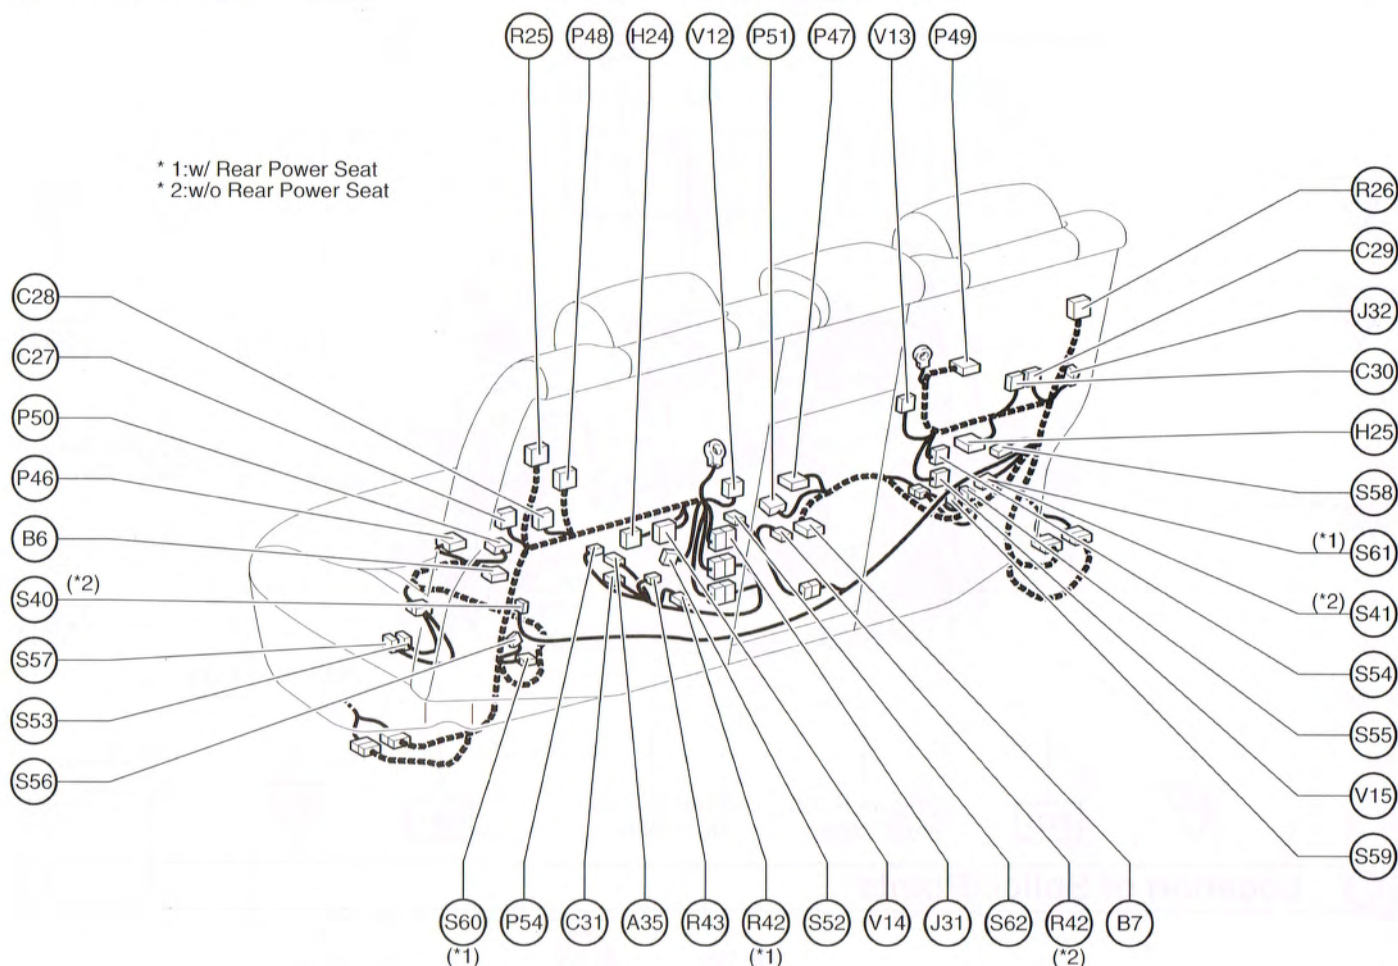

A35 Audio and Rear A/C Control SW

B 6 Buckle SW Rear LH
B 7 Buckle SW Rear RH

C27 Climate Control Seat ECU (Rear LH Seat)
C28 Climate Control Seat ECU (Rear LH Seat)
C29 Climate Control Seat ECU (Rear RH Seat)
C30 Climate Control Seat ECU (Rear RH Seat)
C31 Climate Control Seat SW (Rear)

H24 Head Rest Limit SW Rear LH
H25 Head Rest Limit SW Rear RH

J 31 Junction Connector
J 32 Junction Connector

P46 Power Seat Motor
(Rear Passenger's LH Seat Slide Control)
P47 Power Seat Motor
(Rear Passenger's RH Seat Slide Control)
P48 Power Seat Motor and Position Sensor
(Rear Passenger's LH Seat Head Rest Top and Bottom Control)
P49 Power Seat Motor and Position Sensor
(Rear Passenger's RH Seat Head Rest Top and Bottom Control)
P50 Power Seat Position Sensor
(Rear Passenger's LH Seat Slide Control)

P51 Power Seat Position Sensor
(Rear Passenger's RH Seat Slide Control)
P54 Power Seat Control SW (Rear Seat)

R25 Rear LH Seat ECU
R26 Rear RH Seat ECU
R42 Rear Armrest Courtesy SW
R43 Rear Sunshade SW (Rear)

S40 Seat Heater Rear LH
S41 Seat Heater Rear RH
S52 Seat Climate Controller Rear LH (Seat Back)
S53 Seat Climate Controller Rear LH (Seat Cushion)
S54 Seat Climate Controller Rear RH (Seat Back)
S55 Seat Climate Controller Rear RH (Seat Cushion)
S56 Seat Climate Fan Motor Rear LH (Seat Back)
S57 Seat Climate Fan Motor Rear LH (Seat Cushion)
S58 Seat Climate Fan Motor Rear RH (Seat Back)
S59 Seat Climate Fan Motor Rear RH (Seat Cushion)
S60 Seat Heater Rear LH
S61 Seat Heater Rear RH
S62 Seat Heater SW (Rear)

V12 Vibration Seat ECU LH
V13 Vibration Seat ECU RH
V14 Vibrator LH
V15 Vibrator RH