


Cruise Control Switch Circuit

CIRCUIT DESCRIPTION

This circuit carries the SET/COAST, RESUME/ACCEL and CANCEL voltage signals to the ECU.

WIRING DIAGRAM

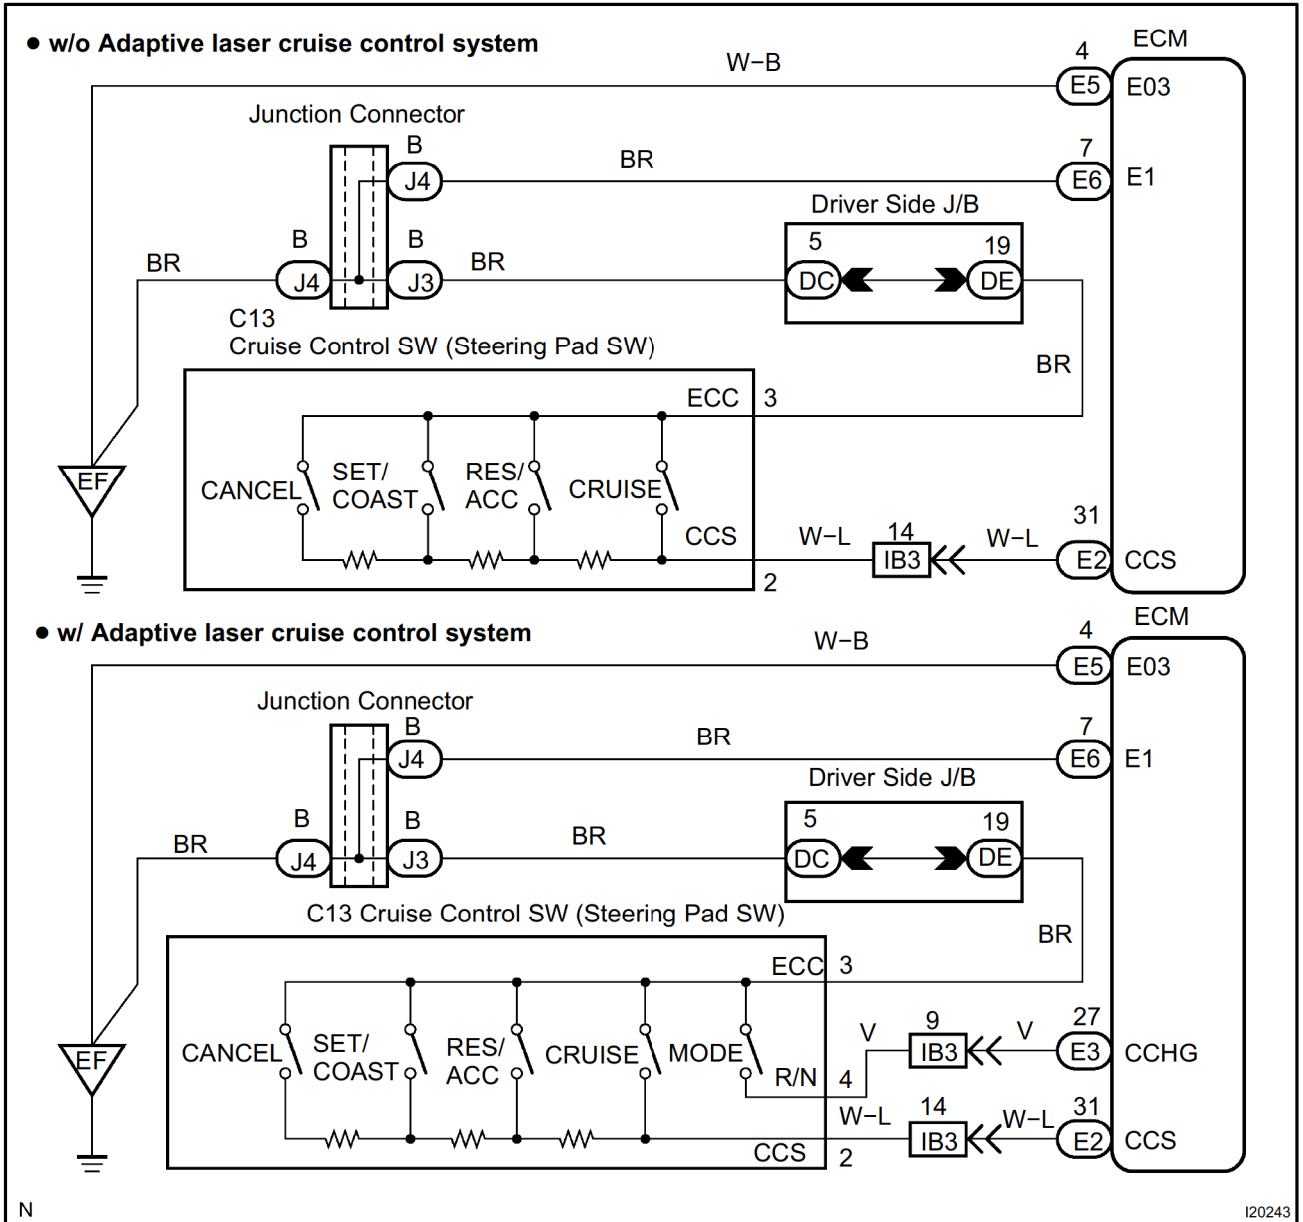

N

I20243

INSPECTION PROCEDURE

HINT:

In case of using the LEXUS hand-held tester, start the inspection from step 1 and in case of not using the LEXUS hand-held tester, start from step 2.

1 Check cruise control switch using LEXUS hand-held tester.

PREPARATION:

Connect the LEXUS hand-held tester to the DLC3.

CHECK:

Check the cruise control switch using DATA LIST.

OK

Proceed to next circuit inspection shown on problem symptom table (See page [DI-908](#)).

NG

2 Check voltage between terminals CCS of ECM connector and body ground.

PREPARATION:

- Remove the ECM with the connector still connected.
- Turn the ignition switch ON.

CHECK:



Measure voltage between terminals CCS of ECM connector and body ground, when each of the SET/COAST, RESUME/ACCEL and CANCEL is turned ON.

Switch position	Voltage (V)
Neutral	10 -16 V
RES/ACC	2.4 - 3.8 V
SET/COAST	4.7 - 6.9 V
CANCEL	6.9 - 9.8 V

NG

Proceed to next circuit inspection shown in problem symptoms table (See page [DI-908](#)).

 
OK

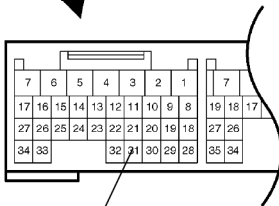

CCS

120483

3 Check control switch continuity.

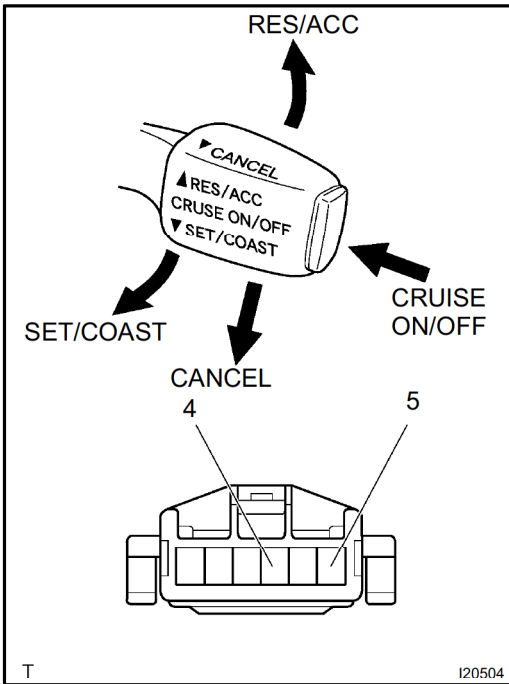

PREPARATION:

- (a) Remove the steering wheel center pad.
- (b) Disconnect the control switch connector.

CHECK:



Measure resistance between terminals 4 and 5 of the control switch connector when the control switch is operated.

Switch position	Resistance (Ω)
Neutral	∞ (No continuity)
CRUISE	0 (Continuity)
RES/ACC	220 - 260
SET/COAST	600 - 660
CANCEL	1,500 - 1,600

OK

NG Replace control switch.

4 Check MODE switch continuity.

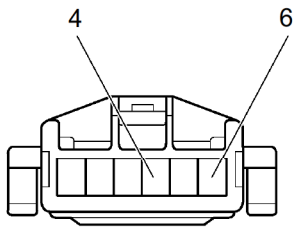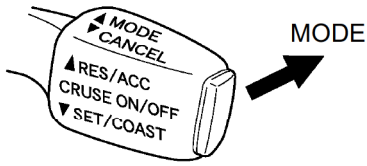

PREPARATION:

- Remove steering wheel center pad. (See page [SR-15](#))
- Disconnect the control switch connector.

CHECK:

Check continuity between terminals 4 and 6 of control switch connector when main switch is held ON and OFF.

Switch position	Tester connection	Specified condition
OFF	-	No continuity
MODE	4 - 6	Continuity

NG

Replace control switch.

OK

5 Check wire harness and connector between ECM and cruise control switch, cruise control switch and body ground (See page [IN-34](#)).

NG

Repair or replace wire harness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-908](#)).