


DTC	C1776 / 76, C1794 / 94	Vehicle Speed Sensor Circuit
------------	-------------------------------	-------------------------------------

CIRCUIT DESCRIPTION


The ABS speed sensor detects the wheel speed and sends the appropriate signals through the skid control ECU to the suspension control ECU.

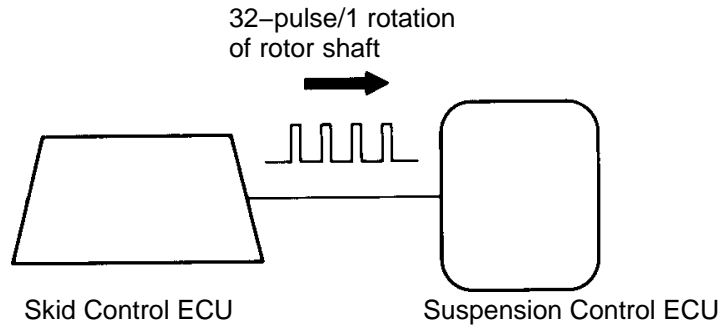

F02803

DTC No.	DTC Detecting Condition	Trouble Area
C1776 / 76	Vehicle speed signal malfunction	<ul style="list-style-type: none"> • ABS speed sensor • Vehicle speed sensor circuit
C1794 / 94	Vehicle speed signal of 12 mph (20 km/h) or more	<ul style="list-style-type: none"> • Skid control ECU • Suspension control ECU

WIRING DIAGRAM

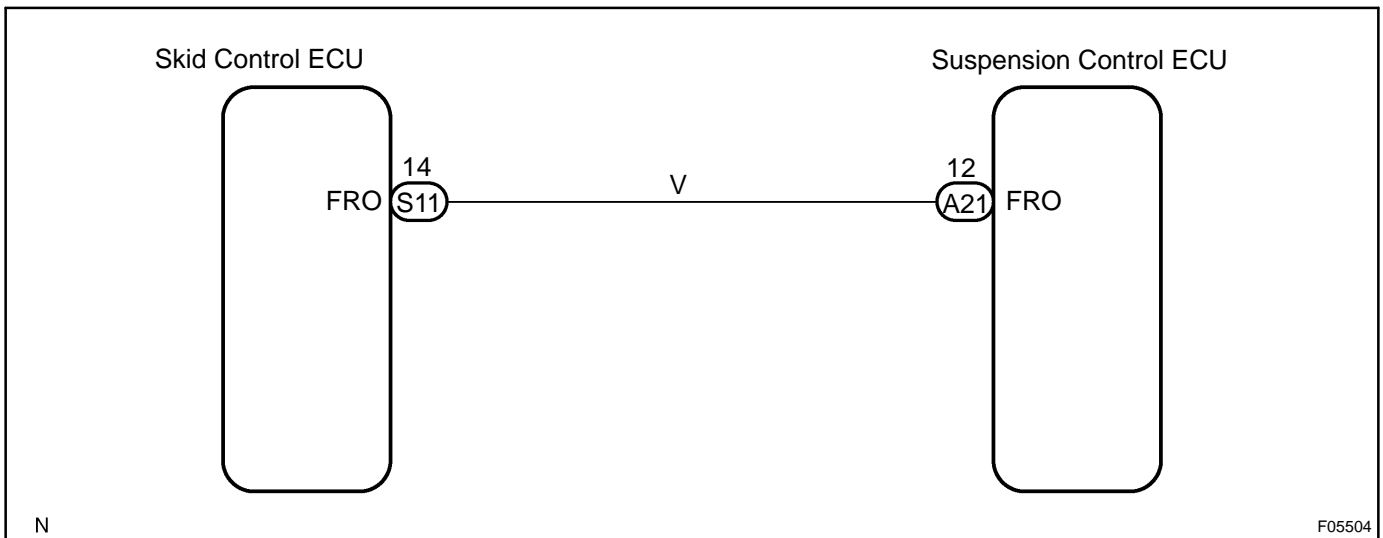

INSPECTION PROCEDURE

1	Check whether or not the skid control ECU outputs DTC C0200 / 31.
----------	--

Check DTC on page [DI-411](#).

NG

Check vehicle speed sensor circuit (See page [DI-411](#)).

OK

2	Check for open and short circuit in harness and connector between suspension control ECU and skid control ECU (See page IN-34).
----------	--

NG

Replace harness or connector.

OK

Check and replace suspension control ECU.