

CUSTOMIZE PARAMETERS

HINT:

The following items can be customized.

NOTICE:

- **When the customer requests a change in a function, first make sure that the function(s) can be customized.**
- **Be sure to record the current settings before customizing.**
- **When troubleshooting a function, first make sure that the function is not set to OFF.**

Wireless door lock:

Display (Item)	Default	Contents	Setting
WIRELESS OPER (Wireless door lock control function)	ON	Function that turns wireless door lock function ON/OFF.	ON/OFF
HAZARD ANS BACK (Hazards answer-back for wireless door lock operation)	ON	When LOCK switch on transmitter is pressed, this function illuminates all hazard warning lamps once. When unlock switch is pressed, all hazard warning lamps illuminate twice.	ON/OFF
DOWN/WIRELESS (Wireless window and sliding roof open control function)	ON	When UNLOCK switch on transmitter is held for 3 seconds, this function opens all door windows and sliding roof.	ON/OFF
OPEN DOOR WARN (Open door warning)	ON	If door is not completely closed and transmitter LOCK switch is pressed, this function sounds a buzzer for 10 seconds.	ON/OFF
AUTO LOCK DELAY (Auto lock time)	30 s	This function controls amount of time from unlocking doors to automatic re-locking function.	30 s/60 s
TRUNK LID OPER (Luggage compartment door open function)	0.8s PR	This function changes transmitter operation method for opening luggage compartment door.	1 time/2 times/0.8s PR/OFF
UNLOCK / 2OPER (Wireless unlock operated twice)	D_door	When UNLOCK switch is pressed once, this function unlocks only designated door. When unlock switch is pressed again within 3 seconds, all doors unlock. If setting is on ALL, pressing UNLOCK switch once unlocks all doors.	ALL/D_door/D_side
ALARM FUNCTION (Panic function)	ON	Function that operates theft deterrent system when transmitter LOCK (PANIC) switch is held for 3 seconds.	ON/OFF