

CUSTOMIZE PARAMETERS

HINT:

The following items can be customized.

NOTICE:

- When the customer requests a change in a function, first make sure that the function(s) can be customized.
- Be sure to record the current settings before customizing.
- When troubleshooting a function, first make sure that the function is not set to OFF.

Theft warning ECU:

Display (Item)	Default	Contents	Setting
SMART IGNITION (Smart ignition)	Fr & Rr	Function to choose available areas for smart key to start engine and cancel steering LOCK.	Front/Fr & Rr
TRANSMIT INTVAL (Transmission interval)	300 ms	Function to set smart key signal interval transmitted from outside of vehicle when vehicle is parked.	150 ms/300 ms/450 ms /600 ms
SMART TRUNK (Smart trunk)	ON	Function that opens trunk with smart key.	ON/OFF
SMART TRNK-K IN (Smart trunk key inside)	OFF	Function that opens trunk automatically when trunk is closed with smart key left inside. If owner forgets that trunk is opened automatically by this function, it is possible vehicle may be stolen.	ON/OFF
DOR OP-CL BUZ (Door open-close buzzer)	ON	Function that makes warning available when smart key is taken outside vehicle, any door is open, shift position is P and ignition switch is ACC or ON (engine is not running).	ON/OFF
HALF LOCK BUZ (Half lock buzzer)	ON	Function that makes warning available for locking doors with smart key when doors are open.	ON/OFF
KEY BATTERY BUZ (Key battery buzzer)	ON	Function that makes warning available when smart key cannot be identified.	ON/OFF
KEY NO FIT BUZ (Key no fit buzzer)	OFF	Function that makes warning available when smart key cannot be identified.	ON/OFF
SMART BUZ NUM (Smart buzzer number)	3 TIMES	Function that sets number of times wireless buzzer sounds, which warns ignition switch is still ON.	10 TIMES/7 TIMES /5 TIMES /3 TIMES /0 TIME
SMART BUZ VOL (Smart buzzer volume)	MAX	Function that sets sound volume of wireless buzzer, which warns ignition switch is still ON.	MAX/MID 3/MID 2/MID 1/MIN/OFF
BUZZER LENGTH (Buzzer length)	2 s	Function that makes warning available when smart key is taken outside vehicle, all doors are closed, trigger switch is on, shift position is P, ignition switch is ACC or ON.	2 s/1 s/0 s/OFF
P-ON D-CL BUZ (Push-on door-close buzzer)	ON	Function that makes warning available when smart key is taken outside vehicle, driver door is open or closed, shift position is not P and ignition switch is ACC or ON.	ON/OFF
KEY IN LOCK BUZ (Key inside lock buzzer)	2 s	Function that makes warning available when doors are locked with trigger switch with smart key left inside vehicle.	2 s/1 s/0 s/OFF
KEY TAKEOUT BUZ (Key take out buzzer)	OFF	Function that sets interval of searching key inside vehicle and sounds buzzer when key is found inside vehicle.	300 s/60 s/30 s/10 s/ 5 s/3 s/OFF

Meter ECU:

Display (Item)	Default	Contents	Setting
KEY REMND VOLUM (Key reminder buzzer volume)	LARGE	Function that changes volume of key reminder buzzer.	LARGE/MEDIUM/SMALL
KEY REMND SOUND (Key reminder buzzer sound)	NORMAL	Function that changes frequency of key reminder buzzer.	NORMAL/FAST/SLOW