

1UR-FSE EMISSION CONTROL > PCV VALVE > INSTALLATION**1. INSTALL PCV VALVE**

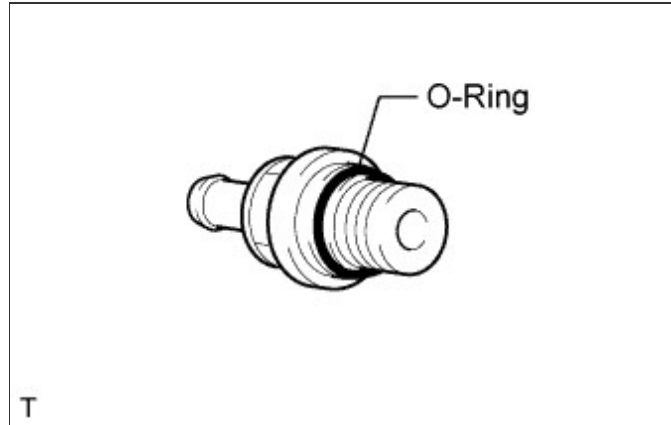
- a. Apply a light coat of engine oil to the O-ring.
- b. Install the PCV valve.

Torque:

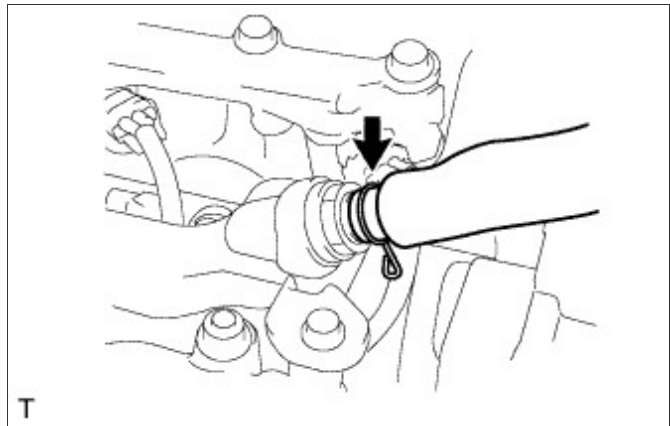
3.5 N*m{ 36 kgf*cm , 31 in.*lbf }

HINT:

- When reusing the PCV valve, inspect the O-ring.
- If the O-ring has scratches or cuts, replace the PCV valve.

**2. INSTALL PCV VALVE HOSE**

- a. Install the hose to the PCV valve.

**3. INSTALL INTAKE MANIFOLD**

- a. Install the intake manifold (Refer to [1UR-FSE INTAKE > INTAKE MANIFOLD > INSTALLATION\(200909 - \)](#)).

4. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**NOTICE:**

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Refer to [INTRODUCTION > REPAIR INSTRUCTION > INITIALIZATION\(200909 - \)](#)).

5. INSTALL COWL TOP VENTILATOR LOUVER RH

- a. Install the 6 clips and cowl top ventilator louver RH.

NOTICE:

Be sure to install the cowl top ventilator louver RH properly. If it is not installed properly, water may enter the engine room and cause malfunctions.

