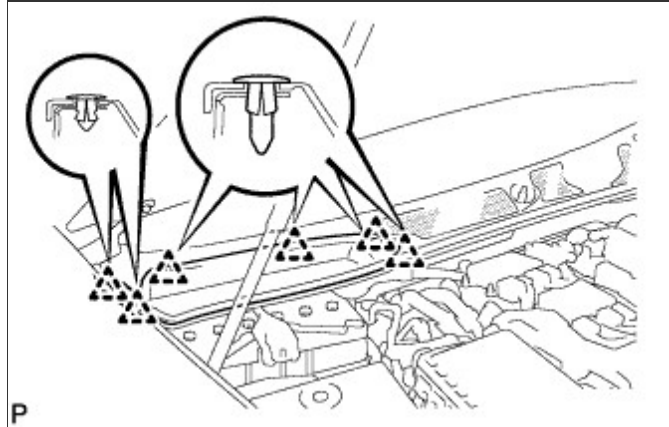


1UR-FSE EMISSION CONTROL > PCV VALVE > REMOVAL**1. REMOVE COWL TOP VENTILATOR LOUVER RH**

- a. Remove the 6 clips and cowl top ventilator louver RH.

**2. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL****CAUTION:**

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.

NOTICE:


After the engine switch is turned off, the HDD navigation system requires approximately 6 minutes to record various types of memory and settings. As a result, after turning the engine switch off, wait 6 minutes or more before disconnecting the cable from the negative (-) battery terminal.

3. REMOVE INTAKE MANIFOLD

- a. Remove the intake manifold (Refer to [1UR-FSE INTAKE > INTAKE MANIFOLD > REMOVAL \(200909 - \)](#)).

4. REMOVE PCV VALVE HOSE

- a. Remove the hose from the PCV valve.

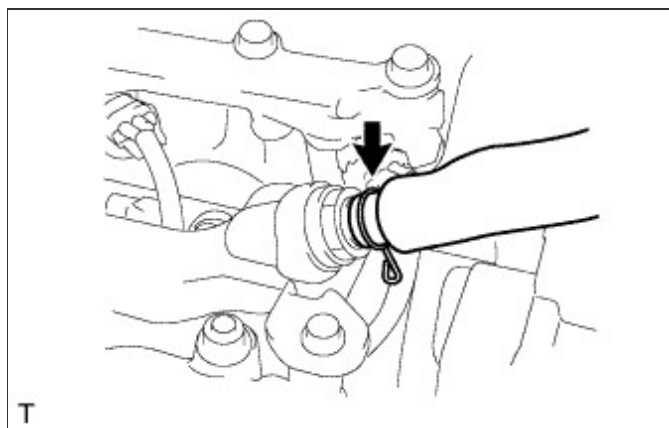**5. REMOVE PCV VALVE**

- a.** Remove the PCV valve.