


TURN SIGNAL AND HAZARD WARNING LIGHT

FROM POWER SOURCE SYSTEM (SEE PAGE 62)

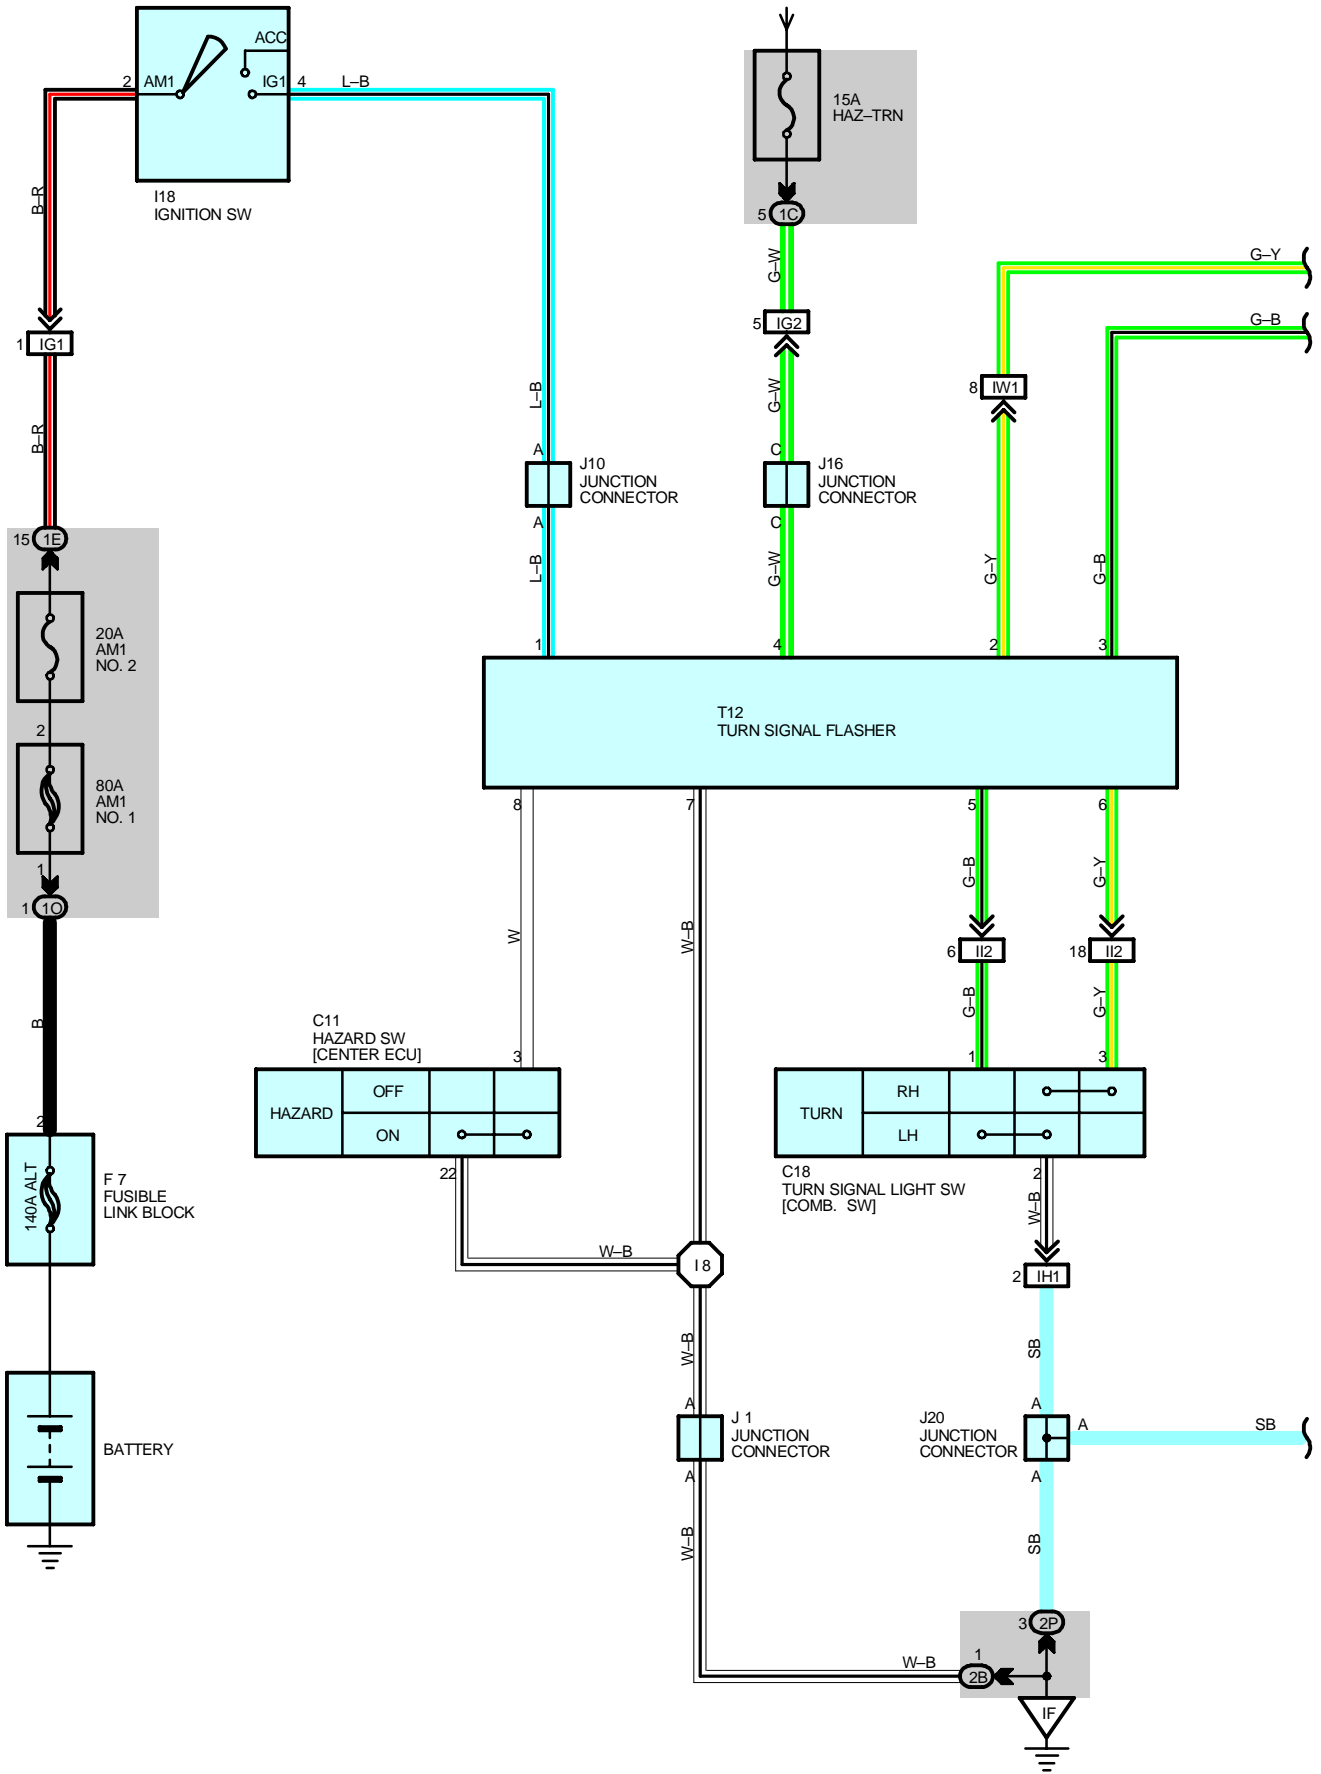

TURN SIGNAL AND HAZARD WARNING LIGHT

SERVICE HINTS

T12 TURN SIGNAL FLASHER

- 4-GROUND : Always approx. 12 volts
- 1-GROUND : Approx. 12 volts with ignition SW at **ON** or **ST** position
- 7-GROUND : Always continuity

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
C11	38	J1	39	J39	40
C17	38	J10	39	J40	40
C18	38	J16	39	R10	41
F4	36	J20	39	R13	41
F5	36	J23	39	T12	39
F7	36	J32	40	T15	41
I18	38	J33	40		

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	21	Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left)
1C		
1E		
1G	21	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
1J		
1O	21	Engine Room No.3 Wire and Engine Room J/B (Engine Compartment Left)
2B	24	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2F	24	Engine Room No.2 Wire and Cowl Side J/B LH (Left Kick Panel)
2O	24	Floor Wire and Cowl Side J/B LH (Left Kick Panel)
2P	26	Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)
3A	30	Engine Room No.2 Wire and Cowl Side J/B RH (Right Kick Panel)
3E	30	Floor No.2 Wire and Cowl Side J/B RH (Right Kick Panel)
3I	30	Instrument Panel Integration Wire and Cowl Side J/B RH (Right Kick Panel)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EA2	44	Engine Room Main Wire and Engine Room No.2 Wire (Engine Compartment Right)
IG1	48	Engine Room No.2 Wire and Dash Wire (Behind the Combination Meter)
IG2		
IH1	48	Instrument Panel Integration Wire and Column Wire (Near the Ignition SW)
I12	48	Column Wire and Dash Wire (Near the Ignition SW)
IW1	52	Engine Room No.2 Wire and Dash Wire (Behind the Glove Box)
BF3	54	Floor No.3 Wire and Floor Wire (Left Rear Side Quarter Panel)
BO1	56	Floor No.2 Wire and Floor No.3 Wire (Right Side of Rear Floor Crossmember)
BO3		

▽ : GROUND POINTS


Code	See Page	Ground Points Location
EA	44	Front Right Side of Fender Apron
EB		
IF	46	Set Bolt of Cowl Side J/B LH
BK	54	Front Side Under the Front Passenger's Seat
BM	54	Left Rear Side Quarter Panel




: SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E2	44	Engine Room No.2 Wire	B13	56	Floor No.2 Wire
I8	48	Dash Wire	B15	56	Floor No.3 Wire


C11

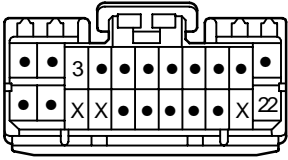


C17

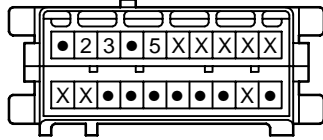


C18

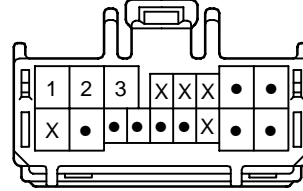

F4
GRAY

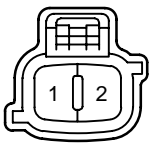


F5
GRAY

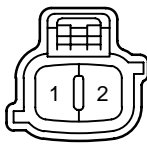


F7

(See Page 34)

I18

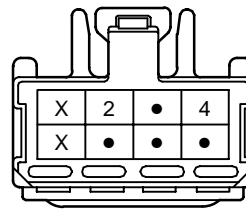


J1

 


(Hint : See Page 7)

 J10
BLUE




(Hint : See Page 7)

 J16
BLUE




(Hint : See Page 7)

J20
GRAY

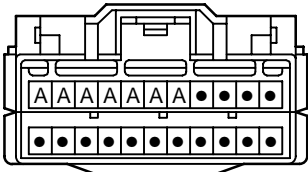


(Hint : See Page 7)

J23
BLUE

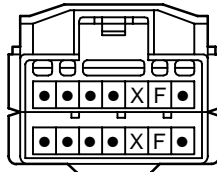


(Hint : See Page 7)

 J32




(Hint : See Page 7)

 J33
BLUE




(Hint : See Page 7)

 J39




(Hint : See Page 7)

 J40
BLUE




(Hint : See Page 7)

R10

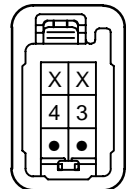

R13

 

T12
BLACK



T15
GRAY

