

Lexus Personalized Settings

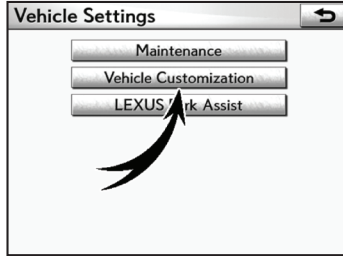 
Your vehicle includes a variety of electronic features that can be programmed to your preferences. Programming of these features is performed once at no charge by your Lexus Dealer provided you obtain the service at the 6 month/5,000-mile scheduled maintenance service.



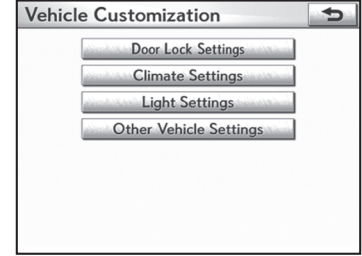 
It is also possible to customize certain vehicle features yourself using the navigation system.



STEP 1 Press the **SETUP** panel button followed by 



STEP 2 Touch **Vehicle Customization**.

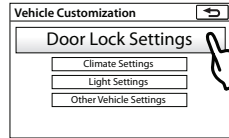 

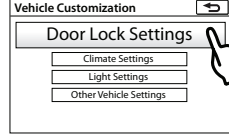 

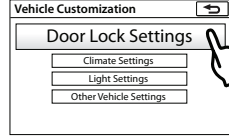 

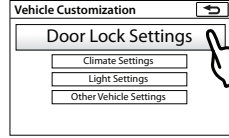 

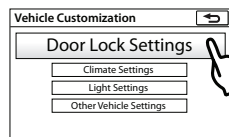 

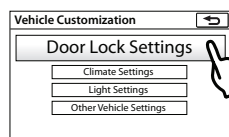 



STEP 3 Touch the desired category. Scroll to specific customization setting.

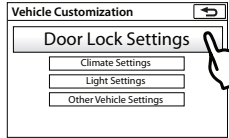 

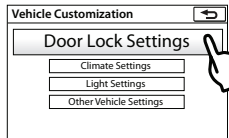 

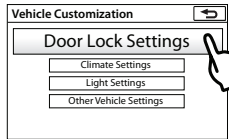 

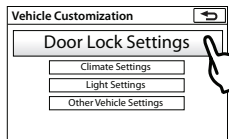 


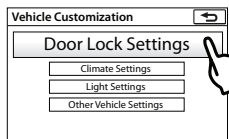 


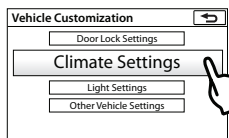 

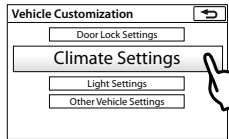 


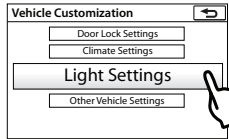 

Vehicle must be in "ON" mode to program personalized settings.

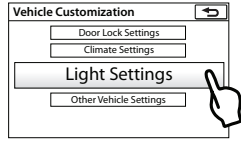 

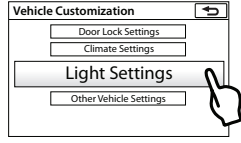 

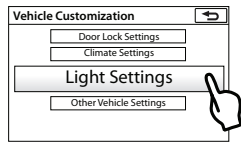 

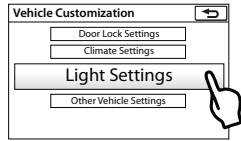 

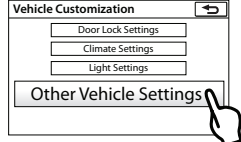 

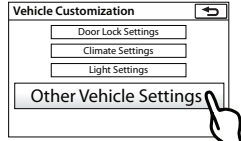 



After changing the settings, touch .










Settings that can be customized by:










Door Lock Settings	Using the navigation system	Dealer
<p>1. Auto Lock by Speed When the vehicle reaches 13 mph:</p> <ul style="list-style-type: none"> <input type="checkbox"/> The doors will not lock. (Standard) = Off <input type="checkbox"/> All the doors will automatically lock. = On 		
<p>2. Auto Lock by Shift from P When the vehicle is taken out of park and placed into another range:</p> <ul style="list-style-type: none"> <input type="checkbox"/> The doors, if unlocked, will not automatically lock. = Off <input type="checkbox"/> The doors automatically lock. (Standard) = On 		
<p>3. Auto Unlock by Shift to P When the engine is running and the vehicle is placed into park:</p> <ul style="list-style-type: none"> <input type="checkbox"/> All the doors will remain locked. = Off <input type="checkbox"/> All the doors will automatically unlock. (Standard) = On 		
<p>4. Auto Unlock by Driver Door When the vehicle is turned off and the driver door is opened within 10 seconds:</p> <ul style="list-style-type: none"> <input type="checkbox"/> All of the remaining doors will remain locked. (Standard) = Off <input type="checkbox"/> All of the remaining doors will automatically unlock. = On 		
<p>5. Unlock on Second Key Turn When using the mechanical key to unlock the doors:</p> <ul style="list-style-type: none"> <input type="checkbox"/> Turning the key one time will unlock all doors. = Off <input type="checkbox"/> Turning the key one time unlocks the driver door, and two times unlocks all doors. (Standard) = On 		
<p>6. Remote 2-Press Unlock When using the electronic key to unlock the doors:</p> <ul style="list-style-type: none"> <input type="checkbox"/> Pressing the unlock button one time will unlock all doors. = Off <input type="checkbox"/> Pressing the unlock button one time unlocks the driver door, and two times unlocks all doors. (Standard) = On 		

LPS options were correct at time of development. All options are subject to change without prior notice.





Door Lock Settings (cont'd)	Using the navigation system	Dealer
<p>7. Select Doors to Unlock When pressing the unlock button one time on the electronic key: <input type="checkbox"/> All doors will unlock (Option # 6 Remote 2-Press Unlock must be Off). = All <input type="checkbox"/> Only driver door unlocks (Option # 6 Remote 2-Press Unlock must be On). (Standard) = Driver</p>		
<p>8. Access System with Elec. Key When unlocking the doors: <input type="checkbox"/> Deactivates SmartAccess, only accessible using elec. key unlock button. = Off <input type="checkbox"/> Use SmartAccess (touch door handle) or remote buttons. (Standard)= On</p>		
<p>9. Auto Relock Timer When the unlock button on the electronic key is pressed and the doors are not opened: <input type="checkbox"/> The doors will automatically re-lock in 30 seconds. <input type="checkbox"/> The doors will automatically re-lock in 60 seconds. (Standard) <input type="checkbox"/> The doors will automatically re-lock in 120 seconds.</p>		
<p>10. Lock/Unlock Feedback-Lights Using the electronic key, the following functions can be programmed: <input type="checkbox"/> Press the lock/unlock button and the lights will not flash. = Off <input type="checkbox"/> Press the lock/unlock button and the lights will flash. (Standard) = On</p>		
<p>11. Lock/Unlock Feedback-Tone When the lock button is pressed on the electronic key, the system volume can be programmed as follows:</p> <p>  Loudest (Standard) Level 6 Level 5 Level 4 Level 3 Level 2 Level 1 OFF </p>		
<p>Climate Settings</p> <p>12. Smog Sensor Sensitivity When in AUTO recirculation mode, the sensor will determine when to switch from outside air to recirculated air based on outside air quality:</p> <p>  lowest sensitivity sensitivity 2 sensitivity 3 normal (standard) sensitivity 5 sensitivity 6 highest sensitivity </p>		
<p>13. Auto A/C Mode When Auto A/C is selected: <input type="checkbox"/> It will automatically engage the air conditioner compressor to reach the set temperature. (Standard) = On <input type="checkbox"/> It will automatically achieve a set temperature, warm or cool, without engaging the air conditioner compressor.* = Off * Note: The AC compressor will be engaged when the auto AC button is pressed a second time.</p>		
<p>Light Settings</p> <p>14. Headlamps-Sensitivity ON When driving the vehicle, the front headlights can be programmed to turn ON under darker or lighter ambient light conditions. (Headlight switch must be in "AUTO" mode):</p> <p>  very dark dark normal (standard) light very light </p>		

Light Settings (cont'd)	Using the navigation system	Dealer
<p>15. Headlamps Auto-OFF timer After turning off the ignition and all the doors are closed, if the headlights are in the AUTO position:</p> <ul style="list-style-type: none"> <input type="checkbox"/> The headlights will turn off immediately, when the vehicle is turned off and the driver door is opened. <input type="checkbox"/> The headlights will turn off in 30 seconds. (Standard) <input type="checkbox"/> The headlights will turn off in 60 seconds. <input type="checkbox"/> The headlights will turn off in 90 seconds. 		
<p>16. Daytime Running Lights Illumination of daytime running lights:</p> <ul style="list-style-type: none"> <input type="checkbox"/> OFF. <input type="checkbox"/> ON. (Standard) 		
<p>17. Interior Lights Off Timer After closing the door, the interior lights can be adjusted to stay on for the following:</p> <ul style="list-style-type: none"> <input type="checkbox"/> 15 seconds. (Standard) <input type="checkbox"/> 7.5 seconds. <input type="checkbox"/> 30 seconds. 		
<p>18. Exterior Lights Off Timer After closing the door, the exterior lights can be adjusted to stay on for the following:</p> <ul style="list-style-type: none"> <input type="checkbox"/> 15 seconds. (Standard) <input type="checkbox"/> 7.5 seconds. <input type="checkbox"/> 30 seconds. <input type="checkbox"/> 0 seconds. 		
<p>Other Vehicle Settings</p>		
<p>19. Driver's Seat Easy Exit When the vehicle is placed in park, the ignition turned off, the driver seat can be set to the following:</p> <ul style="list-style-type: none"> <input type="checkbox"/> Remain in the current position, as set by the driver. <input type="checkbox"/> Automatically move away from the steering wheel partially. (Standard) <input type="checkbox"/> Automatically move away from the steering wheel fully. 		
<p>20. Lane Change Signal Flashes Push the turn signal lever partway to signal a lane change, it will flash:</p> <p> <input type="checkbox"/> OFF <input type="checkbox"/> 3 Times (standard) <input type="checkbox"/> 5 Times <input type="checkbox"/> 7 Times <input type="checkbox"/> 9 Times <input type="checkbox"/> 11 Times </p>		
<p>Programmable by Dealer Only</p>		
<p>21. Instrument Dim. Sensitivity Level of light required to dim the instrument panel lights:</p> <p> <input type="checkbox"/> very dark <input type="checkbox"/> dark <input type="checkbox"/> normal (standard) <input type="checkbox"/> light <input type="checkbox"/> very light </p>	<p>_____</p>	 Dealer only
<p>22. Instrument Rest. Sensitivity Level of light required to brighten the instrument panel lights:</p> <p> <input type="checkbox"/> very light <input type="checkbox"/> light <input type="checkbox"/> normal (standard) <input type="checkbox"/> dark <input type="checkbox"/> very dark </p>	<p>_____</p>	 Dealer only

Programmable by Dealer Only (cont'd)	Using the navigation system	Dealer
	23. Automatic High Beam* Illumination of automatic high beam: <input type="checkbox"/> OFF. <input type="checkbox"/> ON. (Standard) * If equipped.	_____
24. Open Windows with Elec. Key When pressing the unlock button on the electronic key for 3 seconds: <input type="checkbox"/> The windows will not roll down. (Standard) = Off <input type="checkbox"/> All the windows will roll down. = On	_____	 Dealer only
25. Open Moonroof with Elec. Key When option #24 is on, the moonroof can be programmed for the following: <input type="checkbox"/> The moonroof will not open. = Off <input type="checkbox"/> The moonroof will open. = On	_____	 Dealer only
26. Slide/Tilt Moonroof with Elec. Key When option #24 and option #25 is on, the moonroof can be programmed for the following: <input type="checkbox"/> Slide (Standard) <input type="checkbox"/> Tilt.	_____	 Dealer only
27. Closing Windows with Lock Button When pressing the lock button on the door handle for 3 seconds: <input type="checkbox"/> The windows will not roll up. (Standard) = Off <input type="checkbox"/> The windows will roll up. = On	_____	 Dealer only
28. Closing Moonroof with Lock Button When option #24 and option #25 is on, pressing the lock button on the door handle for 3 seconds: <input type="checkbox"/> The moonroof will not close. = Off <input type="checkbox"/> The moonroof will close. (Standard) = On	_____	 Dealer only
29. Opening Windows using Key When using the mechanical key to operate the windows: <input type="checkbox"/> Turning the key right and holding the position for 2 seconds will not open the windows. (Standard) = Off <input type="checkbox"/> Turning the key right and holding the position for 2 seconds will open the windows. = On	_____	 Dealer only
30. Closing Windows using Key When using the mechanical key to operate the windows: <input type="checkbox"/> Turning the key left and holding the position for 2 seconds will not close the windows. (Standard) = Off <input type="checkbox"/> Turning the key left and holding the position for 2 seconds will close the windows. = On	_____	 Dealer only
31. Opening Moonroof using Key When option #29 is on, using the mechanical key to operate the moonroof: <input type="checkbox"/> Turning the key right and holding the position for 2 seconds will not open the moonroof. = Off <input type="checkbox"/> Turning the key right and holding the position for 2 seconds will open the moonroof. (Standard) = On	_____	 Dealer only
32. Slide/Tilt Moonroof using Key When option #29 and option #31 is on, the moonroof can be programmed for the following: <input type="checkbox"/> Slide (Standard) <input type="checkbox"/> Tilt.	_____	 Dealer only

<u>Programmable by Dealer Only (cont'd)</u>	Using the navigation system	Dealer
	<p>33. Closing Moonroof using Key When option #29 is on, using the mechanical key to operate the moonroof:</p> <ul style="list-style-type: none"> <input type="checkbox"/> Turning the key left and holding the position for 2 seconds will not close the moonroof. = Off <input type="checkbox"/> Turning the key left and holding the position for 2 seconds will close the moonroof. (Standard)= On 	_____
<p>34. Efficient Ventilation Mode When the front defogger is activated:</p> <ul style="list-style-type: none"> <input type="checkbox"/> It will automatically blow air onto the windshield without engaging the air conditioner compressor. = Off <input type="checkbox"/> It will automatically engage the air conditioner compressor to blow air onto the windshield. (Standard) = On 	_____	 Dealer only
<p>35. Tilt Away of Steering Wheel When the vehicle is placed in park, the ignition turned off, the steering wheel can be set to the following:</p> <ul style="list-style-type: none"> <input type="checkbox"/> Automatically move up and away from the driver position setting. (Standard) = On <input type="checkbox"/> Remain in the current position, as set by the driver. = Off 	_____	 Dealer only
<p>36. Interior light The interior light will illuminate when POWER is switched to OFF.</p> <ul style="list-style-type: none"> <input type="checkbox"/> ON. (Standard) <input type="checkbox"/> OFF. 	_____	 Dealer only
<p>37. Illumination of the interior cabin light when unlocking door When using the electronic key or mechanical key to unlock the door, the interior cabin light can be programmed for the following:</p> <ul style="list-style-type: none"> <input type="checkbox"/> The cabin light will illuminate. (Standard) = On <input type="checkbox"/> The cabin light will not illuminate. = Off 	_____	 Dealer only
<p>38. Illumination of the interior cabin light when approaching the vehicle When approaching the vehicle with the electronic key, the interior cabin light can be programmed for the following:</p> <ul style="list-style-type: none"> <input type="checkbox"/> The cabin light will illuminate. (Standard) = On <input type="checkbox"/> The cabin light will not illuminate. = Off 	_____	 Dealer only
<p>39. Foot lights When using the electronic key to unlock the doors:</p> <ul style="list-style-type: none"> <input type="checkbox"/> The outer foot lights will illuminate. (Standard) = On <input type="checkbox"/> The outer foot lights will not illuminate. = Off 	_____	 Dealer only
<p>40. Door lock buzzer When the lock button on the electronic key is pressed and a door is not fully closed:</p> <ul style="list-style-type: none"> <input type="checkbox"/> The buzzer will not sound. = Off <input type="checkbox"/> The buzzer will sound. (Standard) = On 	_____	 Dealer only
<p>41. Eco Driving Indicator Light The eco driving indicator light can be programmed for the following:</p> <ul style="list-style-type: none"> <input type="checkbox"/> ON. (Standard) <input type="checkbox"/> OFF. 	_____	 Dealer only
<p>42. Rear Door Chime When opening the rear door, the chime can be programmed for the following:</p> <ul style="list-style-type: none"> <input type="checkbox"/> OFF. (Standard) <input type="checkbox"/> ON. 	_____	 Dealer only

Settings that can be customized by:

<u>Programmable by Dealer Only (cont'd)</u>	Using the navigation system	Dealer
<p>43. Opening Rear Door using Elec. Key By pressing the back door opener button, located on the electronic key, the rear door will open. The opener button can be programmed as follows:</p> <ul style="list-style-type: none"> <input type="checkbox"/> Press button one time to open rear door. <input type="checkbox"/> Press button two times to open rear door. <input type="checkbox"/> Press and hold button for 0.8 seconds to open the rear door. (Standard) <input type="checkbox"/> The button can be turned off so the rear door cannot be opened using the electronic key. 	<p>_____</p>	 Dealer only
<p>44. Opening Rear Door using Back Door Button When pressing the back door opener button on the rear door, the back door opener button can be programmed for the following:</p> <ul style="list-style-type: none"> <input type="checkbox"/> Press button one time to open rear door. = Off <input type="checkbox"/> Press and hold the button for 0.8 seconds to open the rear door. (Standard) = On 	<p>_____</p>	 Dealer only
<p>45. Reverse-Linked Rear Wiper When the vehicle is placed into reverse, the rear window wiper can be programmed for the following:</p> <ul style="list-style-type: none"> <input type="checkbox"/> The rear window wiper will operate automatically. (Standard) = On <input type="checkbox"/> The rear window wiper will not operate automatically. = Off 	<p>_____</p>	 Dealer only
<p>46. Reverse-Linked Rear Wiper Operation When option #45 is on, the rear window wiper can be programmed for the following:</p> <ul style="list-style-type: none"> <input type="checkbox"/> Sweep once. (Standard) = On <input type="checkbox"/> Sweep continuously. = Off 	<p>_____</p>	 Dealer only

Date _____ Customer Signature _____

Repair Order Number (Dealer only) _____

Vehicle Identification Number (Dealer only) _____