

<b>Last Modified:</b> 11-28-2012	6.4 A	<b>Doc ID:</b> RM000000SRV00LX
<b>Model Year:</b> 2010	<b>Model:</b> IS350	<b>Prod Date Range:</b> [08/2009 - ]
<b>Title:</b> BRAKE: REAR BRAKE: REMOVAL; 2010 MY IS250 IS350 [08/2009 - ]		

## REMOVAL

### HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.

### 1. REMOVE REAR WHEEL


### 2. DRAIN BRAKE FLUID

### NOTICE:

If brake fluid leaks onto any painted surface, wash off or remove the brake fluid completely.

### 3. REMOVE REAR DISC BRAKE PAD WITH ANTI-SQUEAL SHIMS

(a) Disengage the both ends of the anti-squeal spring from the 2 brake pad holes, and turn the anti-squeal spring as shown in the illustration.

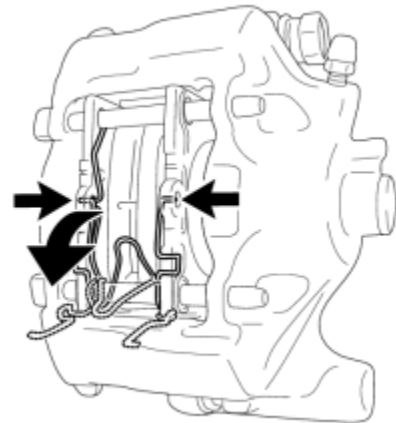


c

(b) Push the pin hold clip toward the brake rotor to disengage it from the brake pad, and then remove it from the 2 pad guide pins.


**NOTICE:**

Be sure to remove the pin hold clip as specified above.

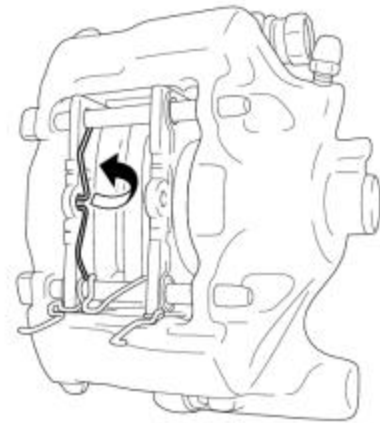

c

(c) Holding the anti-squeal spring, remove the 2 pad guide pins from the rear disc brake cylinder assembly.

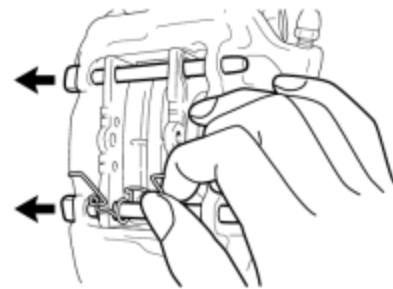

c

(d) Remove the anti-squeal spring from the rear disc brake cylinder assembly.


(e) Remove the 2 brake pads with the anti-squeal shims.

#### 4. REMOVE ANTI-SQUEAL SHIM

(a) Remove the 4 anti-squeal shims from each pad.

#### 5. DISCONNECT REAR LH FLEXIBLE HOSE


(a) Remove the union bolt and gasket from the rear disc brake cylinder assembly, then disconnect the flexible hose.

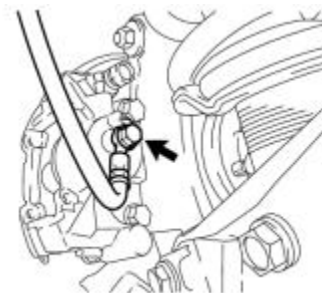

P

#### 6. REMOVE NO. 1 REAR DISC BRAKE CYLINDER SUPPORT PIN

(a) Remove the No. 1 cylinder support pin and tilt the disc brake cylinder assembly toward the rear of the vehicle.

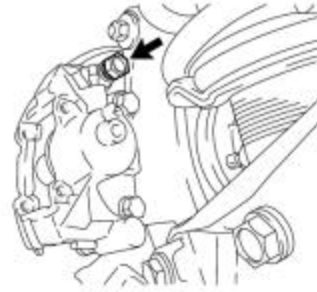

P

## 7. REMOVE REAR DISC BRAKE CYLINDER ASSEMBLY

(a) Remove the 2 bolts and cylinder assembly rear together with the caliper support bracket.

(b) Remove the 2 No. 1 caliper plates from the caliper support bracket.