

SERVICE HINTS

A10(A) ALTERNATOR

- (A) 1-GROUND : 13.9–15.1 VOLTS WITH ENGINE RUNNING AT 2000 RPM AND 25°C (77°F)
 13.5–14.3 VOLTS WITH ENGINE RUNNING AT 5000 RPM AND 115°C (239°F)
 (A) 2-GROUND : 0–4 VOLTS WITH IGNITION SW AT ON POSITION AND ENGINE NOT RUNNING

○ : PARTS LOCATION

CODE		SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
A10	A	26	C12	28		
A11	B	26	F9	26		

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	19	ENGINE COMPARTMENT LEFT

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1E	20	INSTRUMENT PANEL WIRE
1H	20	COWL WIRE
3D	22	INSTRUMENT PANEL WIRE


□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EB2	34	ENGINE WIRE AND ENGINE ROOM MAIN WIRE (FRONT SIDE OF R/B NO.2)
IG3	38	INSTRUMENT PANEL WIRE AND COWL WIRE (RIGHT KICK PANEL)
IJ1	36	ENGINE WIRE AND COWL WIRE (RIGHT KICK PANEL)
IJ2		


○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I14	38	COWL WIRE			


A10 (A) BLACK

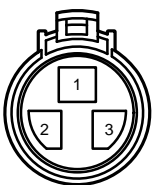

A11 (B)

 

C12

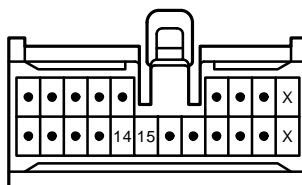

F9 BLACK

