

BLOWER UNIT

BLOWER UNIT REMOVAL

AC1LK-01


Installation is in the reverse order of removal.

1. **REMOVE INSTRUMENT PANEL AND REINFORCEMENT**
(See page [BO-66](#))
2. **REMOVE BLOWER UNIT**
 - (a) Disconnect the connectors.
 - (b) Remove the nut and wire harness bracket.
 - (c) Remove the screw and connector bracket.
 - (d) Remove the 2 bolts, nut and blower unit.

BLOWER UNIT DISASSEMBLY

AC1LL-01

Assembly is in the reverse order of disassembly.

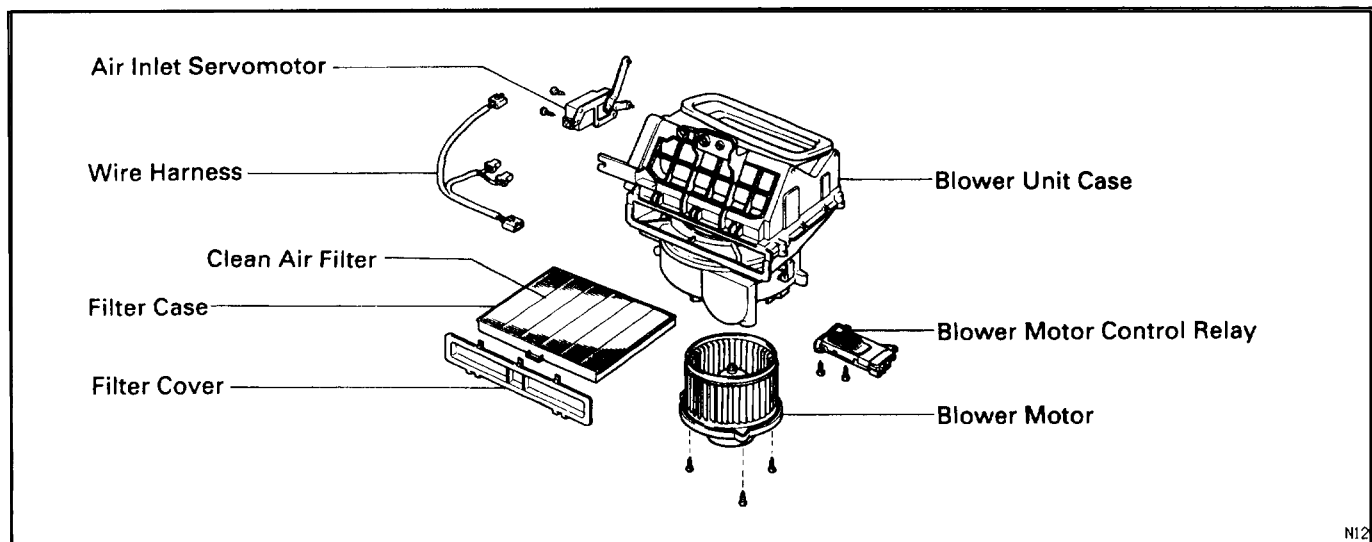

1. **REMOVE BLOWER MOTOR**
Remove the 3 screws and blower motor.
2. **REMOVE BLOWER MOTOR CONTROL RELAY**
 - (a) Disconnect the connectors.
 - (b) Remove the 2 screws and blower motor control relay.
3. **REMOVE AIR INLET SERVOMOTOR**
 - (a) Disconnect the connector.
 - (b) Remove the 2 screws and servomotor.
4. **REMOVE CLEAN AIR FILTER**