




INSTRUMENT PANEL COMPONENTS

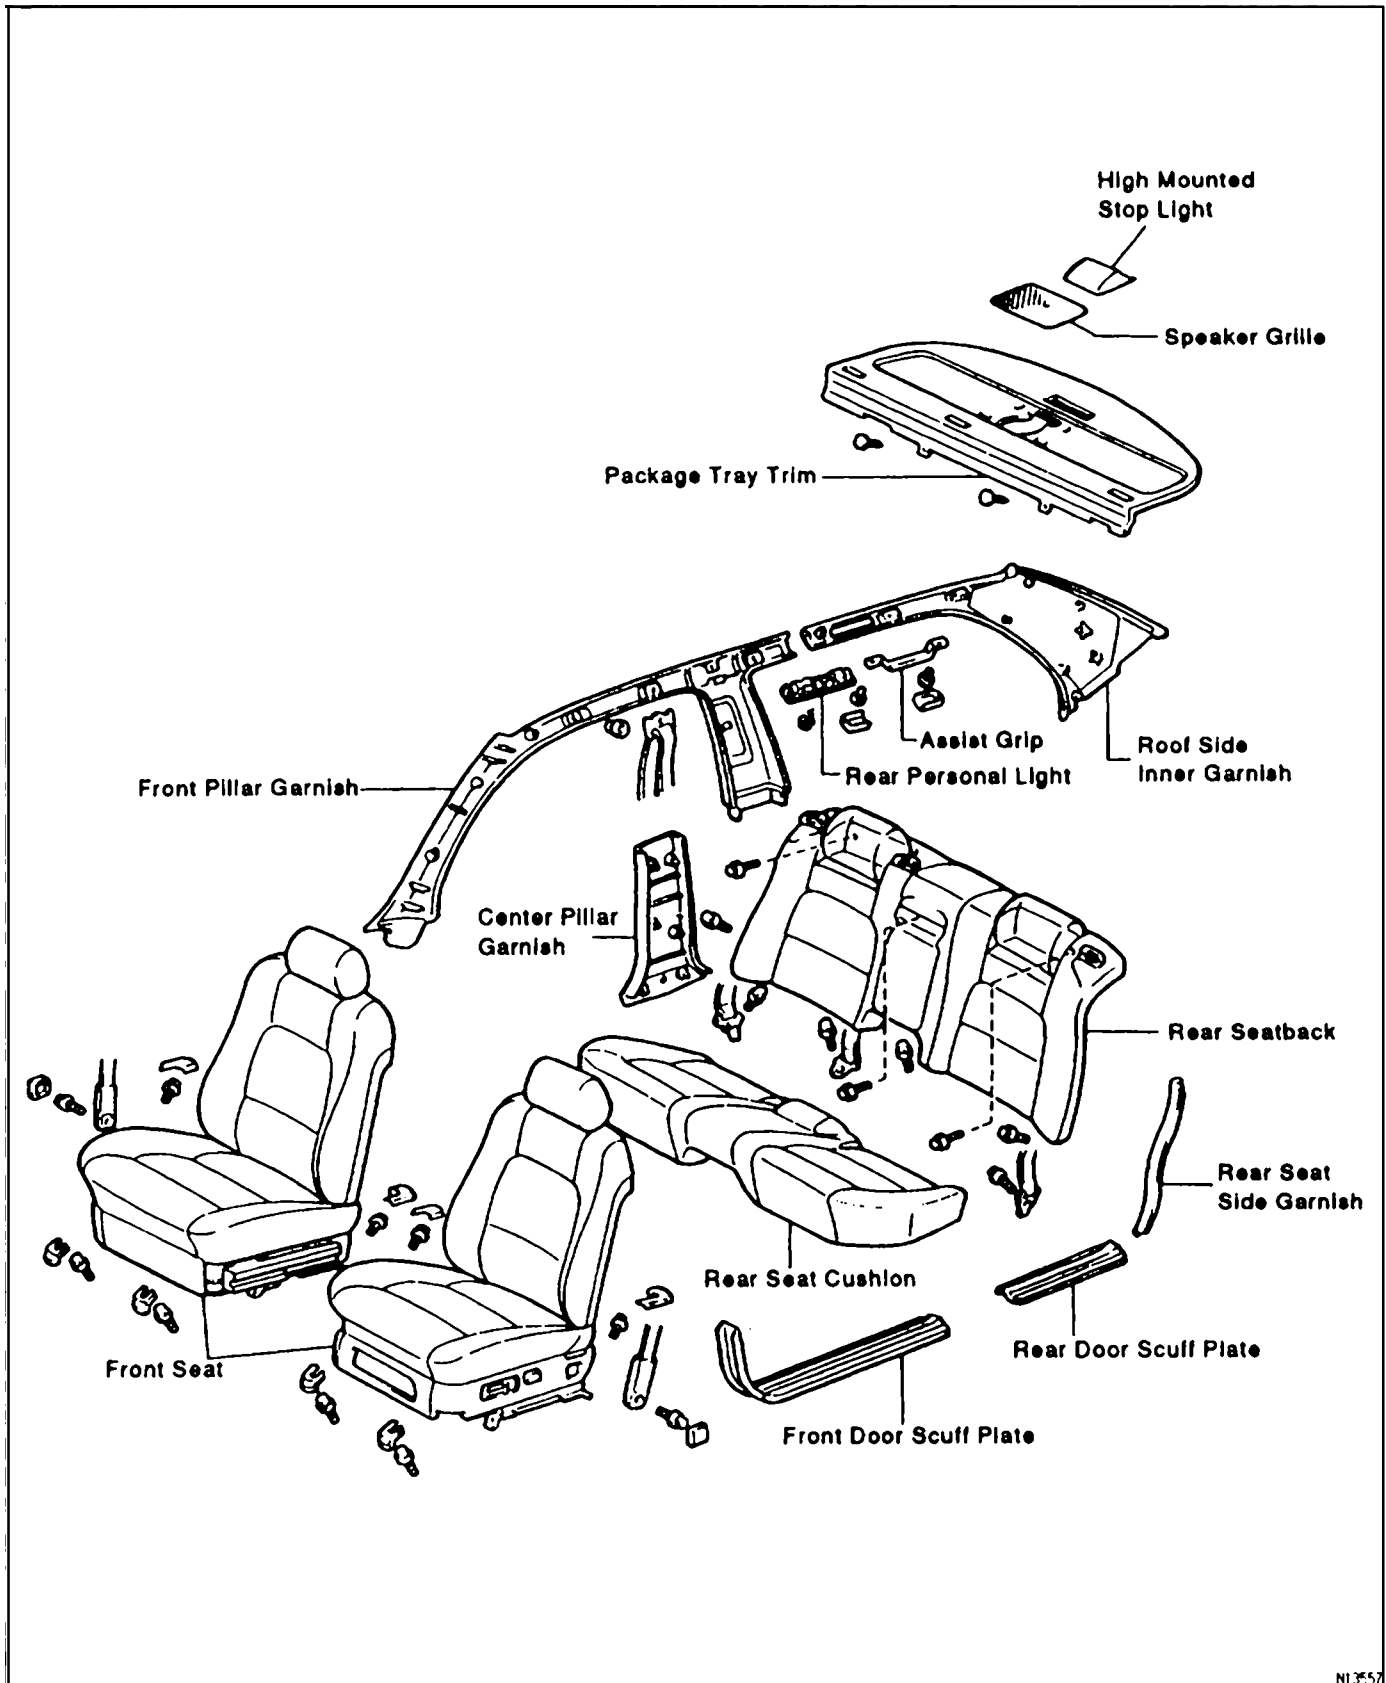

COMPONENTS (Cont'd)


 

 
 
 


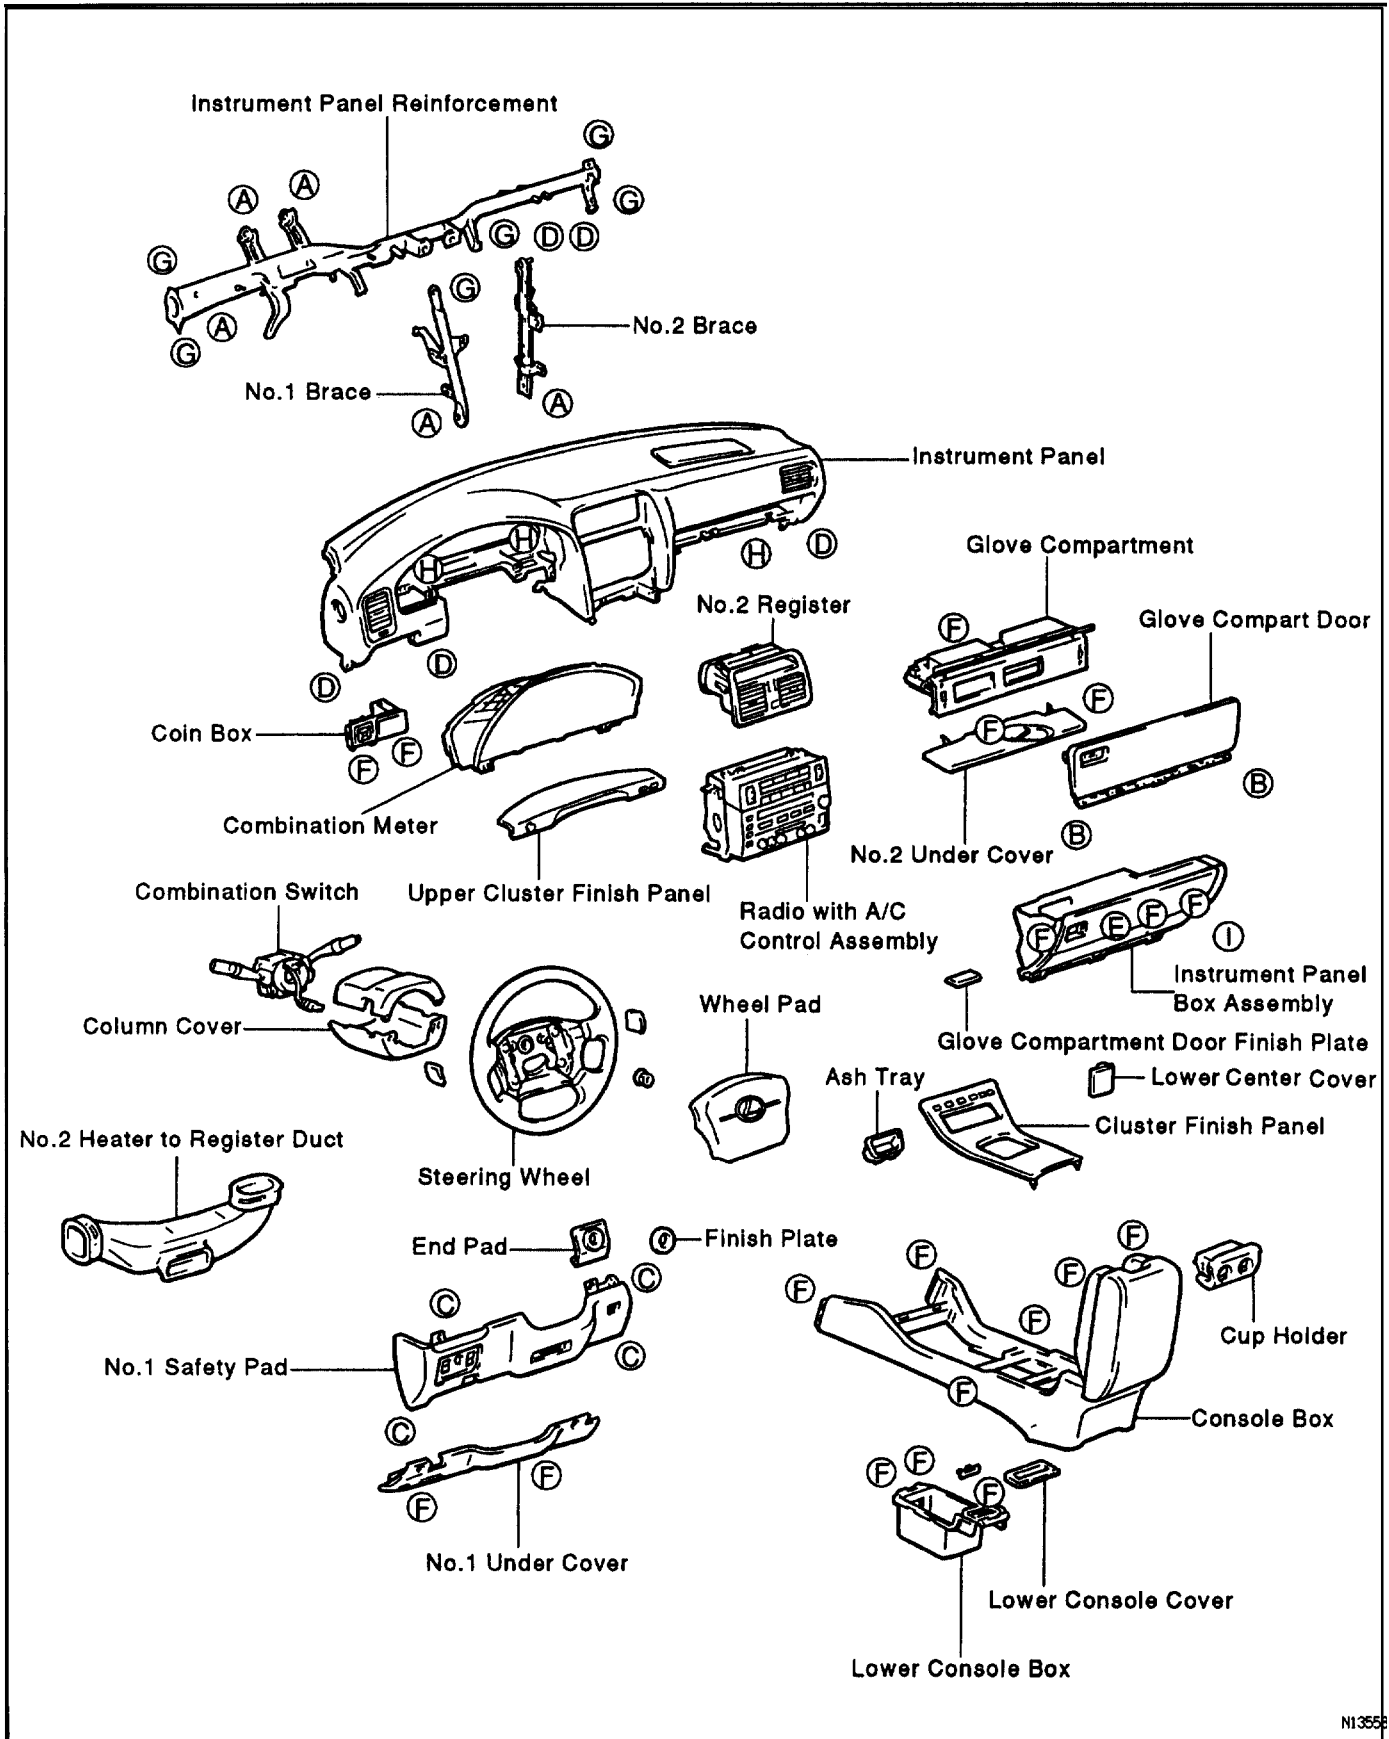

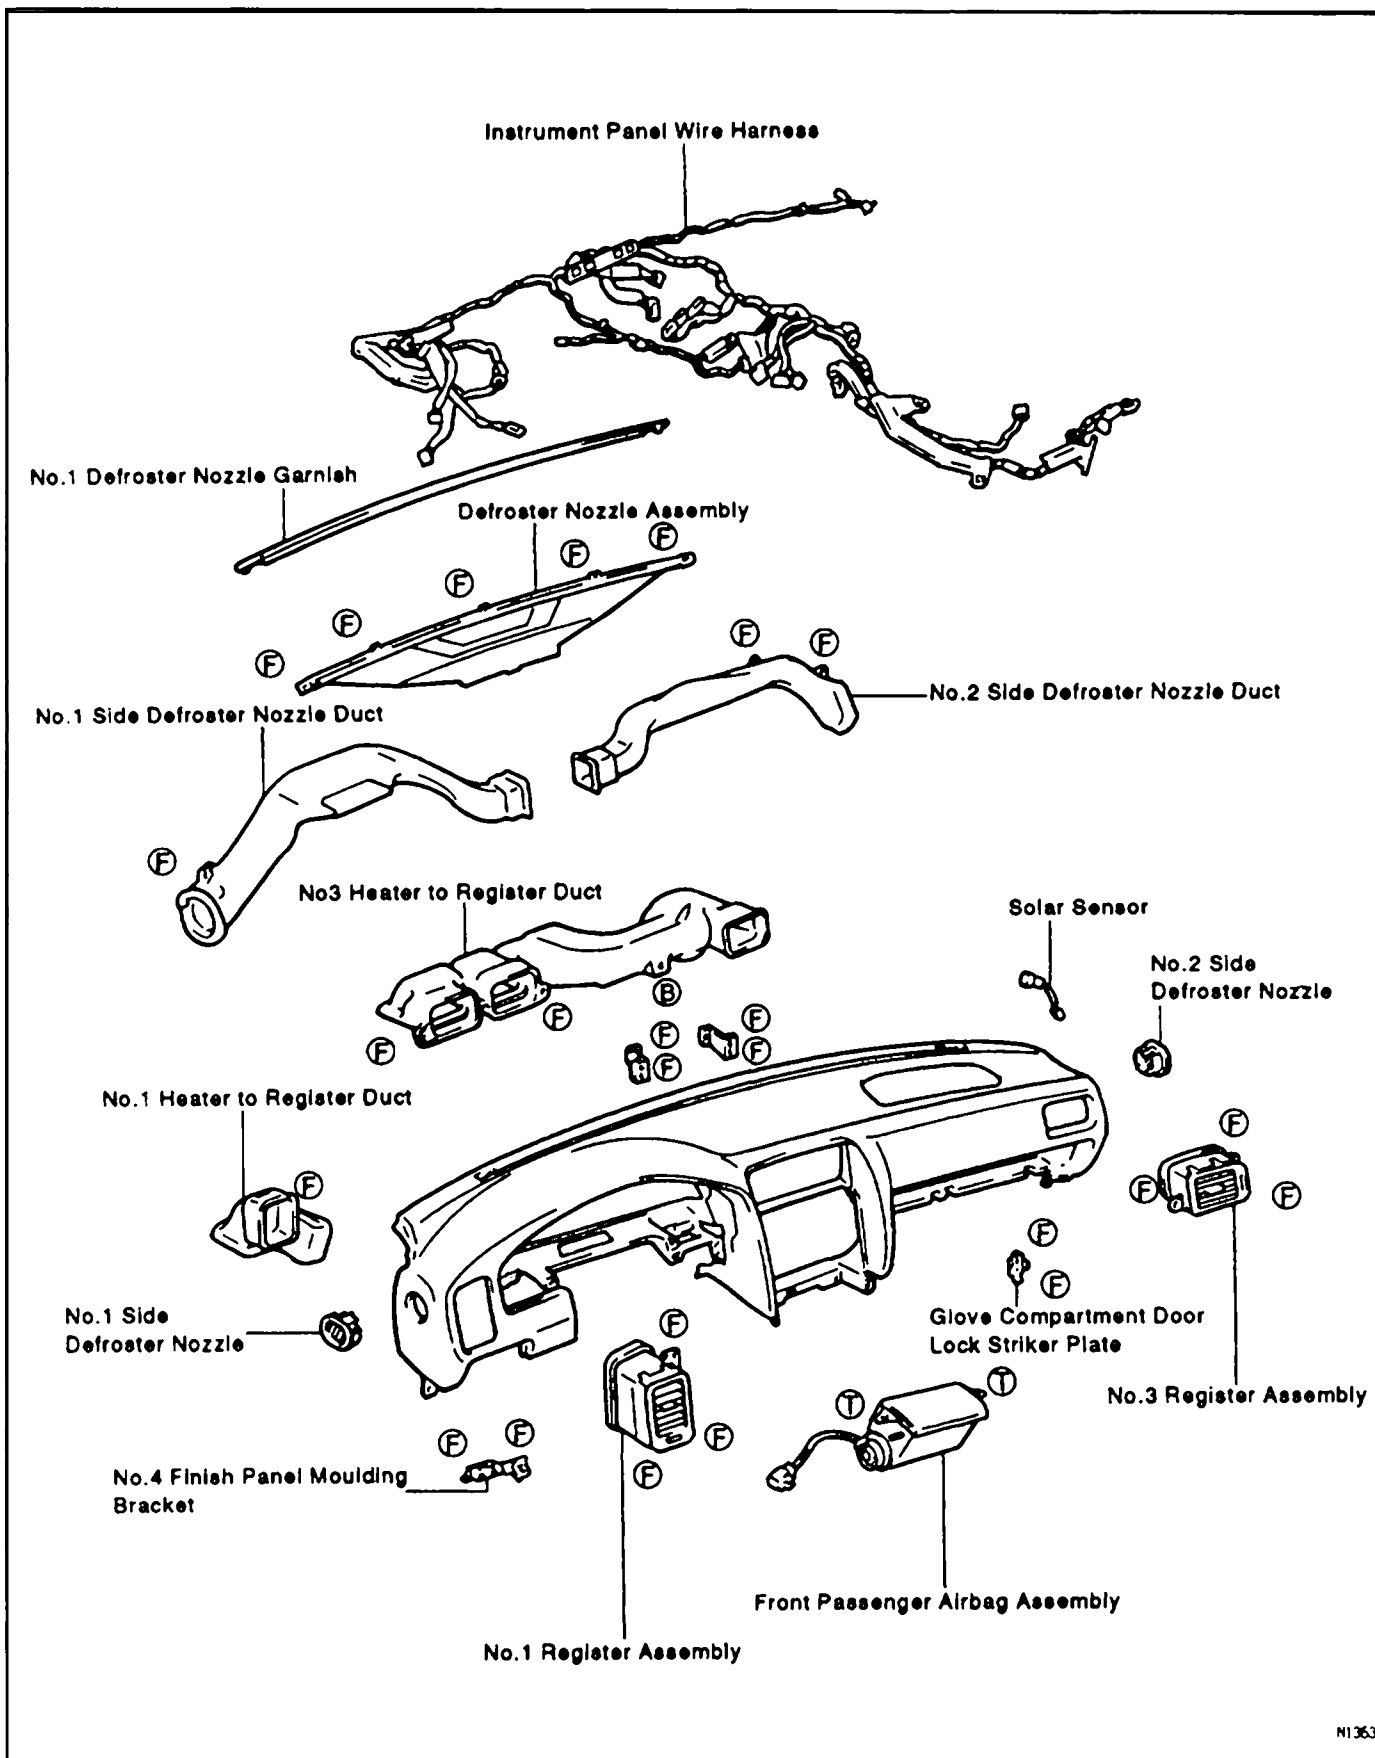
COMPONENTS (Cont'd)



HINT: Screw sizes in the illustration on the previous page are indicated using the code below for removal and installation of instrument panel.

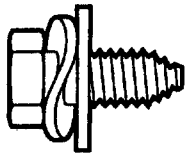mm (in.)

	Shape	Size		Shape	Size		Shape	Size
Ⓐ		$\varnothing = 8$ (0.31) L = 20 (0.79)	Ⓑ		$\varnothing = 6$ (0.24) L = 25 (0.98)	Ⓒ		$\varnothing = 6$ (0.24) L = 20 (0.79)
Ⓓ		$\varnothing = 6$ (0.24) L = 18 (0.71)	Ⓔ		$\varnothing = 5$ (0.20) L = 16 (0.63)	Ⓕ		$\varnothing = 5$ (0.20) L = 14 (0.55)
Ⓖ		$\varnothing = 8$ (0.31)	Ⓖ		$\varnothing = 6$ (0.24)	Ⓗ		$\varnothing = 6$ (0.24)

INSTRUMENT PANEL REMOVAL


BO1Q8-01

Installation is in the reverse order of removal.


1. **TILT DOWN AND PULL OUT STEERING WHEEL**
2. **DISCONNECT BATTERY CABLE FROM NEGATIVE (-) TERMINAL**

3. REMOVE THESE PARTS:


- (a) Front seat
Torque: 37 N·m (375 kgf·cm, 27 ft·lbf)
- (b) Rear seat cushion
- (c) Rear seat belt lower side bolt
Torque: 43 N·m (440 kgf·cm, 32 ft·lbf)
- (d) Rear seatback
Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)
- (e) Front door scuff plate
- (f) Rear door scuff plate
- (g) Rear seat side garnish

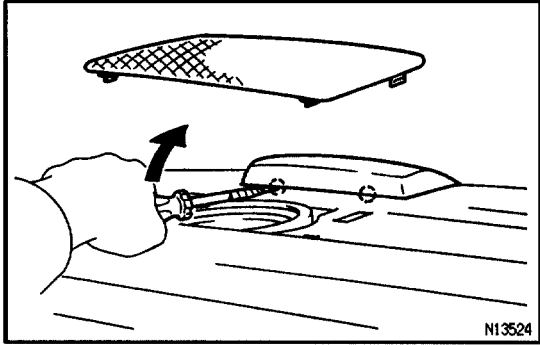


- (h) High mounted stop light
- (i) Speaker grille
- (j) Package tray trim
- (k) Assist grip

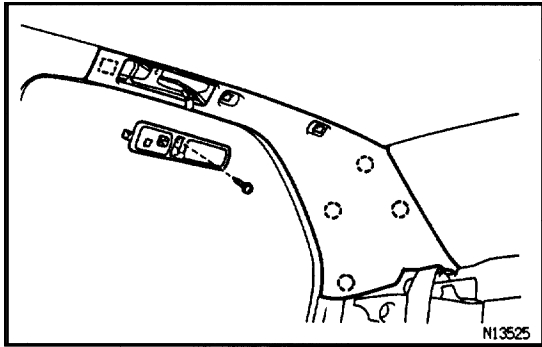


- (l) Rear personal light
- (m) Roof side inner garnish
- (n) Center pillar garnish

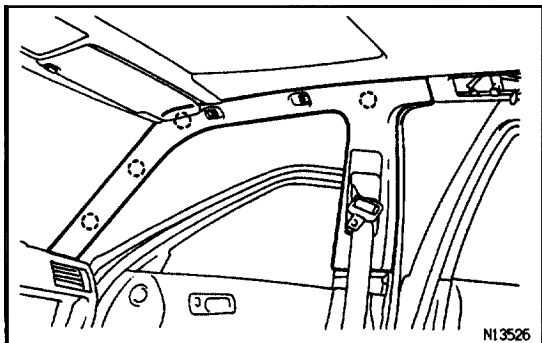

- (o) Front pillar garnish
4. **REMOVE STEERING COLUMN COVER**
5. **REMOVE STEERING WHEEL**
(See page [SR-13](#))

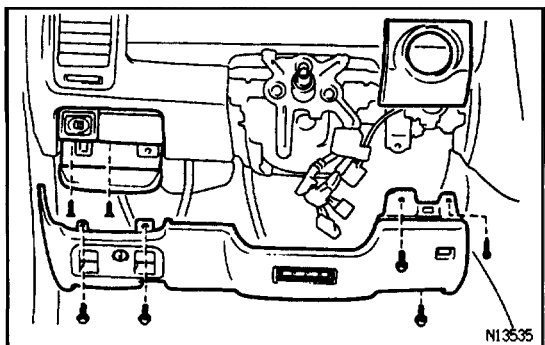

- 6. REMOVE THESE PARTS:**
- Parking brake release lever
 - Hood lock release lever
 - No.1 under cover
 - Finish plate
 - End pad
 - No.1 safety pad
 - Coin box
 - No.2 heater to register duct
 - No.2 under cover

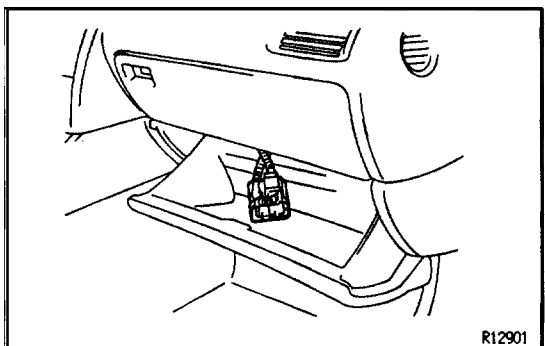


7. REMOVE INSTRUMENT PANEL BOX ASSEMBLY
(See page RS-23)

HINT: Tape a screwdriver tip before use.

- Using the screwdriver, pry out the glove compartment door finish plate.
- Remove the connector from the glove compartment door finish plate.
- Disconnect the airbag connector.

NOTICE: When disconnecting the airbag connector, take care not to damage the airbag wire harness.


- Remove the 4 screws and the nut.
- Disconnect the connector, remove the instrument panel box assembly.

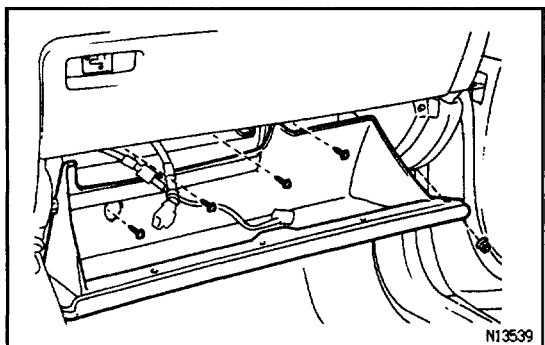

8. REMOVE GLOVE COMPARTMENT

- Remove the 2 bolts and the glove compartment door.
- Remove the 3 screws.
- Insert the plastic plate between the upper of compartment to remove it.

9. REMOVE STEERING COLUMN
(See page SR-13)

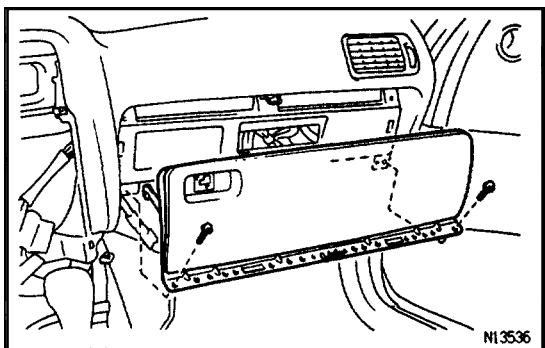


10. REMOVE THESE PARTS:


- No.2 register

HINT:


- Tape a screwdriver tip before use.
- The clip can be found from the register vent.
- Insert the screwdriver from the register vent, and pry up and push the 2 clips forward of the vehicle.

- Radio with A/C control assembly.

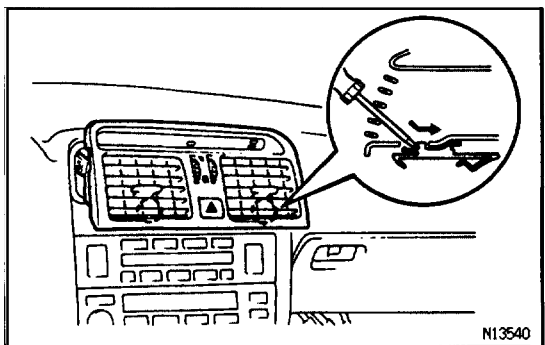

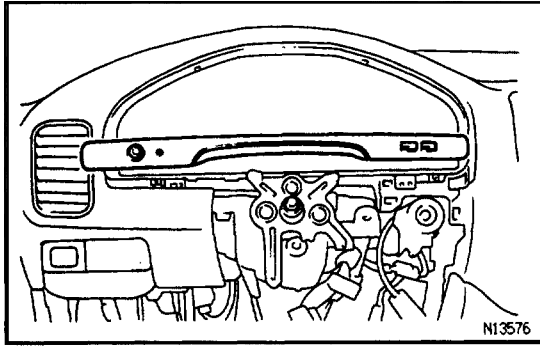

(c) Upper cluster finish panel

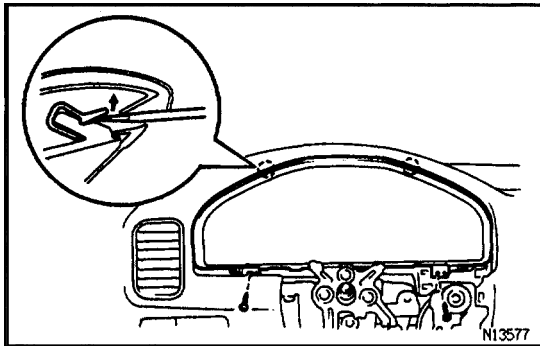


(d) Combination meter

HINT:


- Tape a screwdriver tip before use.
- Insert the screwdriver to the 2 clip holes taking care not to damage the instrument panel.
- Disconnect the meter taking care not to damage the instrument panel.

11. REMOVE CONSOLE BOX THESE PARTS:


- Cluster finish panel
- Lower console cover
- Lower console box
- Cup holder
- Console box

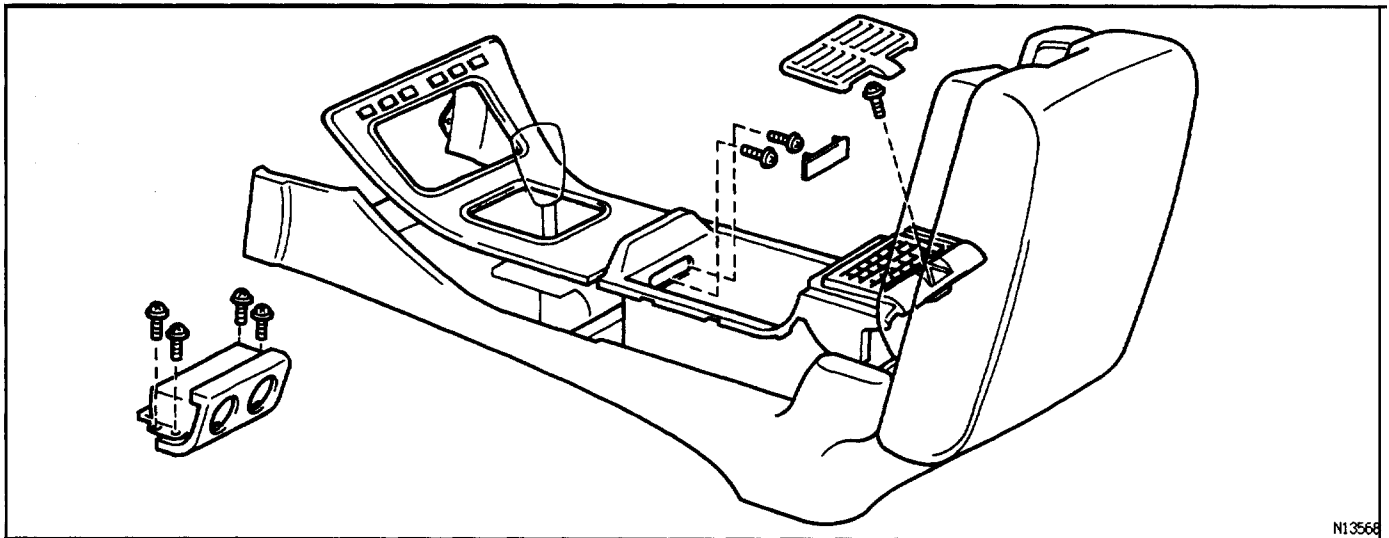

N13568

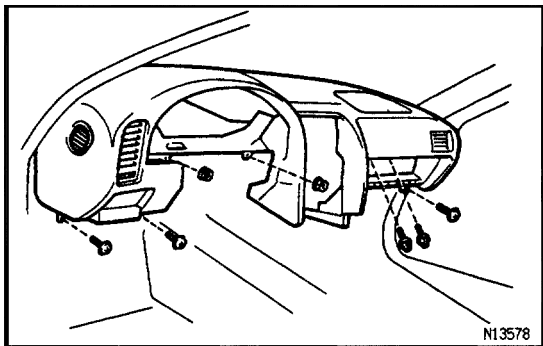**12. REMOVE INSTRUMENT PANEL**

- (a) Remove the 5 bolts and the 2 nuts.
- (b) Disconnect the connectors.
- (c) Remove the instrument panel.

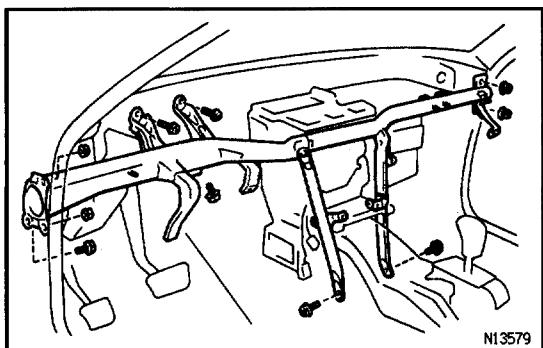**13. REMOVE INSTRUMENT PANEL REINFORCEMENT**


- (a) Remove the 4 nuts and 6 bolts.
- (b) Remove the instrument panel reinforcement.

INSTRUMENT PANEL DISASSEMBLY

Assembly is in the reverse order of disassembly.

1. REMOVE THESE PARTS:

- (a) No.1 defroster nozzle garnish
- (b) No.2 side defroster nozzle duct
- (c) No.1 side defroster nozzle duct
- (d) Defroster nozzle assembly

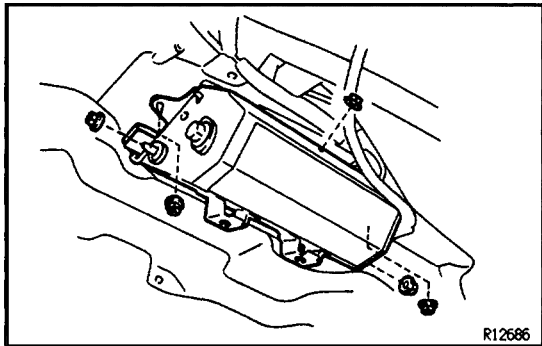


2. REMOVE FRONT PASSENGER AIRBAG ASSEMBLY (See page [RS-23](#))

- (a) Remove the 5 nuts, front passenger airbag assembly and front passenger airbag door.

CAUTION:

- Do not store the front passenger airbag assembly with the airbag side deployment direction faces down.
- Never disassemble the front passenger airbag assembly.

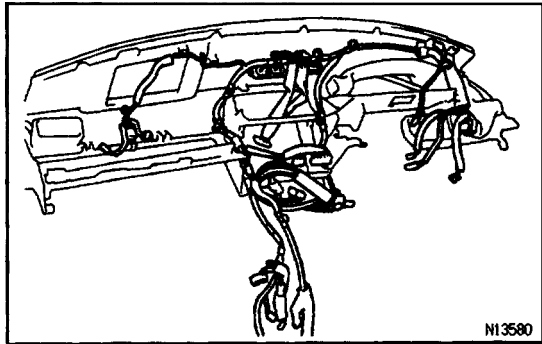

3. REMOVE THESE PARTS:

- (a) No.3 heater to register duct
- (b) Solar sensor
- (c) Instrument panel wire harness
- (d) Glove compartment door lock striker plate
- (e) No.3 finish panel mounting bracket
- (f) No.1 side defroster nozzle
- (g) No.2 side defroster nozzle
- (h) No.1 heater to register duct
- (i) No.4 finish panel mounting bracket
- (j) No.1 register assembly
- (k) No.3 register assembly