

Last Modified: 10-27-2015	6.6 A	Doc ID: RM100000000GRVW
Model Year Start: 2015	Model: RC F	Prod Date Range: [09/2014 -]
Title: LIGHTING (EXT): REAR COMBINATION LIGHT ASSEMBLY: REMOVAL; 2015 - 2016 MY RC F [09/2014 -]		

REMOVAL

CAUTION / NOTICE / HINT

HINT:

- Use the same procedure for the RH side and LH side.
- The following procedure is for the LH side.

PROCEDURE

1. REMOVE REAR BUMPER ASSEMBLY


Click here [INFO](#)

2. REMOVE REAR LIGHT COVER


Click here [INFO](#)

3. SEPARATE LUGGAGE COMPARTMENT TRIM COVER

(a) Using a clip remover, remove the clip.

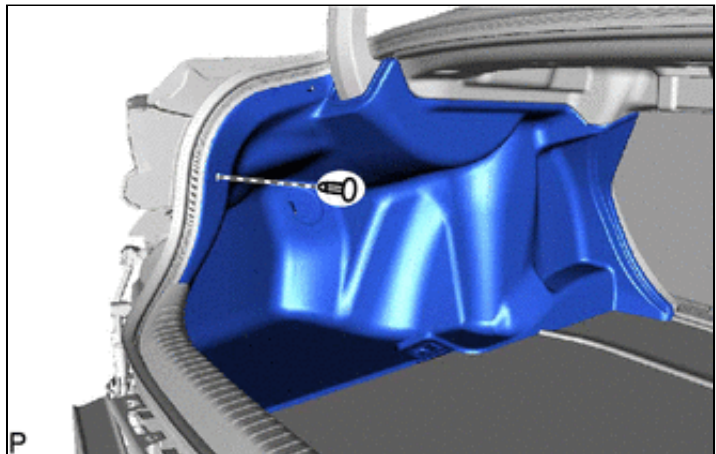


(b) Turn back the luggage compartment trim cover as shown in the illustration.

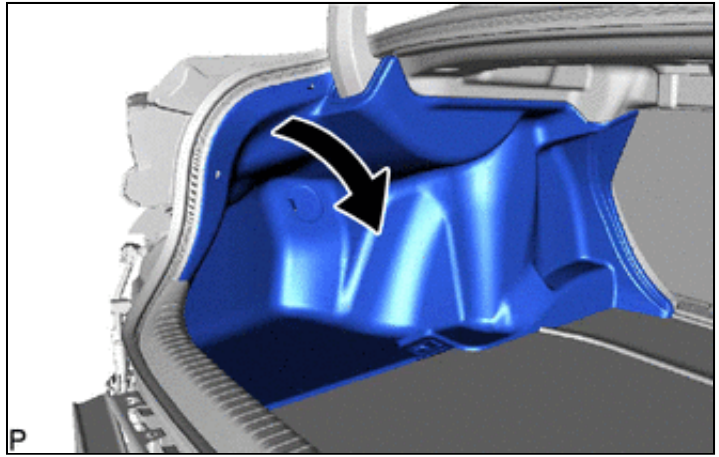


4. REMOVE REAR COMBINATION LIGHT ASSEMBLY

(a) Disconnect the connector.

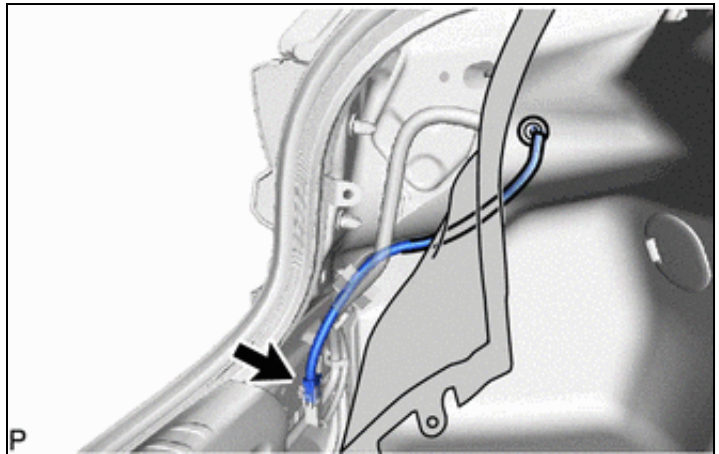

(b) Apply protective tape around the rear combination light assembly as shown in the illustration.

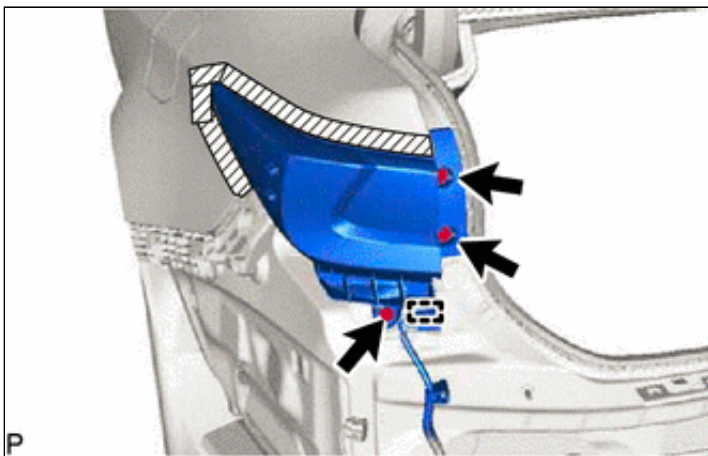

	Protective Tape
---	-----------------

(c) for LH Side:


(1) Disengage the clamp.

(d) Remove the 3 screws.

(e) Pull the rear combination light assembly toward the rear of the vehicle to disengage the pin and guide and separate the rear combination light assembly as shown in the illustration.

NOTICE:

To prevent the rear combination light assembly from falling when disengaging the pin, lightly hold the rear combination light assembly.

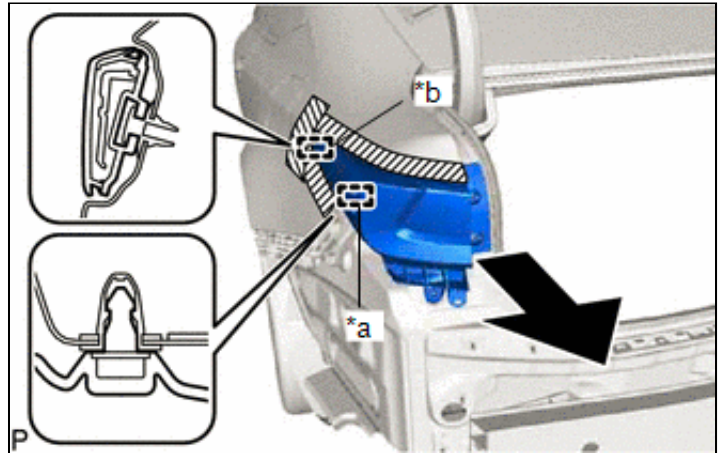

*a	Pin
*b	Guide

(f) Disengage the grommet to remove the rear combination light assembly.

