



LEXUS NAVIGATION SYSTEM

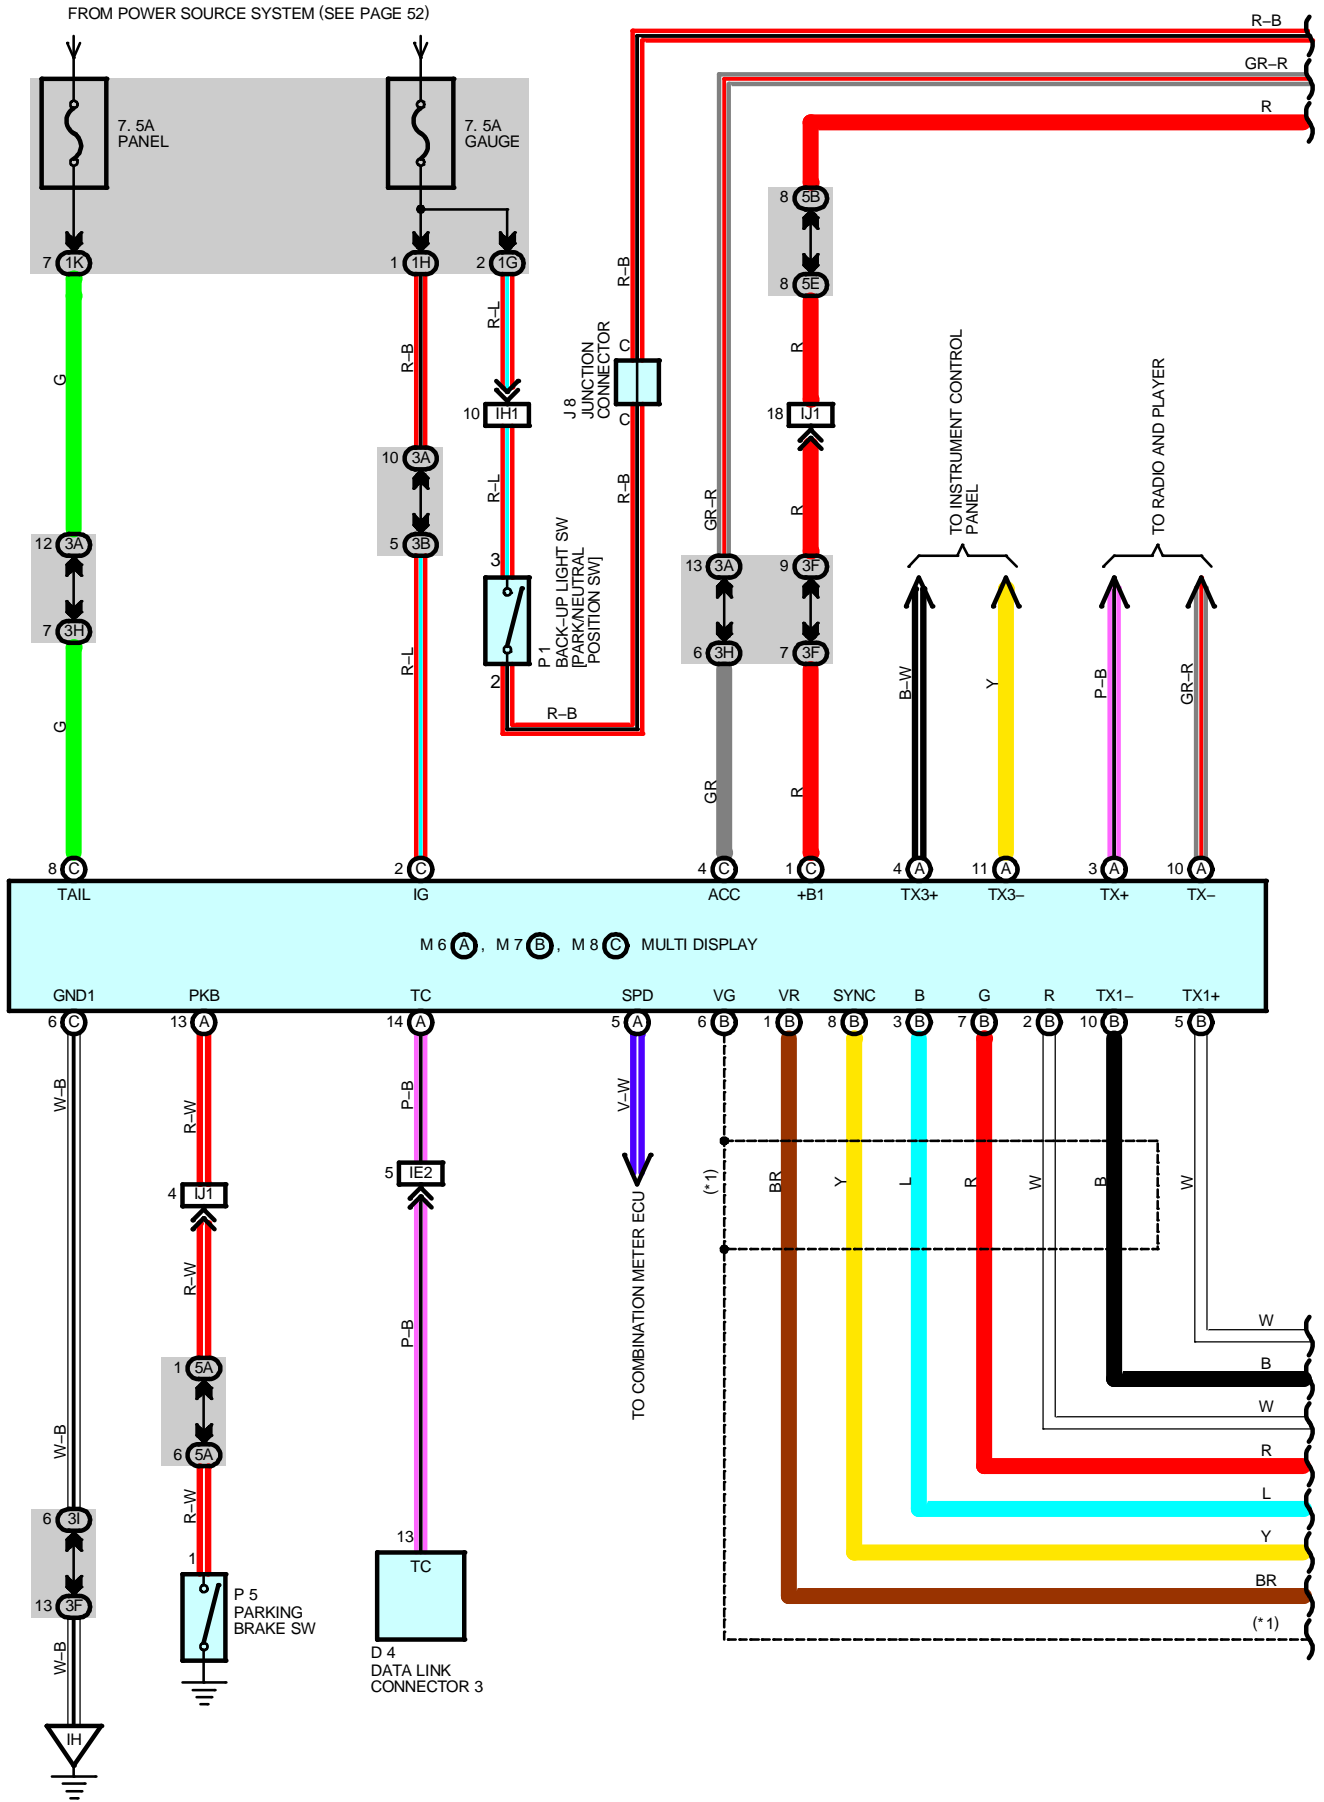

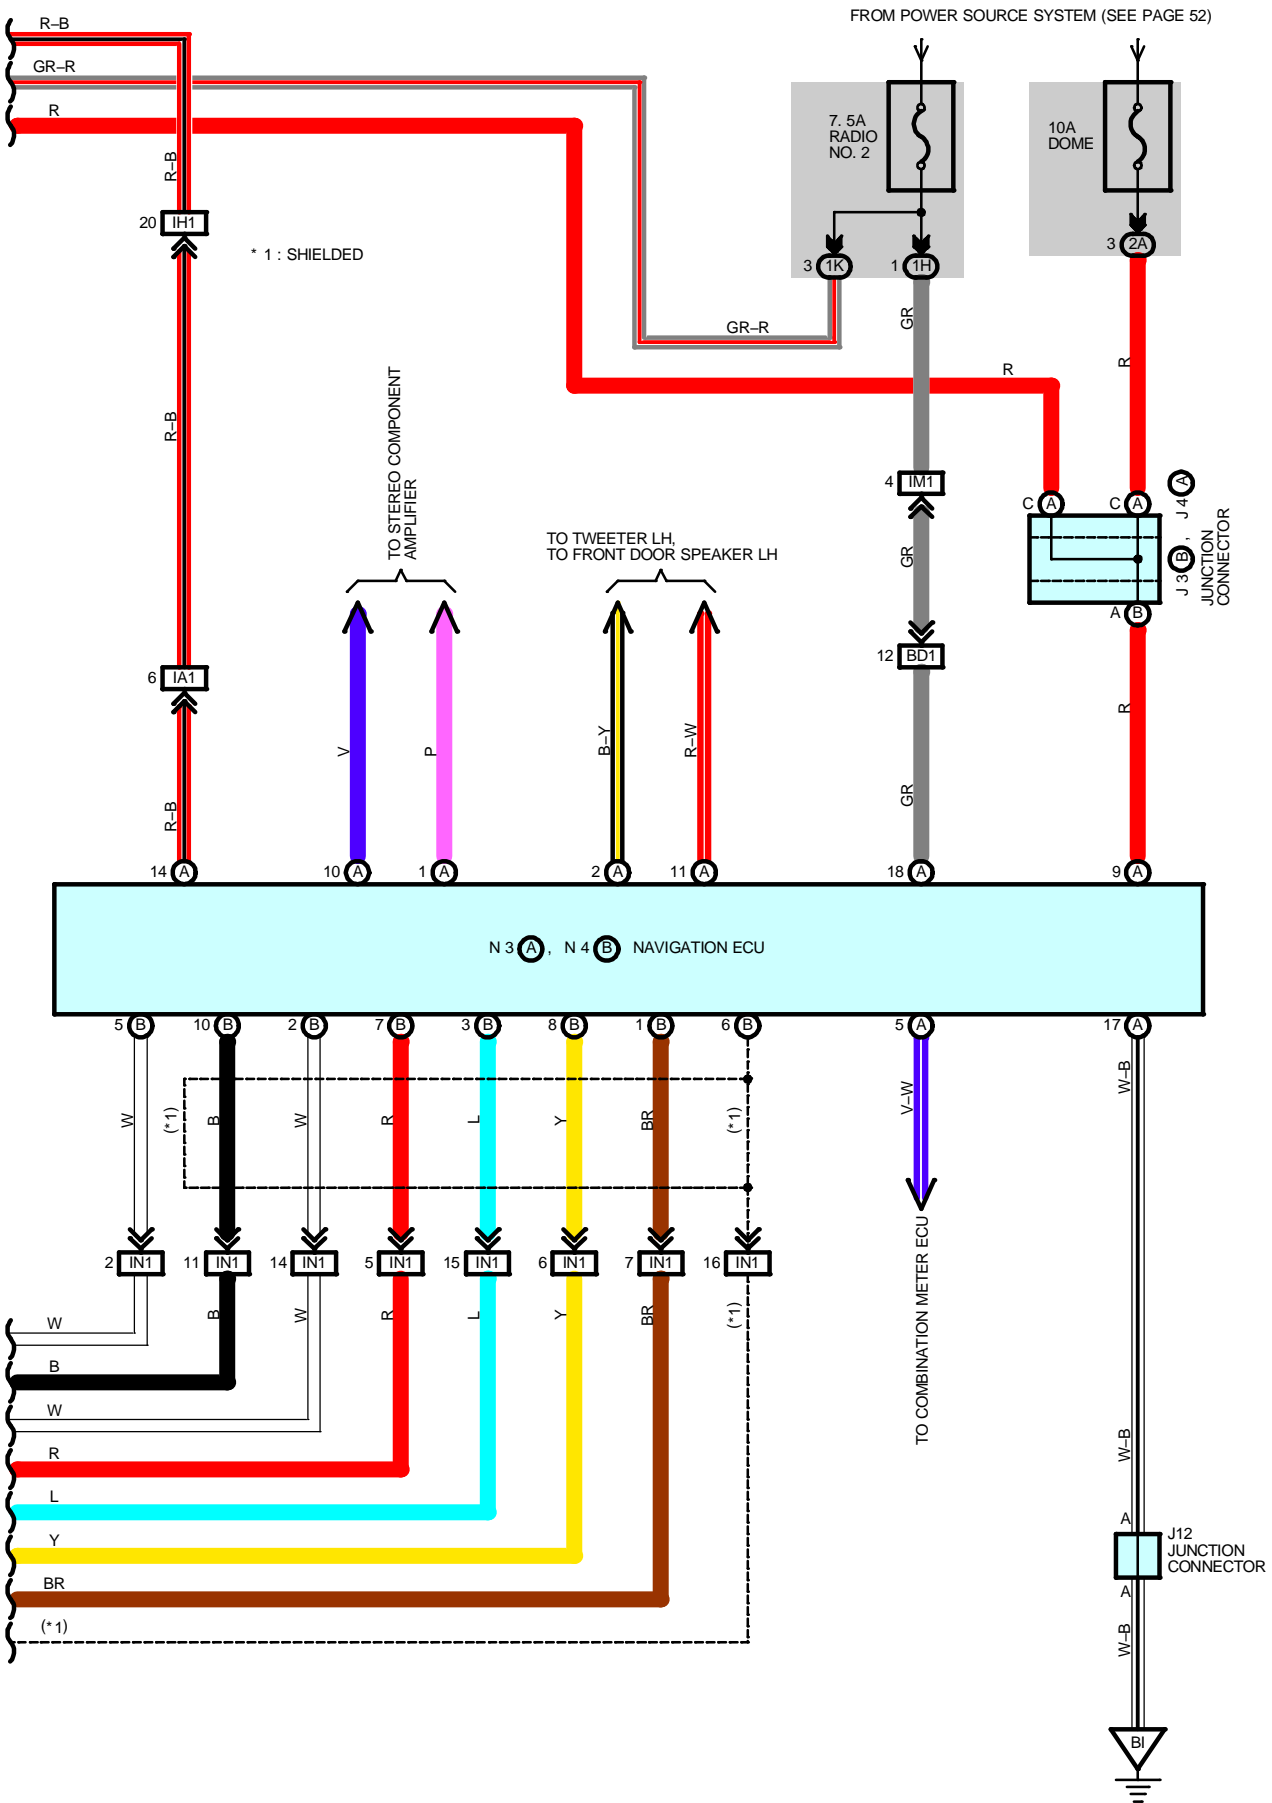

LEXUS NAVIGATION SYSTEM

SERVICE HINTS

M8 (C) MULTI DISPLAY

- (C) 2-GROUND : Approx. **12** volts with the ignition SW at **ON** position
- (C) 1-GROUND : Always approx. **12** volts
- (C) 4-GROUND : Approx. **12** volts with the ignition SW at **ACC** or **ON** position
- (C) 6-GROUND : Always continuity

N3 (A) NAVIGATION ECU

- (A) 9-GROUND : Always approx. **12** volts
- (A)18-GROUND : Approx. **12** volts with the ignition SW at **ACC** or **ON** position
- (A)17-GROUND : Always continuity

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
D4	34	J12	36	N3	A 36
J3	B 35	M6	A 35	N4	B 36
J4	A 35	M7	B 35	P1	33
J8	35	M8	C 35	P5	35

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1G	22	Cowl Wire and Instrument Panel J/B (Lower Finish Panel)
1H		
1K	22	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
2A	24	Cowl Wire and Engine Room J/B (Engine Compartment Left)
3A	26	Instrument Panel Wire and J/B No.3 (Behind the Instrument Panel Center)
3B		
3F		
3H		
3I		
5A	28	Cowl Wire and J/B No.5 (Behind the Instrument Panel Left)
5B		
5E		

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	42	Cowl Wire and Floor No.2 Wire (Left Kick Panel)
IE2	42	Instrument Panel Wire and Cowl Wire (Lower Finish Panel)
IH1	44	Engine Wire and Cowl Wire (Behind the Glove Box)
IJ1	44	Cowl Wire and Instrument Panel Wire (Behind the Glove Box)
IM1	44	Cowl Wire and Floor Wire (Right Kick Panel)
IN1	44	Instrument Panel Wire and Floor No.2 Wire (Instrument Panel Brace LH)
BD1	46	Floor No.2 Wire and Floor Wire (Upper the Rear Axle Housing Left)

▽ : GROUND POINTS

Code	See Page	Ground Points Location
IH	42	Instrument Panel Brace RH
BI	46	Upper the Rear Axle Housing Left

