


Blower Motor Circuit

CIRCUIT DESCRIPTION

This is the power source for the blower motor.


WIRING DIAGRAM

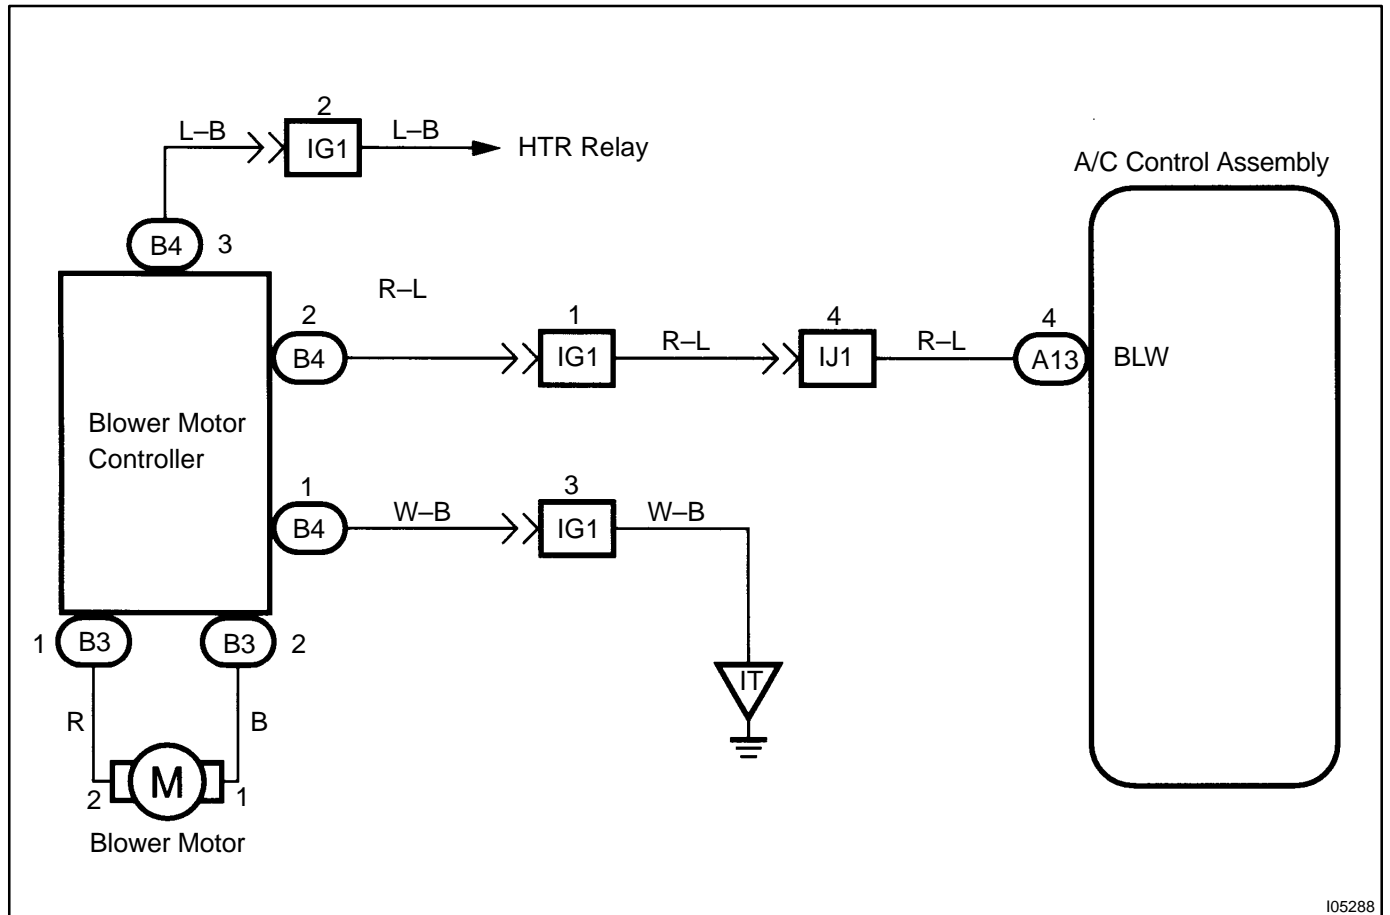

105288

INSPECTION PROCEDURE

- 1 Check voltage between terminal BLW of A/C control assembly connector and body ground.

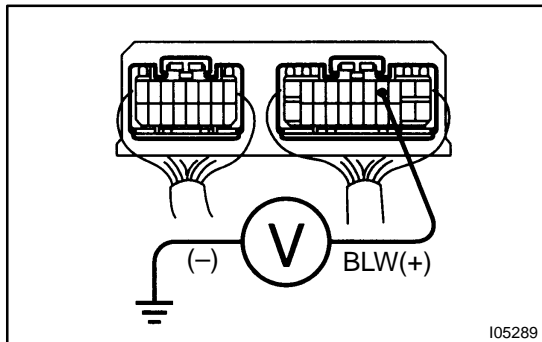**PREPARATION:**

Remove the A/C control assembly with connector still connected.

CHECK:

- Turn ignition switch ON.
- Operate blower motor.
- Measure voltage between terminal BLW of A/C control assembly and body ground.

OK:


Voltage : 1 – 3 V

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-1077](#)).

NG

- 2 Check blower motor.

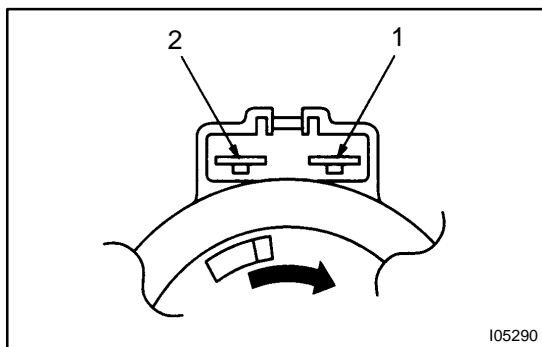**PREPARATION:**

Remove blower motor (See page [AC-59](#))

CHECK:

Connect the positive (+) lead from the battery to terminal 2 of blower motor connector and the negative (-) lead to terminal 1.

OK:


Blower motor operates smoothly.

NG

Replace blower motor.

OK

3 Check blower motor control relay.

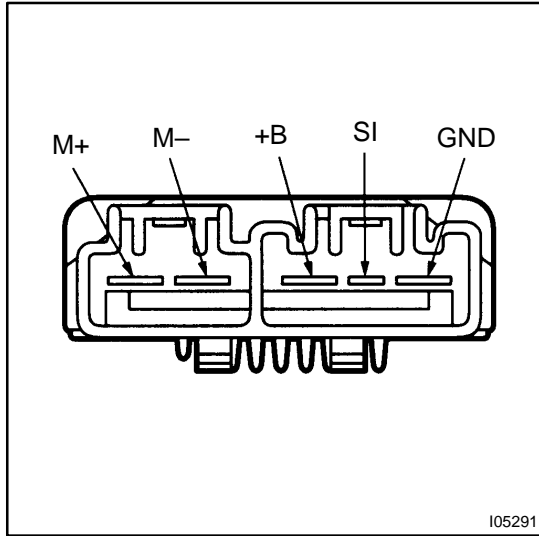

PREPARATION:

Remove blower motor control relay with connectors still connected.

CHECK:

- (a) Turn ignition switch ON.
- (b) Operate blower motor (High blower speed).

OK:

Terminals	Standard Value
GND ↔ Body Ground	Continuity
+B ↔ Body Ground	Battery Positive Voltage
+M ↔ Body Ground	Battery Positive Voltage
M+ ↔ M-	Battery Positive Voltage
SI ↔ Body Ground	1 - 3 V

NG

Replace blower motor relay.

OK


Repair or replace harness or connector.

BLOWER MOTOR CONTROL RELAY REMOVAL

AC0XE-01

1. REMOVE THESE PARTS:


- (a) Front door scuff plate RH
- (b) Cowl side trim RH
- (c) No.2 under cover
- (d) Glove compartment door
- (e) Glove compartment panel
(See page [BO-91](#))

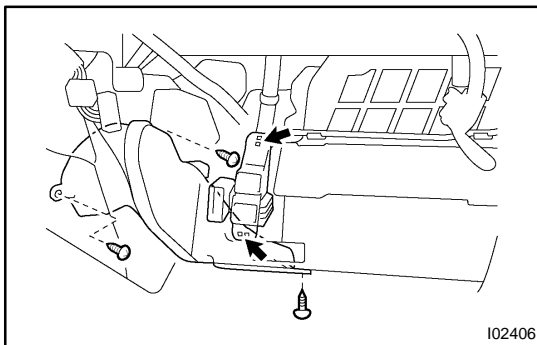

2. REMOVE AIR DUCT

Remove the 3 screws and duct.

3. DISCONNECT WIRE HARNESS

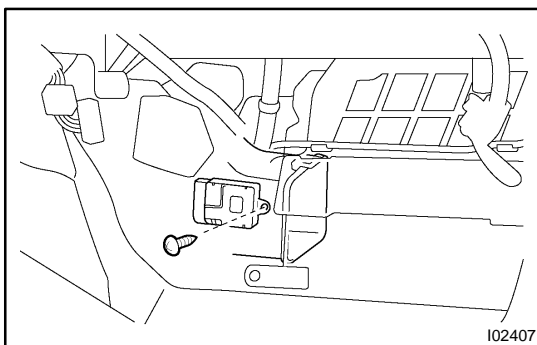


4. REMOVE BLOWER MOTOR CONTROL RELAY

Remove the screw and blower motor control relay, then disconnect the connectors.

BLOWER MOTOR REMOVAL

AC0XB-01

1. REMOVE No.2 UNDER COVER
(See page [BO-91](#))

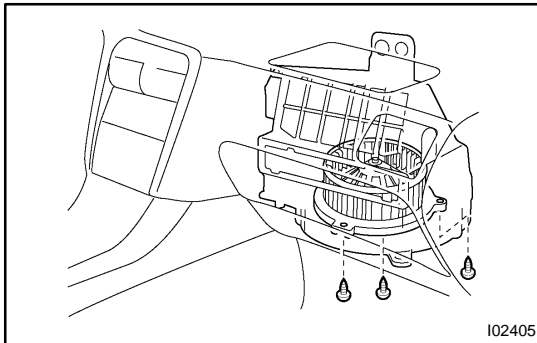

2. REMOVE BLOWER MOTOR
 - (a) Disconnect the connector.
 - (b) Remove the 3 screws and blower motor.