


# BACK DOOR STAY ASSY LH

## REPLACEMENT

750NU-01

### HINT:

Use the same procedures on the RH side as on the LH side.

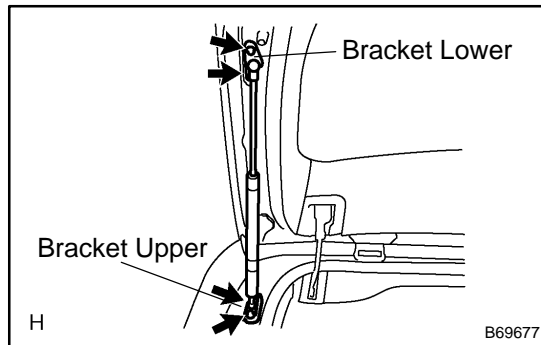

- 1. REMOVE BACK DOOR DAMPER STAY BRACKET UPPER LH**
  - (a) Remove the 2 bolts and bracket upper from the vehicle body.
- 2. REMOVE BACK DOOR STAY BRACKET LOWER**
  - (a) Remove the 2 bolts and bracket upper from the door panel.

### 3. INSTALL BACK DOOR STAY BRACKET LOWER

- (a) Install the stay bracket with the 2 bolts.  
**Torque: 8.0 N·m (82 kgf·cm, 71 in·lbf)**

### 4. INSTALL BACK DOOR DAMPER STAY BRACKET UPPER LH

- (a) Install the damper stay bracket upper with the 2 bolts.  
**Torque: 8.0 N·m (82 kgf·cm, 71 in·lbf)**