

**Lexus RX 330 2004 MY U.S.A. Maintenance Schedule [Including U.S.A. Dependencies]**

7,500 Miles BASIC INTERVAL

Chassis and Body

No.	Service Intervals		Odometer Reading (x 1000 miles)	1	7.5	15	22.5	30	37.5	45	52.5	60	Months	RX330 2WD	RX330 4WD	
	Maintenance Items															
1	Brake pads/disks				I			I		I			I: Every 12 Months	X	X	
2	Brake fluid	SAE J1703 or FMVSS No. 116 DOT3	I					R				R	R: Every 24 Months	X	X	
3	Brake lines and hoses				I			I		I			I: Every 12 Months	X	X	
4	Steering linkage & boots				I			I		I			I: Every 12 Months	X	X	
5	Rack and Pinion assembly		I		I			I		I			I: Every 12 Months	X	X	
6	Ball joints & dust cover				I			I		I			I: Every 12 Months	X	X	
7	Drive shaft boots				I			I		I			I: Every 12 Months	X	X	
8	Automatic transmission fluid	A/T Fluid T-IV						I					I	R: Every 24 Months	X	X
		When towing						I				R	R: Every 24 Months	X	X	
9	Transfer oil	Gear oil API: GL-5	I		I			I		I			I	I: Every 12 Months		X
		When towing	I		R			R		R			R	I: Every 12 Months		X
10	Front differential oil	A/T fluid T-IV						I					I	R: Every 24 Months	X	X
		When towing			R			R		R			R	R: Every 24 Months	X	X
11	Rear differential oil	Gear oil API: GL-5	I		I			I		I			I	I: Every 12 Months		X
		When towing	I		R			R		R			R	I: Every 12 Months		X
12	Body Inspection		I		I			I		I			I: Every 12 Months	X	X	
13	Air conditioning filter			R	R	R	R	R	R	R	R	R	R	R: Every 6 Months	X	X
14	Tire Rotation			R	R	R	R	R	R	R	R	R	R	R: Every 6 Months	X	X
15	Road Test		I	I	I	I	I	I	I	I	I	I	I: Every 6 Months	X	X	

**I:** Inspect and correct or replace as necessary    **R:** Replace, change, tire rotation or lubricants

**Lexus RX 330 2004 MY U.S.A. Maintenance Schedule [Including U.S.A. Dependencies]**

7,500 Miles BASIC INTERVAL  
ENGINE

No.	Service Intervals Items	Odometer Reading (x 1000 miles)	1	7.5	15	22.5	30	37.5	45	52.5	60	Months	RX330
1	Timing Belt		Replace 90,000 miles									R: Every 72 Months	X
2	Valve Clearance										+	I: Every 48 Months	X
3	Drive Belt		Inspect 60,000 miles and then every 15,000 miles									I: Every 48M, then every 12M	X
4	Engine Oil - API: SL or ILSAC		R	R	R	R	R	R	R	R	R	R: Every 6 Months	(1)
5	Oil Filter		R	R	R	R	R	R	R	R	R	R: Every 6 Months	X
6	Engine Coolant - Toyota Genuine Super LLC (pink)		First replace at 90,000 miles, then replace at every 45,000 miles									R: Every 72M, then every 36M	X
7	Exhaust Pipes & Mountings			I		I		I		I		I: Every 12 Months	X
8	Air Cleaner Filter					R					R	R: Every 24 Months	X
		Desert/dirt road		I		R		I			R	I: Every 12M, R: Every 24M	X
9	Fuel lines/connections, fuel tank vapor vent system hoses & fuel tank band					I					I	I: Every 24 Months	X
10	Fuel tank cap gasket					I					I	I: Every 24 Months	X
11	Spark Plugs - Iridium tip		Replace 120,000 miles									R: Every 96 Months	X
12	Bolts and nuts on chassis			T		T		T		T		T: Every 12 Months	X

**I:** Inspect and correct or replace as necessary    **R:** Replace, change, tire rotation or lubricants    **T:** Tighten to specified torque

**+** : Audible  
**(1):** Reset the oil replacement reminder light ("MAINT REQD") after engine oil replacement (If Equipt.).