


only operate your vehicle under:

CONDITIONS OTHER THAN THOSE LISTED ON THE LEFT

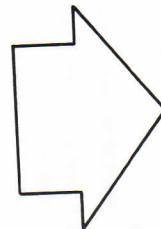

Follow **SCHEDULE B**

MAINTENANCE

SCHEDULE A

Maintenance operations:

A = Check and adjust as necessary; I = Inspect and correct or replace as necessary; R = Replace, change or lubricate.

Service interval (Use odometer reading or months, whichever comes first)	Maintenance services beyond 96,000 km (60,000 miles) should continue to be performed at the same intervals shown for each maintenance schedule.												Months				
	1.6	6	12	18	24	30	36	42	48	54	60	66		72	78	84	90
Maintenance items Miles X 1,000	1	3.75	7.5	11.25	15	18.75	22.5	26.25	30	33.75	37.5	41.25	45	48.75	52.5	56.25	60

ENGINE COMPONENTS AND EMISSION CONTROL SYSTEMS

	See note (1)																	
Timing belt																		
Valve clearance																		A
Drive belts																		I
Engine oil and oil filter★		R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R
Engine coolant																		R
Exhaust pipes and mountings																		I
Air filter★		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Fuel lines and connections																		I
Fuel tank cap gasket																		R
Spark plugs																		R
Charcoal canister																		I

Maintenance services indicated by a star (★) are required under the terms of the Emission Control Systems Warranty. See Owner's Guide or Warranty Booklet for complete warranty information.

★ For vehicles sold in California

NOTE:

- (1) If you operate your vehicle under conditions of extensive idling and/or low speed driving for a long distance such as police, taxi or door to door delivery use, replace every 96,000 km (60,000 miles).
- (2) After 96,000 km (60,000 miles) or 72 months, inspect every 12,000 km (7,500 miles) or 12 months.
- (3) After 72,000 km (45,000 miles) or 36 months, replace every 48,000 km (30,000 miles) or 24 months.
- (4) Applicable when operating mainly on dusty roads. If not applicable, follow schedule B.
- (5) Includes inspection of vapor vent system.

MAINTENANCE

SCHEDULE A

Maintenance operations:

A = Check and adjust as necessary. I = Inspect and correct or replace as necessary. R = Replace, change or lubricate.

Service interval (Use odometer reading or months, whichever comes first.)	Maintenance services beyond 96,000 km (60,000 miles) should continue to be performed at the same intervals shown for each maintenance schedule.												Months						
	km X 1,000	1	6	12	18	24	30	36	42	48	54	60		66	72	78	84	90	96
Maintenance items	Miles X 1,000	1	3.75	7.5	11.25	15	18.75	22.5	26.25	30	33.75	37.5	41.25	45	48.75	52.5	56.25	60	
CHASSIS AND BODY																			
Brake linings and drums																			
Brake pads and discs																			
Brake fluid																			
Brake line pipes and hoses																			
Steering linkage																			
SRS airbag																			
Steering gear box	See note (6)																		
Ball joints and dust covers																			
Automatic transmission, manual transmission and differential																			
Bolts and nuts on chassis and body See note (7)																			
Body inspection (paint, corrosion)																			
ROAD TEST																			

NOTE:
 (6) Inspect the steering gear housing for oil leakage only.
 (7) Applicable when operating mainly on rough and/or muddy roads. If not, follow schedule B.

SCHEDULE B

Maintenance operations:

A = Check and adjust as necessary. I = Inspect and correct or replace as necessary.

Service interval (Use odometer reading or months, whichever comes first.)	Maintenance services beyond 96,000 km (60,000 miles) shown for each maintenance schedule	
	km X 1,000	Miles X 1,000
Maintenance items	1	7
ENGINE COMPONENTS AND EMISSION CONTROL SYSTEMS		
Valve clearance		See note (1)
Drive belt		See note (1)
Engine oil and oil filter★		See note (2)
Engine coolant		See note (2)
Exhaust pipes and mountings		
Air filter★		See note (3)
Fuel lines and connections		
Fuel tank cap gasket		
Spark plugs		
Charcoal canister		

NOTE:
 (1) After 96,000 km (60,000 miles) or 72 months, inspect every 12,000 km (7,500 miles) or 6 months, whichever comes first.
 (2) After 72,000 km (45,000 miles) or 36 months, replace every 48,000 km (30,000 miles) or 24 months, whichever comes first.
 (3) Includes inspection of vapor vent system.
 ★ For vehicles sold in California