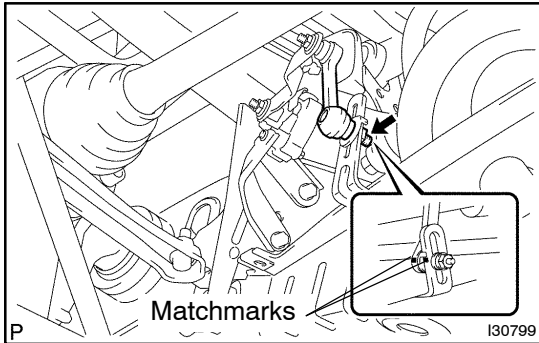


HEIGHT CONTROL SENSOR SUB-ASSY REAR LH REPLACEMENT

65037-01


HINT:

COMPONENTS: See page [65-5](#)

1. REMOVE HEIGHT CONTROL SENSOR SUB-ASSY REAR LH

[89408C / 98-138]

- (a) Disconnect the connector.
- (b) Place matchmarks on the link and bracket.
- (c) Remove the nut and disconnect the height control sensor link.

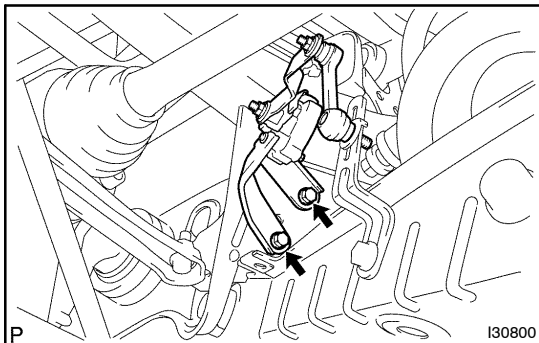

- (d) Remove the 2 bolts and height control sensor sub-assy rear LH.

2. INSTALL HEIGHT CONTROL SENSOR SUB-ASSY REAR LH

[89408C / 98-138]

- (a) Install the height control sensor sub-assy rear LH with the 2 bolts.
Torque: 7.8 N·m (80 kgf·cm, 69 in·lbf)
- (b) Align the matchmarks on the height control sensor link and bracket.
- (c) Install the nut.
Torque: 5.4 N·m (55 kgf·cm, 48 in·lbf)
- (d) Connect the connector.

3. HEADLIGHT AIM ONLY (See page [65-10](#))