

**PROBLEM SYMPTOMS TABLE****HEADLIGHT AND TAILLIGHT SYSTEM:**

Symptom	Suspect Area	See page
"LO-beam" headlight does not light up.	1. Light control switch circuit 2. Headlight relay circuit 3. Driver side J/B ECU	<a href="#">05-719</a> <a href="#">05-722</a> <a href="#">01-32</a>
"HI-beam" headlight does not light up.	1. Headlight circuit 2. Light control switch circuit 3. Front light ECU 4. Driver side J/B ECU	<a href="#">05-720</a> <a href="#">05-719</a> <a href="#">01-32</a> <a href="#">01-32</a>
"Flash" headlight does not light up.	1. Headlight circuit 2. Light control switch circuit 3. Front light ECU 4. Driver side J/B ECU	<a href="#">05-720</a> <a href="#">05-719</a> <a href="#">01-32</a> <a href="#">01-32</a>
Headlight is dark.	1. Light control switch circuit 2. Driver side J/B ECU	<a href="#">05-719</a> <a href="#">01-32</a>
Headlight does not light up or has abnormal operation.	1. Combination switch power source circuit 2. Light control switch circuit 3. Driver side J/B ECU	<a href="#">05-717</a> <a href="#">05-719</a> <a href="#">01-32</a>
Taillight does not light up or has abnormal operation.	1. Taillight circuit 2. Combination switch power source circuit 3. Light control switch circuit 4. Luggage room J/B ECU 5. Driver side J/B ECU	<a href="#">05-738</a> <a href="#">05-717</a> <a href="#">05-719</a> <a href="#">01-32</a> <a href="#">01-32</a>
Automatic light control system does not operate.	1. Automatic light control sensor circuit 2. Combination switch 3. Front light ECU 4. Driver side J/B ECU	<a href="#">05-711</a> <a href="#">01-32</a> <a href="#">01-32</a> <a href="#">01-32</a>
Both left and right headlight does not light up.	1. Headlight circuit 2. Light control switch circuit 3. Front light ECU 4. Driver side J/B ECU	<a href="#">05-720</a> <a href="#">05-719</a> <a href="#">01-32</a> <a href="#">01-32</a>
Headlight beam level control system does not operate.	1. Headlight beam level control actuator circuit 2. Height control sensor circuit 3. Headlight beam level control ECU communication circuit 4. Headlight beam level control ECU power source circuit 5. Headlight beam level control ECU 6. Passenger side J/B ECU 7. Skid control ECU	<a href="#">05-756</a> <a href="#">05-758</a> <a href="#">05-730</a> <a href="#">05-761</a> <a href="#">01-32</a> <a href="#">01-32</a> <a href="#">01-32</a>

**STOP LIGHT SYSTEM:**

Symptom	Suspect Area	See page
Stop light system does not light up.	1. Stop light switch circuit 2. Stop light circuit 3. Driver side J/B ECU	<a href="#">05-734</a> <a href="#">05-736</a> <a href="#">01-32</a>
Hi-mounted stop light does not light up.	1. Hi-mounted stop light circuit 2. Combination switch 3. Driver side J/B ECU 4. Luggage room J/B ECU	<a href="#">05-740</a> <a href="#">01-32</a> <a href="#">01-32</a> <a href="#">01-32</a>

**FOG LIGHT SYSTEM:**

Symptom	Suspect Area	See page
Fog light does not light up or has abnormal operation.	<ol style="list-style-type: none"> <li>1. Front fog light circuit</li> <li>2. Light control switch circuit</li> <li>3. Front light ECU</li> <li>4. Driver side J/B ECU</li> </ol>	<a href="#">05-724</a> <a href="#">05-719</a> <a href="#">01-32</a> <a href="#">01-32</a>

**TURN SIGNAL LIGHT SYSTEM:**

Symptom	Suspect Area	See page
Hazard warning light does not light up.	<ol style="list-style-type: none"> <li>1. Hazard switch circuit</li> <li>2. Combination switch</li> <li>3. Front light ECU</li> <li>4. Driver side J/B ECU</li> </ol>	<a href="#">05-732</a> <a href="#">01-32</a> <a href="#">01-32</a> <a href="#">01-32</a>
Turn signal light does not light up.	<ol style="list-style-type: none"> <li>1. Turn signal light circuit</li> <li>2. Light control switch circuit</li> <li>3. Front light ECU</li> <li>4. Driver side J/B ECU</li> </ol>	<a href="#">05-728</a> <a href="#">05-719</a> <a href="#">01-32</a> <a href="#">01-32</a>

**ILLUMINATION LIGHT SYSTEM:**

Symptom	Suspect Area	See page
Each switch illumination light does not light up.	<ol style="list-style-type: none"> <li>1. Illumination light circuit</li> <li>2. Driver side J/B ECU</li> </ol>	<a href="#">05-766</a> <a href="#">01-32</a>
Buckle illumination light does not light up.	<ol style="list-style-type: none"> <li>1. Buckle illumination circuit</li> <li>2. Driver side J/B ECU or passenger side J/B ECU</li> </ol>	<a href="#">05-763</a> <a href="#">01-32</a>

**INTERIOR LIGHT SYSTEM:**

Symptom	Suspect Area	See page
Door courtesy light does not light up.	<ol style="list-style-type: none"> <li>1. Door courtesy light and courtesy switch circuit</li> <li>2. Driver side J/B ECU or passenger side J/B ECU</li> </ol>	<a href="#">05-750</a> <a href="#">01-32</a>
Luggage compartment light does not light up.	<ol style="list-style-type: none"> <li>1. Luggage compartment light circuit</li> <li>2. Luggage compartment door courtesy switch circuit</li> <li>3. Luggage room J/B ECU</li> </ol>	<a href="#">05-748</a> <a href="#">05-746</a> <a href="#">01-32</a>
Interior light does not light up.	<ol style="list-style-type: none"> <li>1. Interior light circuit</li> <li>2. Driver side J/B ECU</li> </ol>	<a href="#">05-769</a> <a href="#">01-32</a>

**OTHERS:**

Symptom	Suspect Area	See page
Back-up light does not light up.	<ol style="list-style-type: none"> <li>1. Back-up light circuit</li> <li>2. Driver side J/B ECU</li> <li>3. Luggage room J/B ECU</li> </ol>	<a href="#">05-742</a> <a href="#">01-32</a> <a href="#">01-32</a>
License plate light does not light up.	<ol style="list-style-type: none"> <li>1. License plate light circuit</li> <li>2. Combination switch</li> <li>3. Driver side J/B ECU</li> <li>4. Luggage room J/B ECU</li> </ol>	<a href="#">05-744</a> <a href="#">01-32</a> <a href="#">01-32</a> <a href="#">01-32</a>
Clearance light does not light up.	<ol style="list-style-type: none"> <li>1. Clearance light circuit</li> <li>2. Light control switch circuit</li> <li>3. Combination switch</li> <li>4. Front light ECU</li> <li>5. Passenger side J/B ECU</li> </ol>	<a href="#">05-726</a> <a href="#">05-719</a> <a href="#">01-32</a> <a href="#">01-32</a> <a href="#">01-32</a>

Side marker light does not light up.	<ol style="list-style-type: none"> <li>1. Front side marker light circuit</li> <li>2. Rear side marker light circuit</li> <li>3. Combination switch</li> <li>4. Front light ECU</li> <li>5. Driver side J/B ECU</li> </ol>	<p style="text-align: right;">05-752</p> <p style="text-align: right;">05-754</p> <p style="text-align: right;">01-32</p> <p style="text-align: right;">01-32</p> <p style="text-align: right;">01-32</p>
Light auto turn off system light does not operate. (Headlight is normal)	<ol style="list-style-type: none"> <li>1. Headlight circuit</li> <li>2. Light control switch circuit</li> <li>3. Driver side J/B ECU</li> </ol>	<p style="text-align: right;">05-720</p> <p style="text-align: right;">05-719</p> <p style="text-align: right;">01-32</p>