	2004
Vileage	Content
5000	Replace engine oil and oil filter Re- Torque drive shaft flange bdlts
	Rotate tires
	Visually inspect brake pads/discs
	Road test vehicle
	Inspection #1 ¹
	Replace engine oil and oil filter
10000	Replace air conditioner filter
	Re- Torque drive shaft flange bolts
	Rotate tires
	Visually inspect brake pads/discs Road test vehicle
	Inspection #1 ¹
	Replace engine oil and oil filter
	Re- Torque drive shaft flange bolts Rotate tires
15000	Visually inspect brake pads/discs
	Road test vehicle
	Inspection #1, #2
	Penlage engine oil and oil filter
20000	Replace engine oil and oil filter Replace air conditioner filter
	Re- Torque drive shaft flange bolts
	Rotate tires
	Visually inspect brake pads/discs
	Road test vehicle Inspection #1 ¹
	Replace engine oil and oil filter
	Re-Torque drive shaft flange bolts
25000	Rotate tires Visually inspect brake pads/discs
	Road test vehicle
	Inspection #1 ¹
	Replace engine oil and oil filter Measure brake pad thickness and rotor runout
	Replace air conditioner filter
30000	Replace brake fluid
	Replace engine air filter
	Re- Torque drive shaft flange bolts
	Rotate tires Road test vehicle
	Inspection #1, #2, & #3
	Replace engine oil and oil filter
	Re- Torque drive shaft flange bolts Rotate tires
35000	Visually inspect brake pads/discs
	Road test vehicle
	Inspection #1 ¹
	Deployee engine all and all filter
	Replace engine oil and oil filter Replace air conditioner filter
	Re- Torque drive shaft flange bolts
40000	Rotate tires
	Visually inspect brake pads/discs
	Road test vehicle Inspection #1 ¹
	Replace engine oil and oil filter
	Re- Torque drive shaft flange bolts
45000	Rotate tires Visually inspect brake pads/discs
	Road test vehicle
	Inspection #1, #2
	Replace engine oil and oil filter
	Replace air conditioner filter Re- Torque drive shaft flange bdlts
50000	Rotate tires
	Road test vehicle
	Visually inspect brake pads/discs
	Inspection #1 ¹
	Replace engine oil and oil filter
	Re- Torque drive shaft flange bolts
55000	Rotate tires
55000	Visually inspect brake pads/discs
	Road test vehicle Inspection #1 ¹
	1050ec0001 #1

Inspection #1 Ball joints and dust covers Drive shaft boots Engine Air Filter Nuts & Bolts on Chassis Steering linkage and boots

	Replace engine oil and oil filter	
	Measure brake pad thickness and rotor runout	
	Replace air conditioner filter	
	Replace brake fluid	
	Replace engine air filter	
00000		
60000	Re- Torque drive shaft flange bolts	
	Rotate tires	
	Road test vehicle	
	Inspect engine valves clearance (audible)	
	Inspect drive belts	
	Inspection #1, #2, #3	
	Replace engine oil and oil filter	
	Re- Torque drive shaft flange bolts	
	Rotate tires	
65000		
	Visually inspect brake pads/discs	
	Road test vehicle	
	Inspection #1 ¹	
70000	Replace engine oil and oil filter	
	Replace air conditioner filter	
	Re- Torque drive shaft flange bolts	
	Rotate tires	
	Visually inspect brake pads/discs	
	Road test vehicle	
1	Inspection #1 ¹	
Replace engine oil and oil filter		
1	Re- Torque drive shaft flange bolts	
	Rotate tires	
75000	Visually inspect brake pads/discs	
	Road test vehicle	
	Inspect drive belts	
	Inspection #1, #2	
	Replace engine oil and oil filter	
	Replace air conditioner filter	
	Re- Torque drive shaft flange bdlts	
80000	Rotate tires	
	Visually inspect brake pads/discs	
	Road test vehicle	
	Inspection #1 ¹	
	Inspection #1 ¹	
	Inspection #1 ¹ Replace engine oil and oil filter	
	Inspection #1 ¹ Replace engine oil and oil filter Re- Torque drive shaft flange bólts	
85000	Inspection #1 ¹ Replace engine oil and oil filter	
85000	Inspection #1 ¹ Replace engine oil and oil filter Re- Torque drive shaft flange bolts Rotate tires	
85000	Inspection #1 ¹ Replace engine oil and oil filter Re- Torque drive shaft flange bdlts Rotate tires Visually inspect brake pads/discs	
85000	Inspection #1 ¹ Replace engine oil and oil filter Re- Torque drive shaft flange bdlts Rotate tires Visually inspect brake pads/discs Road test vehicle	
85000	Inspection #1 ¹ Replace engine oil and oil filter Re- Torque drive shaft flange bdlts Rotate tires Visually inspect brake pads/discs	
85000	Inspection #1 ¹ Replace engine oil and oil filter Re- Torque drive shaft flange bdlts Rotate tires Visually inspect brake pads/discs Road test vehicle Inspection #1 ¹	
85000	Inspection #1 ¹ Replace engine oil and oil filter Re- Torque drive shaft flange bdlts Rotate tires Visually inspect brake pads/discs Road test vehicle Inspection #1 ¹ Replace engine oil and oil filter	
85000	Inspection #1 ¹ Replace engine oil and oil filter Re- Torque drive shaft flange bdlts Rotate tires Visually inspect brake pads/discs Road test vehicle Inspection #1 ¹ Replace engine oil and oil filter Measure brake pad thickness and rotor runout	
85000	Inspection #1 ¹ Replace engine oil and oil filter Re- Torque drive shaft flange bdlts Rotate tires Visually inspect brake pads/discs Road test vehicle Inspection #1 ¹ Replace engine oil and oil filter Measure brake pad thickness and rotor runout Replace air conditioner filter	
85000	Inspection #1 ¹ Replace engine oil and oil filter Re- Torque drive shaft flange bdlts Rotate tires Visually inspect brake pads/discs Road test vehicle Inspection #1 ¹ Replace engine oil and oil filter Measure brake pad thickness and rotor runout Replace air conditioner filter Replace brake fluid	
	Inspection #1 ¹ Replace engine oil and oil filter Re- Torque drive shaft flange bdlts Rotate tires Visually inspect brake pads/discs Road test vehicle Inspection #1 ¹ Replace engine oil and oil filter Measure brake pad thickness and rotor runout Replace air conditioner filter Replace brake fluid Replace engine air filter	
	Inspection #1 ¹ Replace engine oil and oil filter Re- Torque drive shaft flange bdlts Rotate tires Visually inspect brake pads/discs Road test vehicle Inspection #1 ¹ Replace engine oil and oil filter Measure brake pad thickness and rotor runout Replace air conditioner filter Replace brake fluid	
	Inspection #1 ¹ Replace engine oil and oil filter Re- Torque drive shaft flange bdlts Rotate tires Visually inspect brake pads/discs Road test vehicle Inspection #1 ¹ Replace engine oil and oil filter Measure brake pad thickness and rotor runout Replace air conditioner filter Replace brake fluid Replace engine air filter	
	Inspection #1 ¹ Replace engine oil and oil filter Re- Torque drive shaft flange bdlts Rotate tires Visually inspect brake pads/discs Road test vehicle Inspection #1 ¹ Replace engine oil and oil filter Measure brake pad thickness and rotor runout Replace air conditioner filter Replace brake fluid Replace engine air filter Replace timing belt Re- Torque drive shaft flange bolts	
	Inspection #1 ¹ Replace engine oil and oil filter Re- Torque drive shaft flange bolts Rotate tires Visually inspect brake pads/discs Road test vehicle Inspection #1 ¹ Replace engine oil and oil filter Measure brake pad thickness and rotor runout Replace brake fluid Replace engine air filter Replace engine air filter Replace timing belt Re- Torque drive shaft flange bolts Rotate tires	
	Inspection #1 ¹ Replace engine oil and oil filter Re- Torque drive shaft flange bolts Rotate tires Visually inspect brake pads/discs Road test vehicle Inspection #1 ¹ Replace engine oil and oil filter Measure brake pad thickness and rotor runout Replace air conditioner filter Replace brake fluid Replace engine air filter Replace timing belt Re- Torque drive shaft flange bolts Rotate tires Road test vehicle	
	Inspection #1 ¹ Replace engine oil and oil filter Re- Torque drive shaft flange bolts Rotate tires Visually inspect brake pads/discs Road test vehicle Inspection #1 ¹ Replace engine oil and oil filter Measure brake pad thickness and rotor runout Replace air conditioner filter Replace brake fluid Replace engine air filter Replace timing belt Re- Torque drive shaft flange bolts Rotate tires Road test vehicle Inspect drive belts	
	Inspection #1 ¹ Replace engine oil and oil filter Re- Torque drive shaft flange bolts Rotate tires Visually inspect brake pads/discs Road test vehicle Inspection #1 ¹ Replace engine oil and oil filter Measure brake pad thickness and rotor runout Replace air conditioner filter Replace brake fluid Replace engine air filter Replace timing belt Re- Torque drive shaft flange bolts Rotate tires Road test vehicle	
	Inspection #1 ¹ Replace engine oil and oil filter Re- Torque drive shaft flange bdlts Rotate tires Visually inspect brake pads/discs Road test vehicle Inspection #1 ¹ Replace engine oil and oil filter Measure brake pad thickness and rotor runout Replace air conditioner filter Replace brake fluid Replace timing belt Re- Torque drive shaft flange bolts Road test vehicle Inspect drive belts Inspection #1, #2, #3	
	Inspection #1 ¹ Replace engine oil and oil filter Re- Torque drive shaft flange bdlts Rotate tires Visually inspect brake pads/discs Road test vehicle Inspection #1 ¹ Replace engine oil and oil filter Measure brake pad thickness and rotor runout Replace air conditioner filter Replace brake fluid Replace engine air filter Replace timing belt Re- Torque drive shaft flange bolts Rotate tires Road test vehicle Inspect drive belts Inspection #1, #2, #3 Replace engine oil and oil filter	
	Inspection #1 ¹ Replace engine oil and oil filter Re- Torque drive shaft flange bolts Rotate tires Visually inspect brake pads/discs Road test vehicle Inspection #1 ¹ Replace engine oil and oil filter Measure brake pad thickness and rotor runout Replace air conditioner filter Replace brake fluid Replace engine air filter Replace timing belt Re- Torque drive shaft flange bolts Road test vehicle Inspect drive belts Inspection #1, #2, #3 Replace engine oil and oil filter Re- Torque drive shaft flange bolts	
	Inspection #1 ¹ Replace engine oil and oil filter Re- Torque drive shaft flange bolts Rotate tires Visually inspect brake pads/discs Road test vehicle Inspection #1 ¹ Replace engine oil and oil filter Measure brake pad thickness and rotor runout Replace air conditioner filter Replace brake fluid Replace engine air filter Replace timing belt Re- Torque drive shaft flange bolts Rotate tires Road test vehicle Inspection #1, #2, #3 Replace engine oil and oil filter Re- Torque drive shaft flange bolts Rotate tires Replace engine oil and oil filter Replace trace base Road test vehicle Replace drive belts Rotate tires Road test vehicle Replace engine oil and oil filter Replace trace base Rotate tires Replace engine oil and oil filter Replace trace base Rotate tires Replace engine oil and oil filter Replace trace base Rotate tires Replace trace base Rotate tires Rotate tires	
90000	Inspection #1 ¹ Replace engine oil and oil filter Re- Torque drive shaft flange bolts Rotate tires Visually inspect brake pads/discs Road test vehicle Inspection #1 ¹ Replace engine oil and oil filter Measure brake pad thickness and rotor runout Replace air conditioner filter Replace brake fluid Replace engine air filter Replace timing belt Re- Torque drive shaft flange bolts Road test vehicle Inspect drive belts Inspection #1, #2, #3 Replace engine oil and oil filter Re- Torque drive shaft flange bolts	
90000	Inspection #1 ¹ Replace engine oil and oil filter Re- Torque drive shaft flange bolts Rotate tires Visually inspect brake pads/discs Road test vehicle Inspection #1 ¹ Replace engine oil and oil filter Measure brake pad thickness and rotor runout Replace air conditioner filter Replace brake fluid Replace engine air filter Replace timing belt Re- Torque drive shaft flange bolts Rotate tires Road test vehicle Inspection #1, #2, #3 Replace engine oil and oil filter Re- Torque drive shaft flange bolts Rotate tires Replace engine oil and oil filter Replace trace base Road test vehicle Replace drive belts Rotate tires Road test vehicle Replace engine oil and oil filter Replace trace base Rotate tires Replace engine oil and oil filter Replace trace base Rotate tires Replace engine oil and oil filter Replace trace base Rotate tires Replace engine oil and oil filter Replace trace base Rotate tires	
90000	Inspection #1 ¹ Replace engine oil and oil filter Re- Torque drive shaft flange bdlts Rotate tires Visually inspect brake pads/discs Road test vehicle Inspection #1 ¹ Replace engine oil and oil filter Measure brake pad thickness and rotor runout Replace air conditioner filter Replace brake fluid Replace engine air filter Replace timing belt Re- Torque drive shaft flange bolts Rotate tires Road test vehicle Inspection #1, #2, #3 Replace engine oil and oil filter Replace drive shaft flange bdlts Rotate tires Rotate tires Rotate tires Rotate tires Visually inspect brake pads/discs	
90000	Inspection #1 ¹ Replace engine oil and oil filter Re- Torque drive shaft flange bdlts Rotate tires Visually inspect brake pads/discs Road test vehicle Inspection #1 ¹ Replace engine oil and oil filter Measure brake pad thickness and rotor runout Replace air conditioner filter Replace brake fluid Replace engine air filter Replace engine air filter Replace timing belt Re- Torque drive shaft flange bolts Rotate tires Road test vehicle Inspection #1, #3 Replace engine oil and oil filter Replace times Rotate tires Rotate tires Replace engine oil and oil filter Replace trive belts Inspection #1, #2, #3 Replace engine oil and oil filter Reverses Rotate tires Visually inspect brake pads/discs Road test vehicle	
90000	Inspection #1 ¹ Replace engine oil and oil filter Re- Torque drive shaft flange bdlts Rotate tires Visually inspect brake pads/discs Road test vehicle Inspection #1 ¹ Replace engine oil and oil filter Measure brake pad thickness and rotor runout Replace air conditioner filter Replace brake fluid Replace engine air filter Replace engine air filter Replace timing belt Re- Torque drive shaft flange bolts Rotate tires Road test vehicle Inspection #1, #2, #3 Replace engine oil and oil filter Replace brake fluid Replace engine oil and oil filter Rotate tires Road test vehicle Inspection #1, #2, #3 Replace engine oil and oil filter Re- Torque drive shaft flange bdlts Rotate tires Visually inspect brake pads/discs Road test vehicle Inspection #1 ¹	
90000	Inspection #1 ¹ Replace engine oil and oil filter Re- Torque drive shaft flange bolts Rotate tires Visually inspect brake pads/discs Road test vehicle Inspection #1 ¹ Replace engine oil and oil filter Measure brake pad thickness and rotor runout Replace air conditioner filter Replace brake fluid Replace engine air filter Replace tires Road test vehicle Inspection #1, #2, #3 Replace engine oil and oil filter Replace tires Road test vehicle Inspection #1, #2, #3 Replace engine oil and oil filter Re-Torque drive shaft flange bolts Rotate tires Visually inspect brake pads/discs Road test vehicle Inspection #1 ¹ Replace engine oil and oil filter Re-Torque drive shaft flange bolts Rotate tires Visually inspect brake pads/discs Road test vehicle Inspection #1 ¹ Replace engine oil and oil filter	
90000	Inspection #1 ¹ Replace engine oil and oil filter Re- Torque drive shaft flange bolts Rotate tires Visually inspect brake pads/discs Road test vehicle Inspection #1 ¹ Replace engine oil and oil filter Measure brake pad thickness and rotor runout Replace air conditioner filter Replace engine air filter Replace engine air filter Replace timing belt Re- Torque drive shaft flange bolts Road test vehicle Inspection #1, #2, #3 Replace engine oil and oil filter Re- Torque drive shaft flange bolts Rotate tires Visually inspect brake pads/discs Road test vehicle Inspection #1 ¹ Replace engine oil and oil filter Re- Torque drive shaft flange bolts Rotate tires Visually inspect brake pads/discs Road test vehicle Inspection #1 ¹ Replace engine oil and oil filter Re- Torque drive shaft flange bolts Rotate tires Visually inspect brake pads/discs Road test vehicle Inspection #1 ¹	
90000	Inspection #1 ¹ Replace engine oil and oil filter Re- Torque drive shaft flange bolts Rotate tires Visually inspect brake pads/discs Road test vehicle Inspection #1 ¹ Replace engine oil and oil filter Measure brake pad thickness and rotor runout Replace air conditioner filter Replace engine air filter Replace timing belt Re- Torque drive shaft flange bolts Rotate tires Road test vehicle Inspection #1, #2, #3 Replace engine oil and oil filter Re- Torque drive shaft flange bolts Rotate tires Visually inspect brake pads/discs Road test vehicle Inspection #1, #2, #3 Replace engine oil and oil filter Re- Torque drive shaft flange bolts Rotate tires Visually inspect brake pads/discs Road test vehicle Inspection #1 ¹ Replace engine oil and oil filter Re- Torque drive shaft flange bolts Rotate tires Visually inspect brake pads/discs Road test vehicle Inspection #1 ¹ Replace engine oil and oil filter Replace engine coolant Replace air conditioner filter	
90000	Inspection #1 ¹ Replace engine oil and oil filter Re- Torque drive shaft flange bolts Rotate tires Visually inspect brake pads/discs Road test vehicle Inspection #1 ¹ Replace engine oil and oil filter Measure brake pad thickness and rotor runout Replace air conditioner filter Replace engine air filter Replace engine air filter Replace timing belt Re- Torque drive shaft flange bolts Rotate tires Road test vehicle Inspection #1, #2, #3 Replace engine oil and oil filter Replace times Road test vehicle Inspection #1, #2, #3 Replace engine oil and oil filter Replace engine oil and	
90000	Inspection #1 ¹ Replace engine oil and oil filter Re- Torque drive shaft flange bolts Rotate tires Visually inspect brake pads/discs Road test vehicle Inspection #1 ¹ Replace engine oil and oil filter Measure brake pad thickness and rotor runout Replace air conditioner filter Replace engine air filter Replace engine oil and oil filter Replace timing belt Re- Torque drive shaft flange bolts Road test vehicle Inspection #1, #2, #3 Replace engine oil and oil filter Re- Torque drive shaft flange bolts Rotate tires Visually inspect brake pads/discs Road test vehicle Inspection #1 ¹ Replace engine oil and oil filter Re- Torque drive shaft flange bolts Rotate tires Visually inspect brake pads/discs Road test vehicle Inspection #1 ¹ Replace engine oil and oil filter Re- Torque drive shaft flange bolts Rotate tires Visually inspect brake pads/discs Road test vehicle Inspection #1 ¹ Replace engine oil and oil filter Replace engine coolant Replace engine oil and oil filter Replace air conditioner filter Replace air conditioner filter	
90000	Inspection #1 ¹ Replace engine oil and oil filter Re- Torque drive shaft flange bolts Rotate tires Visually inspect brake pads/discs Road test vehicle Inspection #1 ¹ Replace engine oil and oil filter Measure brake pad thickness and rotor runout Replace air conditioner filter Replace engine air filter Replace engine delts Rotate tires Road test vehicle Inspection #1, #2, #3 Replace engine oil and oil filter Replace engine oil and oil filter Re- Torque drive shaft flange bolts Rotate tires Visually inspect brake pads/discs Road test vehicle Inspection #1, #2, #3 Replace engine oil and oil filter Re- Torque drive shaft flange bolts Rotate tires Visually inspect brake pads/discs Road test vehicle Inspection #1 ¹ Replace engine oil and oil filter Re- Torque drive shaft flange bolts Rotate tires Visually inspect brake pads/discs Road test vehicle Inspection #1 ¹ Replace engine oil and oil filter Replace engine colant Replace drive shaft flange bolts Rotate tires Visually inspect brake pads/discs	
90000	Inspection #1 ¹ Replace engine oil and oil filter Re- Torque drive shaft flange bdlts Rotate tires Visually inspect brake pads/discs Road test vehicle Inspection #1 ¹ Replace engine oil and oil filter Measure brake pad thickness and rotor runout Replace air conditioner filter Replace engine air filter Replace engine air filter Replace timing belt Re- Torque drive shaft flange bolts Road test vehicle Inspect drive belts Inspection #1, #2, #3 Replace engine oil and oil filter Re- Torque drive shaft flange bdlts Rotate tires Visually inspect brake pads/discs Road test vehicle Inspection #1 ¹ Replace engine oil and oil filter Replace engine toolant Replace engine coolant Replace air conditioner filter Re- Torque drive shaft flange bdlts Rotate tires Visually inspect brake pads/discs Road test vehicle Visually inspect brake pads/discs Road test vehicle	
90000	Inspection #1 ¹ Replace engine oil and oil filter Re- Torque drive shaft flange bolts Rotate tires Visually inspect brake pads/discs Road test vehicle Inspection #1 ¹ Replace engine oil and oil filter Measure brake pad thickness and rotor runout Replace air conditioner filter Replace engine air filter Replace engine delts Rotate tires Road test vehicle Inspection #1, #2, #3 Replace engine oil and oil filter Replace engine oil and oil filter Re- Torque drive shaft flange bolts Rotate tires Visually inspect brake pads/discs Road test vehicle Inspection #1, #2, #3 Replace engine oil and oil filter Re- Torque drive shaft flange bolts Rotate tires Visually inspect brake pads/discs Road test vehicle Inspection #1 ¹ Replace engine oil and oil filter Re- Torque drive shaft flange bolts Rotate tires Visually inspect brake pads/discs Road test vehicle Inspection #1 ¹ Replace engine oil and oil filter Replace engine colant Replace drive shaft flange bolts Rotate tires Visually inspect brake pads/discs	
90000	Inspection #1 ¹ Replace engine oil and oil filter Re- Torque drive shaft flange bdlts Rotate tires Visually inspect brake pads/discs Road test vehicle Inspection #1 ¹ Replace engine oil and oil filter Measure brake pad thickness and rotor runout Replace air conditioner filter Replace engine air filter Replace engine air filter Replace timing belt Re- Torque drive shaft flange bolts Road test vehicle Inspect drive belts Inspection #1, #2, #3 Replace engine oil and oil filter Re- Torque drive shaft flange bdlts Rotate tires Visually inspect brake pads/discs Road test vehicle Inspection #1 ¹ Replace engine oil and oil filter Replace engine toolant Replace engine coolant Replace air conditioner filter Re- Torque drive shaft flange bdlts Rotate tires Visually inspect brake pads/discs Road test vehicle Visually inspect brake pads/discs Road test vehicle	

Inspection #2 Body Brake lines and hoses Differential oil

Exhaust pipes and mountings Rack and pinion assembly

Engine Coolant

Inspection #3

Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses Fuel tank cap gasket Transmission Fluid