


Position of Parts in Body <RHD>

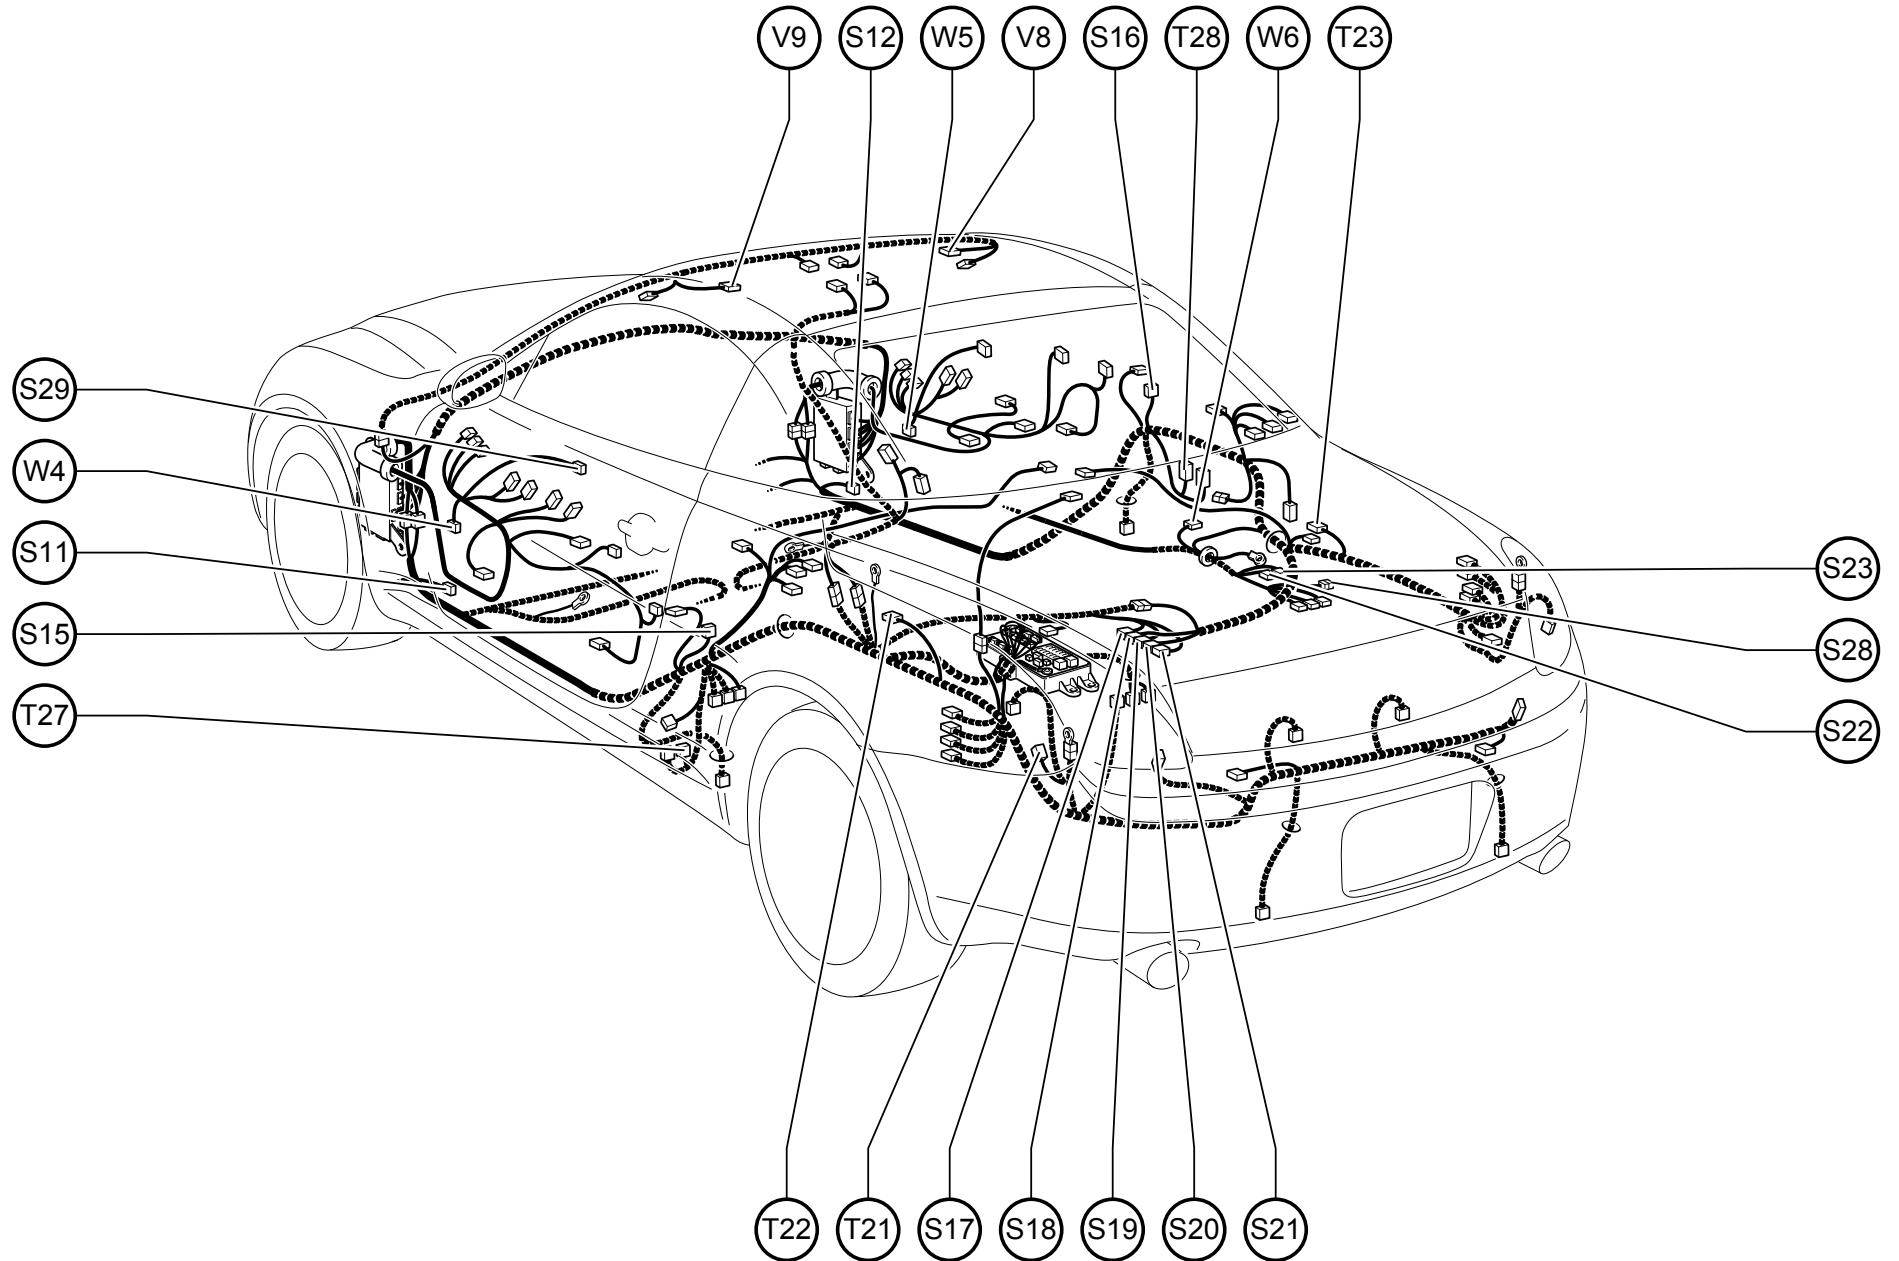

Position of Parts in Body <RHD>

---

- S 11 Scuff Plate Light LH
- S 12 Scuff Plate Light RH
- S 15 Side Airbag Sensor LH
- S 16 Side Airbag Sensor RH
- S 17 Sliding Roof Control ECU
- S 18 Sliding Roof Control ECU
- S 19 Sliding Roof Control ECU
- S 20 Sliding Roof Control ECU
- S 21 Sliding Roof Control ECU
- S 22 Stereo Component Amplifier
- S 23 Stereo Component Amplifier
- S 28 Short Connector (Navigation Amplifier)
- S 29 Seat Position Memory SW (Front Passenger's Side)

- T 21 Theft Warning Siren
- T 22 Tire Pressure Antenna Rear LH
- T 23 Tire Pressure Antenna Rear RH
- T 27 Tension Reducer Solenoid LH
- T 28 Tension Reducer Solenoid RH

- V 8 Vanity Light LH
- V 9 Vanity Light RH

- W 4 Woofer (Front LH)
- W 5 Woofer (Front RH)
- W 6 Woofer (Rear)

Position of Parts in Body <RHD>

