

2008 SC430  
3UZ-FE

Production Date  
- 3/2008  
JTHFN45Y989019301

Health Check

Customize  
Setting

ECU  
Reprogramming

CAN  
Bus Check

TIS Function

Print

Main Menu

### System Selection Menu

Select desired system and then press the arrow button to access the ECU.

- System** Yellow = ECU status unknown.
- System** White = ECU communication OK.
- \*System** White w/Asterisk = ECU not supported or not responding.

All ECUs | Powertrain | Chassis | Body Electrical

Engine	ECT	Cruise Control	ABS/VSC/TRAC	Tire Pressure Monitor
Air Conditioner	Immobiliser	Theft Deterrent	SRS Airbag	Gateway
Body No.2	Body No.3	Body No.4	Body No.5	Driver Door
Passenger Door	Driver Seat	Passenger Seat	Retractable Hardtop	Tilt&Telescopic
Combination Meter	Combination Switch	Steering Pad Switch	AFS	Occupant Detection

Connect cable to OBD port, start Techstream software and then connect the USB end to the PC and tell it to Connect to the vehicle and you'll get this screen.



2008 SC430  
3UZ-FE

Production Date  
- 3/2008  
JTHFN45Y989019301

- Health Check
- Customize Setting
- ECU Reprogramming
- CAN Bus Check
- TIS Function

- Print
- Main Menu

### System Selection Menu

Select desired system and then press the arrow button to access the ECU.


- System** Yellow = ECU status unknown.
- System** White = ECU communication OK.
- \*System** White w/Asterisk = ECU not supported or not responding.

All ECUs | Powertrain

Engine
Air Conditioner
Body No.2
Passenger Door
Combination Meter

SC/TRAC	Tire Pressure Monitor
rbag	Gateway
o.5	Driver Door
able Hardtop	Tilt&Telescopic
	Occupant Detection

Error (S999-99)



**Error**

Error Code: 0x91020324

It's possible the requested function will work if you try again.  
If the problem persists please submit an error report using the F12 key.

This ECU monitors the tire

**Click on Tire Pressure Monitor here**  
**And then on the green arrow button here**  
**And then you may see this screen, if you do press OK anyway (it does it all the time for me but then I get the next screen anyway).**



2008 SC430  
3UZ-FE

Production Date  
- 3/2008  
JTJHFN45Y989019301

Trouble Codes

Data List

Active Test

Monitor

Utility

Dual Data List

Click on the Utility button

[NextTip](#)

Print

Close



*Click here for tips on using the stored data tab to view stored data such as DTCs or snapshots.*



2008 SC430  
3UZ-FE

## Utility Selection Menu

Production Date  
- 3/2008  
JTHFN45Y9

Trouble

Data

Active

Mon

Ut

Dual D

Pr

Close

## ID Registration (TPW-02-001)

Help

Welcome to the Tire ID Registration wizard.

This function will register Tire IDs for the Tire Pressure Warning system.

Note: Registration will fail if the time limit is exceeded for any step.

Warning: Registration will fail if the system is still in the process of initialization.

Press Next to proceed.

 
Next &gt;

Cancel

Signal Check

**This popup pops up. You must enter all of the codes in 5 minutes or you'll have to start all over again so have them ready. Click on the Next button.**

Receiver Assy or the Transmitter.



2008 SC430  
3UZ-FE

### Utility Selection Menu

ID Registration (TPW-02-002)

Help

Signal Check

#### Step 1 of 4

Choose a tire set to be registered.

- Main Set
- 2nd Set

 
Click on the circle (radio button) next to the set you want to program.

Once you do that, the Next button will be enabled and you can click it.

< Back

Next >

Cancel



2008 SC430  
3UZ-FE

### Utility Selection Menu

ID Registration (TPW-02-003)

Help

Signal Check

**Step 2 of 4**

2nd Set


Press Next to begin the registration process.

< Back

Next >


Cancel

I picked the 2<sup>nd</sup> set and you get this screen to remind you to get ready – the clock starts after this. When you're ready, click the Next button.

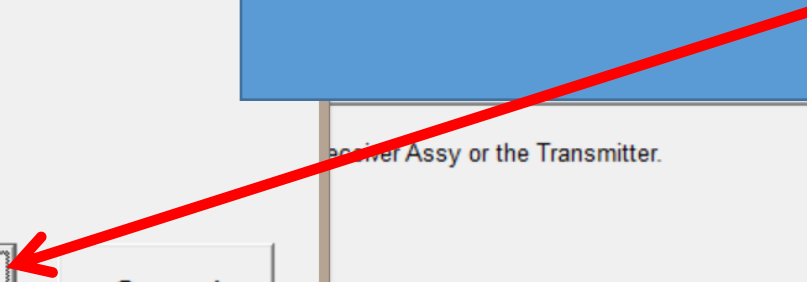

Receiver Assy or the Transmitter.

 Close



2008 SC430  
3UZ-FE

### Utility Selection Menu

ID Registration (TPW-02-004)

Help

Signal Check

## Step 3 of 4

### 2nd Set

After pressing Next, you will have 5 minutes to perform the following operation.

 
- Input each transmitter ID code.
- Press Next to input the next code.
- Continue until all codes are registered.

**They're really serious about the 5 minute warning thing 😊**  
**Click Next when you're ready.**

< Back

Next >

Cancel





2008 SC430  
3UZ-FE

### Utility Selection Menu

ID Registration (TPW-02-005)

Help

#### Step 4 of 4

Input the transmitter ID code.

ID code:

Input

Total Tires: 4

Registered Tires: 0

Time Remaining: 290 sec.

Press Next to input another ID code.

< Back

Next >

Cancel

 
Signal Check

Enter the code here.

It will start counting the Registered Tires here as you successfully enter it and keep track of the time you have left. If the code isn't good, it won't enable the Next button.

Once you've got this code entered, click Next.

Once you're done you'll get a success message (if I recall correctly).



2008 SC430  
3UZ-FE

Production Date  
- 3/2008  
JTHFN45Y989019301

- Trouble Codes
- Data List**
- Active Test
- Monitor
- Utility
- Dual Data List

### Utility Selection Menu

Select desired Utility and then press Next button.

ID Registration	Signal Check

Click Data List  
And then the Green Arrow button here

- Print
- Close



2008 SC430  
3UZ-FE

Production Date  
- 3/2008  
JTHFN45Y989019301

Trouble Codes

**Data List**

Active Test

Monitor

Utility

Dual Data List

Print

Close

Parameter	Value	Unit
Mode Status	Normal	
Main Tire	4	
2nd Tire	4	
Select Switch	2nd	
Vehicle Speed	0	MPH
Registered ID1 Code	2087023	
Registered ID2 Code	B193B51	
Registered ID3 Code	FD8DCD1	
Registered ID4 Code	AA8ECD1	
Registered ID5 Code	0000000	
ID Transmission Status	Finish	
Initialization Switch	OFF	
ID1 Tire Inflation Pressure	36.3	psi(gauge)
ID2 Tire Inflation Pressure	35.2	psi(gauge)
ID3 Tire Inflation Pressure	34.8	psi(gauge)
ID4 Tire Inflation Pressure	36.3	psi(gauge)
ID5 Tire Inflation Pressure	N/A	psi(gauge)
ID1 Temperature in Tire	77	F
ID2 Temperature in Tire	72	F
ID3 Temperature in Tire	73	F
ID4 Temperature in Tire	81	F
ID5 Temperature in Tire	-40	F
ID1 Battery Voltage	Over	
ID2 Battery Voltage	Over	
ID3 Battery Voltage	Over	

Parameter	Value	Unit
ID4 Battery Voltage	Over	
ID5 Battery Voltage	Over	
Select SW Info	With	
Initialization SW Info	With	
ID1 Initial Threshold of Low-pressure	N/A	psi(gauge)
ID2 Initial Threshold of Low-pressure	N/A	psi(gauge)
ID3 Initial Threshold of Low-pressure	N/A	psi(gauge)
ID4 Initial Threshold of Low-pressure	N/A	psi(gauge)
ID5 Initial Threshold of Low-pressure	N/A	psi(gauge)
Number of DTC	4	



And you should see goodness here. The 4 tires show whatever they last reported (you may need to hit the TPMS Reset button under the dash but I don't remember if I had to do that) and switch the glove box switch as well. On other cars like the LS600h it will take a 5<sup>th</sup> sensor for the spare & report on that one too. It's possible you can enter "5" in the original "Total Tires" field on page 9 but I don't always have one so don't have a TPMS sensor in it so I can't say for sure if that will work.

All Data Sort A to Z