



TURN SIGNAL AND HAZARD WARNING LIGHT

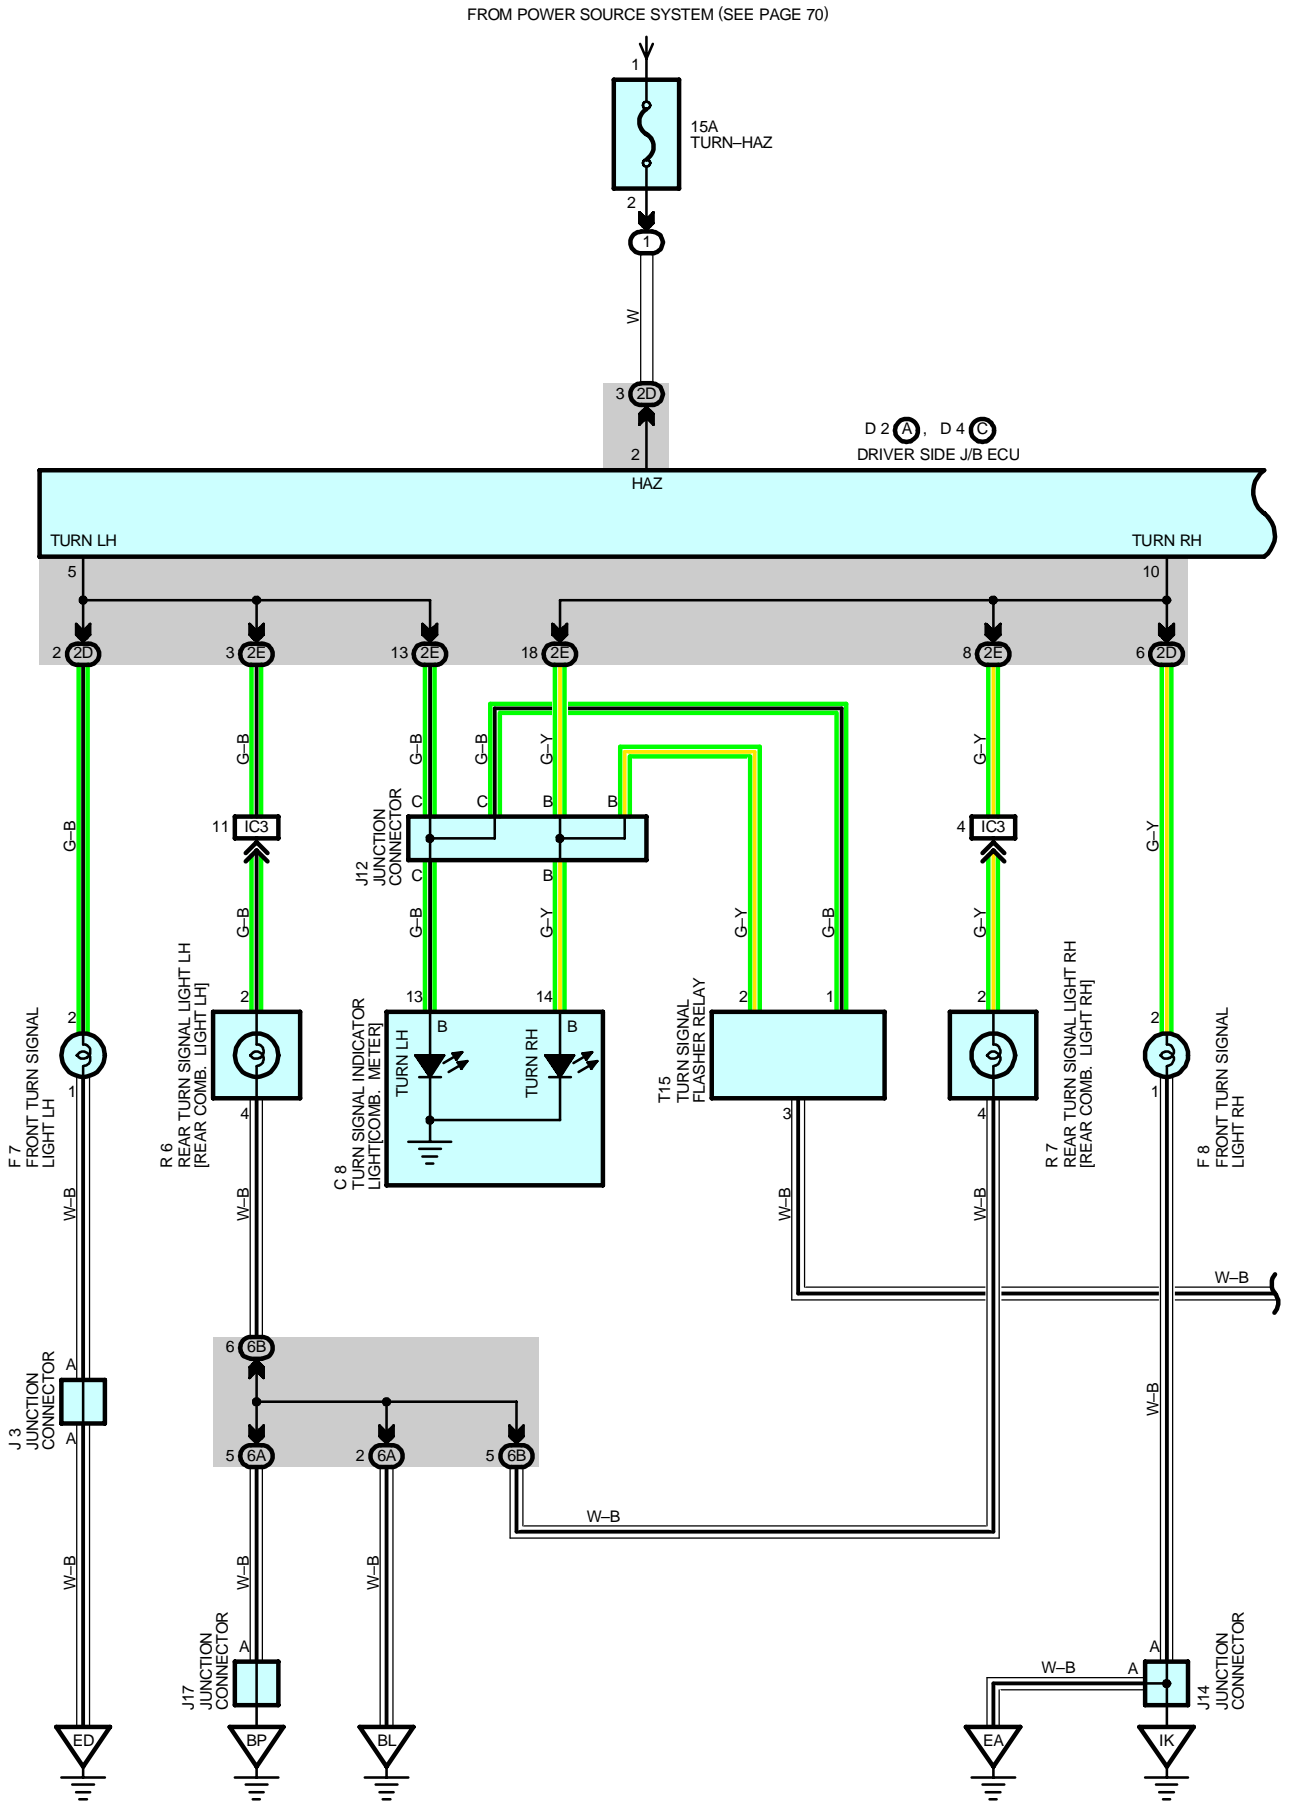

FROM POWER SOURCE SYSTEM (SEE PAGE 70)

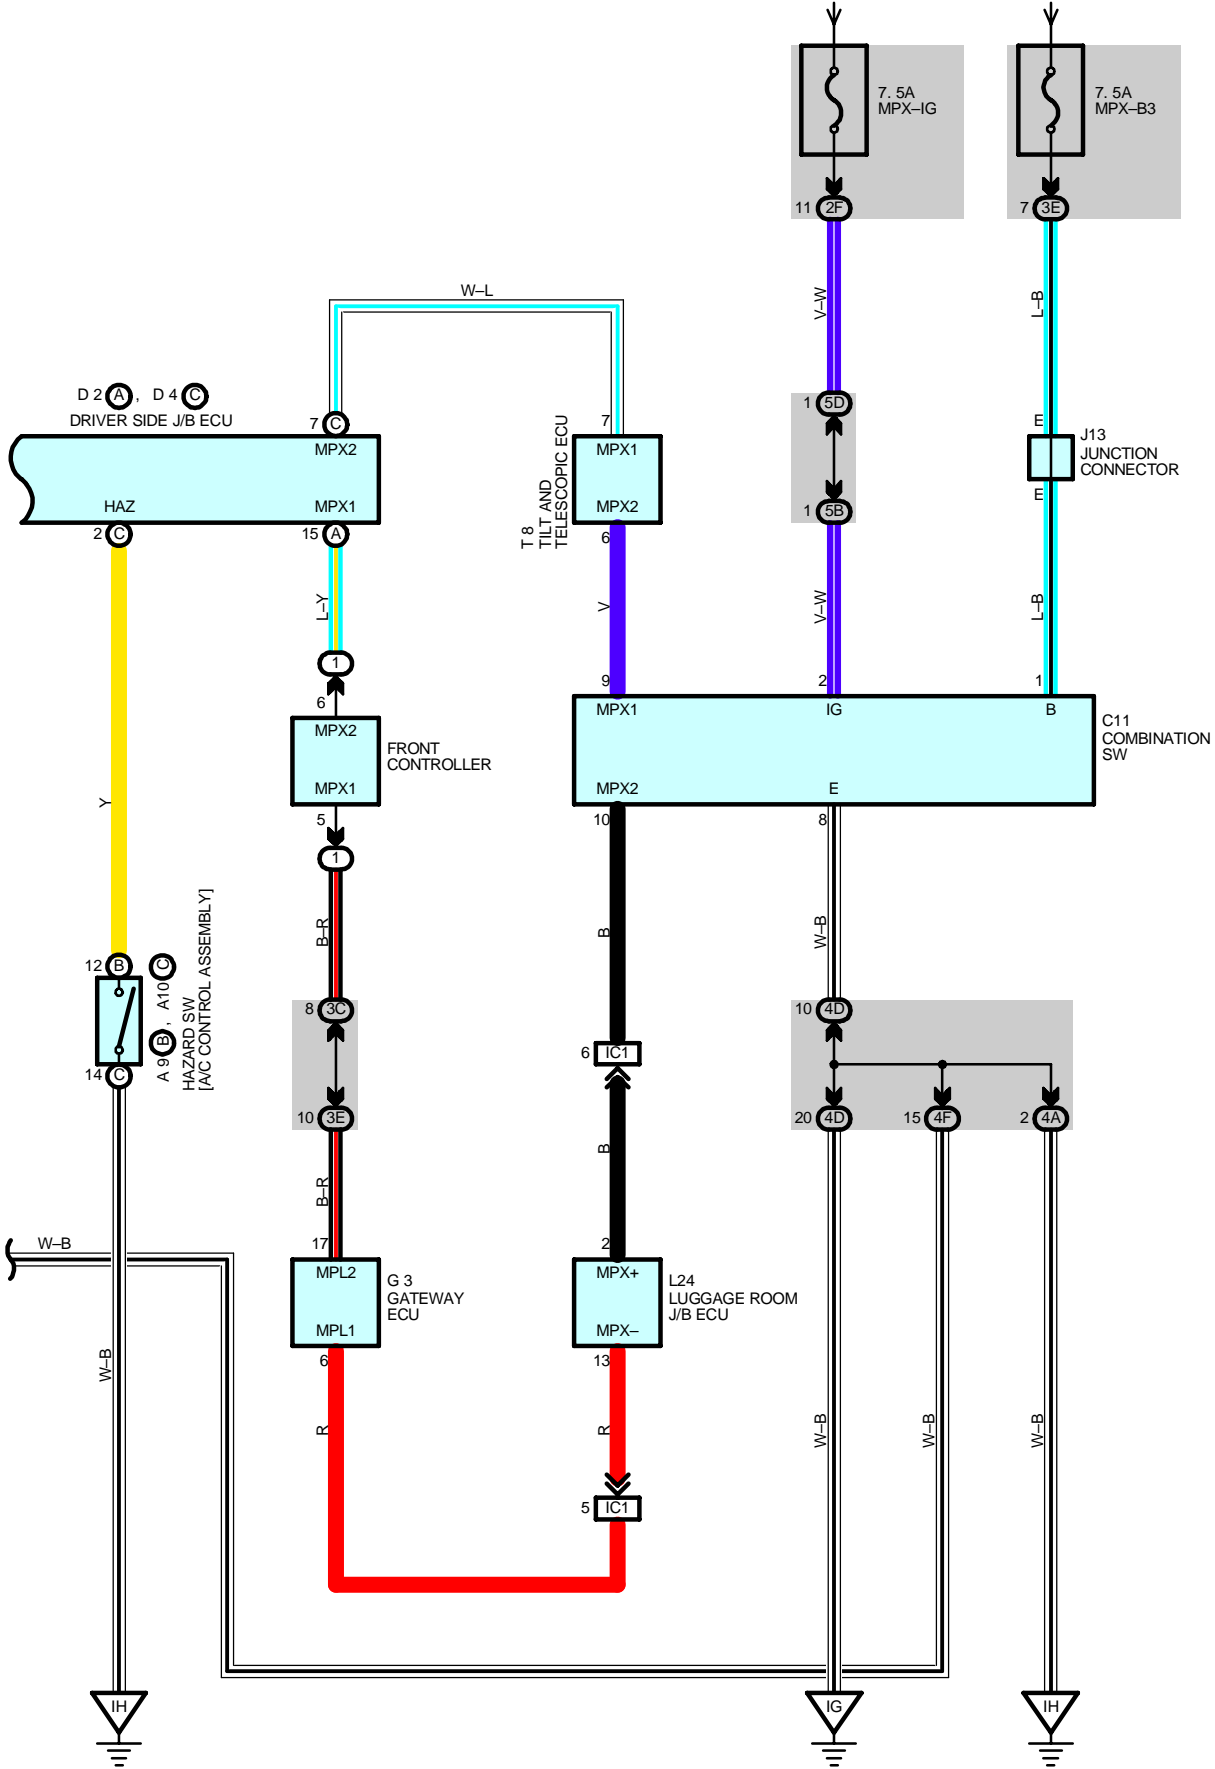

TURN SIGNAL AND HAZARD WARNING LIGHT

SERVICE HINTS

DRIVER SIDE J/B ECU

2-GROUND : Always approx. 12 volts

C11 COMBINATION SW

1-GROUND : Always approx. 12 volts

2-GROUND : Approx. 12 volts with ignition SW at **ON** or **ST** position

8-GROUND : Always continuity

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page	
A9	B	48	F8	45	L24	53
A10	C	48	G3	49	R6	54
	C8	49	J3	46	R7	54
	C11	49	J12	50	T8	51
D2	A	49	J13	50	T15	51
D4	C	49	J14	50		
	F7	45	J17	53		

○ : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
1	24	Engine Room No.1 R/B (Engine Compartment Right)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
2D	28	Engine Room Main Wire and Driver Side J/B (Left Kick Panel)
2E	27	Instrument Panel Wire and Driver Side J/B (Left Kick Panel)
2F		
3C	33	Engine Room Main Wire and Passenger Side J/B (Right Kick Panel)
3E	34	Instrument Panel Wire and Passenger Side J/B (Right Kick Panel)
4A	38	Instrument Panel Wire and Center J/B (Upper Side of the Glove Box)
4D		
4F		
5B	40	Instrument Panel Wire and Instrument Panel J/B (Near the Front Passenger Airbag Assembly)
5D		
6A	42	Floor No.2 Wire and Luggage Room J/B (Luggage Room Left)
6B		

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC1	60	Instrument Panel Wire and Floor No.2 Wire (Left Kick Panel)
IC3		

▽ : GROUND POINTS

Code	See Page	Ground Points Location
EA	58	Right Fender
ED	58	Left Fender
IG	60	LH Side of the Steering Column
IH	60	Under the Steering Column
IK	60	Cowl Side Panel RH
BL	64	Under the Driver's Seat
BP	64	Quarter Panel LH