

The party's voice outputs from the driver's speaker. When the received calls or received voice outputs, the audio from the Audio system or voice guidance from the Navigation system will be muted.

INFORMATION

- *Talk alternately with your party on the phone. If you talk at the same time, the voice may not reach each other. (It is not a malfunction.)*
- *Keep the volume of receiving voice down. Otherwise, echo is coming up. When you talk on the phone, speak clearly towards the microphone.*
- *In the following situations, your voice may not reach the party.*
 - *Driving on unpaved road. (Making a traffic noise.)*
 - *Driving at the high speed.*
 - *The window is open.*
 - *Turning the air-conditioning vents towards the microphone.*
 - *The sound of the air-conditioning fan is loud.*



By pushing the telephone button above, you can receive a call or hang up without taking your hands off the steering wheel.



You can use the microphone above when talking on the phone.



- 3** Indicates the level of reception.
- Too bad** ← → **Excellent**
- The level of reception does not always correspond with the one of your cellular phone.
- 4** "A" is displayed when calling in analogue.
"D" is displayed when calling in digital.

1 Indicates a condition of Bluetooth® connection.

- "Blue" indicates excellent condition of Bluetooth® connection.
- "Yellow" indicates the condition easy to disconnect the Bluetooth®, causing a deterioration in voice.
- Not displayed:** no connection to the Bluetooth®.
- 2** Indicates the receiving area.
- "Rm" is displayed when receiving in Roaming area.
- "Hm" is displayed when receiving in Home area.

INFORMATION

- This system supports the following service.*
- **HFP (Hands Free Profile) Ver. 1.0**
 - **OPP (Object Push Profile) Ver. 1.1**
- If your cellular phone does not support HFP, you cannot enter the Bluetooth® phone, and take OPP service individually.*

Not displayed when the system can get no information from your cellular phone.

An antenna for the Bluetooth® connection is built in the display. The indication of the Bluetooth® connection may turn yellow and the system may not function when you use the Bluetooth® phone in the following conditions and places.

- Your cellular phone is hiding behind the display (behind the seat or in the glove box and console box).
- Your cellular phone touches or covered with metal materials.

Leave the Bluetooth® phone on the place where "Blue" indication is displayed.



Bluetooth is a trademark owned by Bluetooth SIG, Inc.

FCC ID: BAB134000-290
IC ID: 2024B-134290
MADE IN JAPAN

This device complies with Part 15 of the FCC Rules and RSS-210. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.



CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

(a) Enter the Bluetooth® phone

To use a hands-free system, you need to enter your phone in the system. Once you registered it, you can make a hands-free call.

1. Push the "INFO" button to display the "Information Menu" screen.

 


2. Touch the "Telephone" switch to display "Telephone" screen.

You can also push the telephone button to display this screen when the vehicle is stopped.



3. Touch the "Settings" switch to display "Settings" screen.

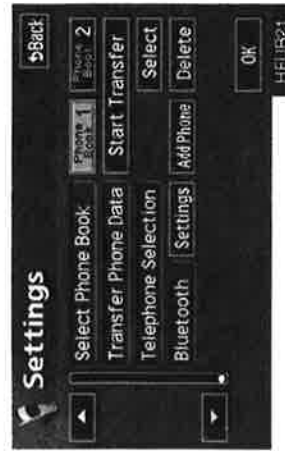

4. Touch the "Add Phone" switch to connect your cellular phone to the system.



5. When this screen is displayed, input the Passkey displayed on the screen into the phone.

For the operation of the phone, see the manual that comes with your cellular phone.

If you want to cancel it, touch "Cancel".



6. When the connection is completed, device name and Bluetooth® Device Address is displayed.

 
You do not need to enter it in case of using the same phone.

(b) Select the Bluetooth® phone

In case of registering a number of Bluetooth® phones, you need to select the usual phone.



1. Touch the "Settings" switch to display "Settings" screen.

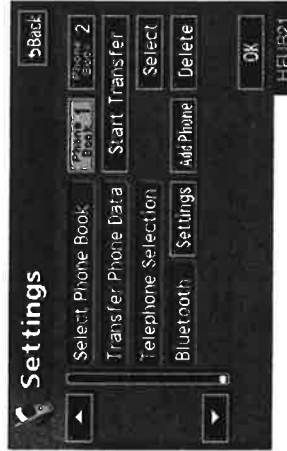


2. Touch the "Select" switch to display "Select Telephone" screen. You can select the Bluetooth® phone from a maximum of 4 numbers. "Empty" is displayed when you do not register the Bluetooth® phone yet.

Bluetooth® mark is displayed when you choose the phone.



Although you can register up to 4 Bluetooth® phones in the system, one Bluetooth® phone can only function.

 • Connect the Bluetooth® phone

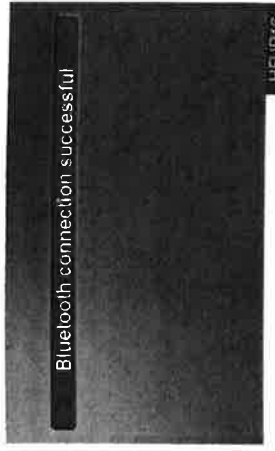

When you turn the ignition key to "ACC" or "ON", the selected Bluetooth® phone will be automatically connected and the connection result is displayed.

Leave the Bluetooth® phone enable to connect.

 
This screen appears when the Bluetooth® phone is first connected after you turn the ignition key to "ACC" or "ON".

- **Reconnect the Bluetooth® phone**
If the Bluetooth® phone is disconnected with a poor reception from the Bluetooth® network when the ignition key is turned to "ACC" or "ON", the system automatically reconnects the Bluetooth® phone. In this case, the connection result is not displayed.

If the Bluetooth® is disconnected on purpose such as you turned your cellular phone OFF, this does not happen. Reconnect it by the following methods.

- Select the Bluetooth® phone again.
- Enter the Bluetooth® phone.

- **Confirm the Bluetooth® information**
You can confirm or change the detail setting of the Bluetooth® phone.

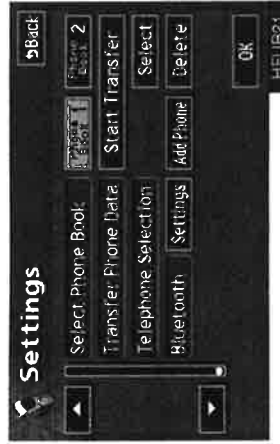

Touch the "Settings" of Bluetooth® to display "Bluetooth* Information" screen.



You can change the Device Name and Passkey.

BD_ADDR is Bluetooth® device address. Do not change the Device Name to the same name as the one of the other Bluetooth® phones. They cannot be identified.

BD_ADDR is different depending on the system. You can confirm the address when it cannot be identified.

*: Bluetooth is a trademark owned by Bluetooth SIG, Inc.

- (i) **Change the Device Name**

You can change the Device Name to the desired one from the name already registered in the system.



Touch the "Change" of Device Name to display the "Device Name List" screen.



Select the desired name and touch "OK".

- (ii) **Change the Passkey**

The Passkey in the system is initially fixed. You can change the Passkey within 4-8 figures.



Touch the "Change" of Passkey to display "Enter Bluetooth* Passkey" screen.



Touch the desired key to input the Passkey.

Each time you touch "◀", an inputted number is deleted.

Touch "Enter".

*: Bluetooth is a trademark owned by Bluetooth SIG, Inc.

(c) Delete the Bluetooth® phone



1. Touch the “Settings” switch to display “Settings” screen.



2. Touch the “Delete” switch to display “Delete Telephone” screen. You can delete the Bluetooth® phone which you registered.



Select the desired phone from the list and touch “OK”.

(d) Call on the Bluetooth® phone

After you enter the Bluetooth® phone, you can call by using hands-free system. This system has 6 methods below by which you call.

(i) By dial

You can call by inputting the telephone number.

This cannot be operated while you are driving.



Touch the desired key to input the telephone number.

Each time you touch “◀”, an inputted number is deleted.

Touch “▶” or push the telephone button.

(ii) By phone book

You can call by phone book data which is transferred from your cellular phone. The system has two phone books. You can register up to 500 numbers in each book.

This cannot be operated while you are driving.



Touch the desired key to input the telephone number.

1. Touch the “Phone Book” switch to display “Phone Book” screen.



2. Select the desired number from the list.



Touch “” or push the telephone button.

(iii) By dialed numbers

You can call by dialed number. The system memorize up to 5 dialed numbers. If it is over than 5, the oldest number is deleted.

This cannot be operated while you are driving.



1. Touch the “” switch to display “Outgoing Calls” screen.



- When you call by phone book, the name (if registered) is displayed.
- When you call the same number continuously, the newest number is only registered.

2. Select the desired number from the list.



Touch “” or push the telephone button.

(iv) By received calls
You can call by received calls. When a call is received, the system memorize up to 5 numbers. If it is over than 5, the oldest number is deleted.

This cannot be operated while you are driving.



1. Touch the “” switch to display.



2. Touch the "Incoming Calls" switch to display "Incoming Calls" screen.



3. Select the desired number from the list.



Touch " " or push the telephone button.

A international phone call may not be made depending on the cellular phone which you have.

 
- When a telephone number registered in phone book is received, the name and the number is displayed.
- Received calls which you did not answer are also memorized in the system and "Abs." is displayed on the left side of the number.
- Unnotified telephone numbers such as a public telephone is not memorized in the system.

(v) By one touch call

You can call by registered telephone number which you selected from a phone book, dialed numbers and received calls. (See page 152 for registering the one touch dial.)



1. Touch the "1-touch Dial" switch to display "1-touch Dial" screen.

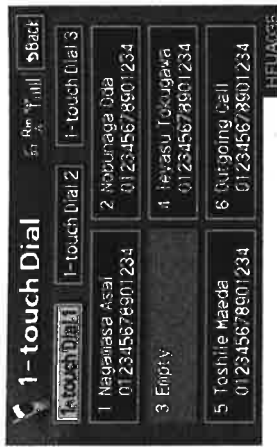

2. Touch the desired number to call. You can change the page by touching "1-touch Dial 2" or "1-touch Dial 3".

When you push the telephone button while you are driving, the screen above appears. Touch the desired name to call. (The telephone number is not displayed.)

(vi) By POI call

You can call by operating a switch when "Call" is displayed on the screen from Navigation system. (See page 53 for details.)

(e) Receive on the Bluetooth® phone



When a call is received, this screen is displayed with a sound. Touch  or push the telephone button to talk on the phone.

To hang up the phone:

Touch  or push the telephone button again.

To refuse to receive the call:

Touch  and hold it.

To adjust the volume of received call:

Touch  or .

 
 
On the international phone call, the party's name may not be displayed correctly depending on the cellular phone which you have.

(f) Talk on the Bluetooth® phone



While you are talking on the phone, this screen is displayed. You can do the operation below on the screen.

To adjust the volume of the party's voice:

Touch  or .

To hang up the phone:

Touch the  switch or push the telephone button.

To mute your voice:

Touch the **"Mute ON"** switch.


To input the Key:

Touch the **"0-9"** switch.



Touch the desired number to input the key.

To hang up the phone:

Touch  or push the telephone button.

This cannot be operated while you are driving.



If the continuous tone signal is registered in a phone book, this screen appears. (If not registered, "Send" and "Exit" is not displayed.)

Confirm the number displayed on the screen and touch **"Send"**. The number to marked sign will be sent.

When you touch **"Exit"**, this function will be finished and normal tone screen appears.

To hang up the phone:

Touch  or push the telephone button.

The continuous tone signal is the marked sign (p or w) and the number following telephone number. (ex. 056133p0123w#1*)

When you call the number registered in phone book and input a code number and the like to operate an answering machine or use a telephone service in bank, you can do this operation.