

# Special Service Tools

**Service Category** General

**Section** Preparation

**Market** USA

Lexus Supports  
ASE Certification 

## Applicability

YEAR(S)	MODEL(S)	ADDITIONAL INFORMATION
2007 – 2009	ES350, GS350, GS430, GS450H, GS460, GX470, IS F, IS250, IS350, LS460, LS600H, LX470, LX570, RX350, RX400H, SC430	

## Introduction

This TSIB contains information regarding Special Service Tools (SSTs) distributed or added to the SST program during the 2007-2009 model year. Essential SSTs are listed by tool number, tool name, and tool description.

### NOTE

Special Service Tools can be ordered through the Lexus SST Program by calling SPX/OTC at 1-800-933-8335.

## Required SSTs

TOOL NUMBER	SPECIAL SERVICE TOOLS (SSTS)
<a href="#">00002-11104-02</a>	Transmission Fill Adapter <ul style="list-style-type: none"> <li>This tool is used in conjunction with the Transmission Fill System (00002-11100-02). The fill adapter will also come with a storage device.</li> </ul>
<a href="#">09387-00090</a>	Bearing Retainer Installer <ul style="list-style-type: none"> <li>Used to assist the technician in servicing the bearing retainer sub-assembly in transaxles.</li> </ul>
<a href="#">09520-10021</a>	Transmission Housing Remover <ul style="list-style-type: none"> <li>Used to assist the technician in servicing the bearing retainer sub-assembly in transaxles. It can also be used to remove drive shafts on some models.</li> </ul>

## Special Service Tools

### Required SSTs (Continued)

TOOL NUMBER	SPECIAL SERVICE TOOLS (SSTS)
<a href="#">09951-00750-01</a>	Replacer 75 <ul style="list-style-type: none"> <li>Used to assist the technician in transaxle and axle disassembly and reassembly.</li> </ul>
<a href="#">09951-00770-01</a>	Replacer 77 <ul style="list-style-type: none"> <li>Used to assist the technician in transaxle and axle disassembly and reassembly.</li> </ul>
<a href="#">09951-00900-01</a>	Replacer 90 <ul style="list-style-type: none"> <li>Used to assist the technician in transaxle and axle disassembly and reassembly.</li> </ul>
<a href="#">09951-01000-01</a>	Replacer 100 <ul style="list-style-type: none"> <li>Used to assist the technician in transaxle and axle disassembly and reassembly.</li> </ul>
<a href="#">09951-01100-01</a>	Replacer 110 <ul style="list-style-type: none"> <li>Used to assist the technician in transaxle and axle disassembly and reassembly.</li> </ul>
<a href="#">00002-00039</a>	39 mm Socket <ul style="list-style-type: none"> <li>This tool is used to assist the technician in removing the front axle nut.</li> </ul>
<a href="#">09564-50010-01</a>	Differential Preload Adapter <ul style="list-style-type: none"> <li>Used to assist the technician in servicing the bearing retainer sub-assembly in transaxles.</li> </ul>
<a href="#">09521-60010-01</a>	Rear Axle Shaft Puller Adapter <ul style="list-style-type: none"> <li>This adapter is used in conjunction with the rear axle shaft puller tool assisting in removal of rear axle shaft.</li> </ul>
<a href="#">09521-25000-01</a>	Rear Axle Shaft Puller Spacer <ul style="list-style-type: none"> <li>This spacer is used in conjunction with the Rear Axle Shaft Puller Adapter to remove a rear axle shaft.</li> </ul>
<a href="#">09737-00013-01</a>	Brake Booster Pushrod Gauge <ul style="list-style-type: none"> <li>This tool is used to assist technicians in properly adjusting the brake booster push rod.</li> </ul>
<a href="#">09213-38010-01</a>	Crankshaft Holding Tool <ul style="list-style-type: none"> <li>This tool is used to assist technicians in removing the crankshaft pulley.</li> </ul>