



**Technical Service  
Information Bulletin**

February 16, 2001

Title:

**D/C CUT FUSE INSTALLATION  
DURING PDS**

Models:

'02 – '06 SC 430

REVISED

PG007-01

PRODUCT GENERAL INFORMATION

**TSIB REVISION NOTICE:**

- August 19, 2005: 2003 – 2006 model years have been added to Applicable Vehicles, and the note in step 2 of Installation Procedure has been updated to include a TSIB reference.

The previous TSIB should be discarded.

**Introduction** To minimize battery discharge during transportation and storage, the D/C CUT fuse has been removed at the assembly plant. During Pre-Delivery Service (PDS), the D/C Cut fuse needs to be reinstalled.

- Applicable Vehicles**
- 2002 – 2006 model year **SC 430** vehicles.

**Warranty Information**

OP CODE	DESCRIPTION	TIME	OFF	T1	T2
N/A	Not Applicable to Warranty	–	–	–	–

**Affected Systems** The D/C CUT fuse provides power to the DOME, MPX–B1, MPX–B2, and MPX–B3 circuits. Removal of the D/C CUT fuse will affect the following systems:

- Ashtray light (unless ignition is “ON”)
- Combination meter illumination (unless ignition is “ON”)
- Door lock control (unless ignition is “ON”)
- Fuel lid opener (unless ignition is “ON”)
- Glove box lights (unless ignition is “ON”)
- Headlights, front parking lights, tail lights, front and rear side marker lights, license plate lights, front fog lights, brake lights (unless ignition is “ON”)
- Horn (unless ignition is “ON”)
- Navigation cover (unless ignition is “ON”)
- Open door warning light (unless ignition is “ON”)
- Outer rear view mirror control (unless ignition is “ON”)
- Retractable hardtop (unless ignition is “ON”)
- Tilt & telescopic steering column (unless ignition is “ON”)
- Trunk lid opener (unless ignition is “ON”)
- “VSC OFF” indicator light (remains ON)
- “VSC” warning light (remains ON)




**Affected Systems**  
(Continued)

- Audio cover
- Garage door opener
- Illuminated entry system (interior lights, foot lights, scuff plate lights, seat belt inner buckle lights, ignition key cylinder light)
- Interior lights
- Key reminder buzzer
- Low Tire Pressure Warning Light
- Luggage compartment lights
- Personal lights
- Theft deterrent system
- Vanity mirror lights
- Vehicle Skid Control (VSC)
- Wireless door lock control

**Installation Procedure**

1. The D/C CUT fuse (15A) is stored in the blank space of the No. 1 Relay Block in the engine compartment.

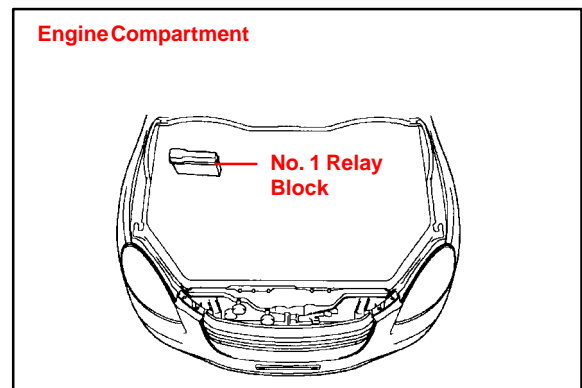

2. During PDS, install the D/C CUT fuse in the No. 1 Relay Block as shown.

**NOTE:**

If the vehicle is stored in the dealership for a long period of time after PDS, disconnect the negative (-) battery terminal to prevent battery discharge. Refer to TSIB No. PG009-02, "Battery Maintenance for In-Stock Vehicles & Pre-Delivery," for battery maintenance information.

